Cisco SCE 8000 CLI Command Reference

Release 4.2.x
August 26, 2014

Cisco Systems, Inc.
www.cisco.com

Cisco has more than 200 offices worldwide.
Addresses, phone numbers, and fax numbers
are listed on the Cisco website at
www.cisco.com/go/offices.

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

Cisco SCE 8000 CLI Command Reference
© 2014 Cisco Systems, Inc. All rights reserved.

About This Guide 1

Introduction 1

Audience 1

Document Revision History 2

Organization 2

Related Publications 2

Conventions 3

Obtaining Documentation and Submitting a Service Request 4

CHAPTER 1 **Command-Line Interface** 1-1

Introduction 1-1

Authorization and Command Mode Levels (Hierarchy) 1-2

CLI Authorization Levels 1-2

CLI Command Mode Hierarchy 1-3

Prompt Indications 1-6

Navigating Between Authorization Levels and Command Modes 1-7

The do Command: Executing Commands Without Exiting 1-9

CLI Help Features 1-9

Partial Help 1-9

Argument Help 1-10

Navigational and Shortcut Features 1-12

Command History 1-12

Keyboard Shortcuts 1-12

Auto-Completion 1-13

FTP User Name and Password 1-14

Managing Command Output 1-15

Scrolling the Screen Display 1-15

Filtering Command Output 1-15

Redirecting Command Output to a File 1-16

Creating a CLI Script 1-17

CHAPTER 2 **CLI Command Reference** 2-1

Introduction 2-1

? 2-2
aaa accounting commands 2-3
aaa authentication attempts 2-5
aaa authentication commands default 2-6
aaa authentication enable default 2-8
aaa authentication login default 2-10
accelerate-packet-drops 2-12
access-class 2-14
access-list 2-16
active-port 2-18
application slot replace force completion 2-19
asymmetric-l2-support 2-20
attack-detector 2-22
attack-detector default 2-23
attack-detector number 2-25
attack-detector tcp-port-list | udp-port-list 2-28
attack-filter 2-30
attack-filter dont-filter | force-filter 2-32
attack-filter subscriber-notification ports 2-35
auto-fail-over 2-36
auto-negotiate 2-37
bandwidth 2-39
banner 2-40
blink 2-41
boot system 2-42
bursty-traffic-convergence 2-44
calendar set 2-46
cd 2-48
cdp enable 2-49
cdp holdtime 2-51
cdp mode 2-53
cdp run 2-55
cdp timer 2-57
clear arp-cache 2-59
clear cdp counters 2-60

clear cdp table 2-61
clear diameter counters 2-62
clear diameter Gx counters 2-63
clear diameter Gy counters 2-64
clear interface linecard counters 2-65
clear interface linecard flow-filter 2-66
clear interface linecard mac-resolver arp-cache 2-67
clear interface linecard subscriber anonymous all 2-68
clear interface linecard subscriber db counters 2-69
clear interface linecard TpReportCounters 2-70
clear interface linecard traffic-counter 2-71
clear interface linecard vas-traffic-forwarding vas counters health-check 2-72
clear interface linecard vpn 2-73
clear interface range 2-74
clear logger 2-76
clear management-agent notifications counters 2-78
clear rdr-formatter 2-79
clear scmp name counters 2-80
clock read-calendar 2-81
clock set 2-82
clock summertime 2-83
clock timezone 2-87
clock update-calendar 2-88
configure 2-89
connection-mode 2-90
copy 2-92
copy ftp:// 2-93
copy-passive 2-95
copy running-config-application startup-config-application 2-97
copy running-config-party-db startup-config-party-db 2-99
copy running-config startup-config 2-101
copy source-file ftp:// 2-102
copy source-file startup-config 2-103
copy startup-config destination-file 2-104
copy startup-config-party-db backupfile 2-105

cpa-client destination 2-107
cpa-client retries 2-108
debug const-db name CcConstDb.Party.maxNum128bitIps 2-109
default subscriber template all 2-110
delete 2-111
diameter 2-112
diameter Gx 2-113
diameter Gx failure-grace-time 2-114
diameter Gx login-rate 2-115
diameter Gx MIP Support 2-117
diameter Gx PCRF-connection-failure-grace-time 2-118
diameter Gx peer-proxyagent 2-119
diameter Gx send-attributes 2-120
diameter Gx tx-timer 2-121
diameter Gx virtual-gi multi-mapping 2-122
diameter gx virtual-gi vlan-id 2-124
diameter Gy peer-proxyagent 2-126
diameter Gy subscriber-attribute-mapping 2-127
diameter Gy tx-timer 2-128
diameter host 2-129
diameter origin-realm 2-130
diameter peer 2-131
diameter port 2-133
diameter realm 2-134
diameter realm forwarding-mode 2-136
diameter tx-timer 2-138
dir 2-139
disable 2-140
do 2-142
duplex 2-143
enable 2-144
enable password 2-146
end 2-148
erase startup-config-all 2-150
exit 2-151

external-bypass 2-153
failure-recovery operation-mode 2-154
flow-capture 2-155
flow-capture controllers 2-161
flow-filter set-ff rule 2-163
flow-filter set-ff rule ipv6 2-164
flow-filter set-table rule ipv6 any-ip-prefix-port1-port2-tos protocol 2-165
2-166
force failure-condition 2-167
help 2-168
history 2-170
history size 2-171
hostname 2-172
hw-bypass mode 2-173
interface gigabitethernet 2-175
interface linecard 2-178
interface mng 2-179
interface range gigabitethernet (SCE 8000 GBE only) 2-181
interface range tengigabitethernet 2-183
interface tengigabitethernet 2-185
ip access-class 2-187
ip address 2-188
ip advertising 2-190
ip default-gateway 2-192
ip domain-lookup 2-193
ip domain-name 2-195
ip ftp password 2-197
ip ftp username 2-198
ip host 2-199
ip name-server 2-200
ip radius-client retry limit 2-201
ip route 2-202
ip rpc-adapter 2-204
ip rpc-adapter port 2-205
ip rpc-adapter security-level 2-206

ip ssh 2-207
ip ssh access-class 2-209
ip ssh key 2-211
ip ssh mng-vlan 2-213
ip-tunnel 6to4 2-215
ip-tunnel DS-Lite 2-217
ip-tunnel DS-Lite Extention-Header-Support 2-219
ip-tunnel DS-Lite Extend-IANA 2-221
ip-tunnel gre skip 2-223
ip-tunnel dscp-marking-skip 2-225
ip-tunnel ipinip skip 2-227
ip-tunnel l2tp skip 2-229
Ipv6-IANA 2-231
l2tp identify-by 2-233
line vty 2-235
link failure-reflection 2-236
link mode 2-238
link port-enhanced-recovery 2-239
logger add-user-message 2-240
logger device 2-241
logger device user-file-log max-file-size 2-242
logger get support-file 2-243
logger get user-log file-name 2-244
logging facility 2-245
logging host 2-247
logging on 2-249
logging message-counter 2-251
logging rate-limit 2-252
logging trap 2-254
logout 2-256
mac-resolver arp 2-257
management-agent sce-api ignore-cascade-violation 2-259
management-agent sce-api logging 2-261
management-agent sce-api timeout 2-262
management-agent system 2-263

mkdir 2-265
mng-vlan 2-266
more 2-268
more running-config-all 2-270
more running-config-application 2-274
more running-config-party-db 2-276
more startup-config-all 2-278
more startup-config-application 2-282
more startup-config-party-db 2-284
more user-log 2-286
mpls 2-287
no subscriber 2-289
no subscriber mappings included-in 2-291
os-fingerprinting 2-292
os-fingerprinting gx-report 2-294
os-fingerprinting NAT-detection-window 2-295
os-fingerprinting os-flush-time 2-297
os-fingerprinting sampling 2-299
os-fingerprinting scan-port 2-300
os-fingerprinting signature-file 2-302
party default-type 2-303
party mapping ip-address name 2-304
party mapping ip-range 2-306
party name 2-308
party name hw-bypass 2-310
party template index 2-312
periodic-records aggregate-by-cpu 2-313
ping 2-315
pir-deviation-percentage 2-316
pqi install file 2-317
pqi rollback file 2-318
pqi uninstall file 2-319
pqi upgrade file 2-320
pwd 2-321
queue 2-322

rdr-formatter category number buffer-size 2-324
rdr-formatter category number name 2-326
rdr-formatter destination 2-328
rdr-formatter destination protocol netflowv9 template data timeout 2-331
rdr-formatter forwarding-mode 2-333
rdr-formatter history-size 2-334
rdr-formatter protocol 2-335
rdr-formatter protocol netflowv9 dscp 2-336
rdr-formatter rdr-mapping 2-337
reload 2-339
reload shutdown 2-340
rename 2-341
rmdir 2-342
salt 2-343
sce-url-database add-entry 2-344
sce-url-database import 2-346
sce-url-database protection 2-349
sce-url-database remove-a**ll** 2-352
scmp 2-353
scmp keepalive-interval 2-355
scmp loss-of-sync-timeout 2-356
scmp name 2-357
scmp reconnect-interval 2-359
scmp subscriber force-single-sce 2-360
scmp subscriber id append-to-guid 2-361
scmp subscriber send-session-start 2-363
script capture 2-364
script print 2-365
script run 2-366
script stop 2-368
service-bandwidth-prioritization-mode 2-369
service password-encryption 2-370
service rdr-formatter 2-372
service telnetd 2-373
service timestamps 2-374

show access-lists 2-376
show applications slot lookup Double-Wildcard 2-377
show applications slot tunable 2-378
show blink 2-380
show calendar 2-381
show cdp 2-382
show cdp entry 2-383
show cdp neighbors 2-386
show cdp traffic 2-389
show clock 2-391
show diameter 2-392
show diameter forwarding-mode 2-394
show diameter Gx 2-395
show diameter Gx send-attributes 2-397
show diameter Gx MIP-support 2-398
show diameter gx virtual-gi 2-399
show diameter Gx virtual-gi multi-mapping 2-401
show diameter Gx login-rate 2-402
show diameter Gy 2-404
show diameter peer 2-406
show diameter peer-table 2-407
show diameter realm 2-408
show diameter routing table 2-409
show environment all 2-410
show environment cooling 2-412
show environment power 2-414
show environment temperature 2-415
show environment voltage 2-416
show failure-recovery operation-mode 2-417
show hostname 2-418
show hosts 2-419
show hw-bypass mode 2-420
show interface gigabitethernet 2-421
show interface linecard 2-422
show interface linecard accelerate-packet-drops 2-423

show interface linecard application 2-424
show interface linecard asymmetric-l2-support 2-425
show interface linecard asymmetric-routing-topology 2-426
show interface linecard attack-detector 2-428
show interface linecard attack-filter 2-431
show interface linecard cascade connection-status 2-433
show interface linecard cascade peer-sce-information 2-434
show interface linecard cascade redundancy-status 2-435
show interface linecard connection-mode 2-436
show interface linecard counters 2-438
show interface linecard cpa-client 2-440
show interface linecard duplicate-packets-mode 2-442
show interface linecard external-bypass 2-443
show interface linecard flow-capture 2-445
show interface linecard flow-open-mode 2-446
show interface linecard ip-tunnel 2-447
show interface linecard ip-tunnel 6to4 2-448
show interface linecard ip-tunnel DS-Lite 2-449
show interface linecard ip-tunnel ipinip 2-450
show interface linecard ipv6 2-451
show interface linecard l2tp 2-452
show interface linecard link mode 2-453
show interface linecard link-to-port-mapping 2-454
show interface linecard mac-mapping 2-456
show interface linecard mac-resolver arp 2-457
show interface linecard mpls 2-458
show interface linecard periodic-records aggregation 2-459
show interface linecard physically-connected-links 2-460
show interface linecard sce-url-database 2-461
show interface linecard sce-url-database protection 2-462
show interface linecard service-bandwidth-prioritization-mode 2-463
show interface linecard shutdown 2-464
show interface linecard silent 2-465
show interface linecard subscriber 2-466
show interface linecard subscriber aging 2-468

show interface linecard subscriber anonymous 2-469
show interface linecard subscriber anonymous-group 2-470
show interface linecard subscriber crypto-params 2-472
show interface linecard subscriber db counters 2-474
show interface linecard subscriber Gx-pull-request-disable 2-476
show interface linecard subscriber mapping 2-477
show interface linecard subscriber max-subscribers 2-479
show interface linecard subscriber name 2-480
show interface linecard subscriber name breach-state 2-483
show interface linecard subscriber name bucket-state 2-484
show interface linecard subscriber name bucket-state id 2-486
show interface linecard subscriber properties 2-487
show interface linecard subscriber sm-connection-failure 2-488
show interface linecard subscriber templates 2-490
show interface linecard subscriber TP-IP-range 2-491
show interface linecard subscriber mapping included in TP-IP-range 2-493
show interface linecard subscriber virtual-gi-mode 2-495
show interface linecard tos-marking 2-496
show interface linecard TpReportCounters 2-497
show interface linecard traffic-counter 2-499
show interface linecard traffic-rule 2-500
show interface linecard vas-traffic-forwarding 2-501
show interface linecard virtual-links 2-504
show interface linecard vlan 2-506
show interface linecard vpn 2-507
show interface linecard wap 2-509
show interface mng 2-510
show interface tengigabitethernet 2-511
show inventory 2-513
show ip access-class 2-517
show ip advertising 2-518
show ip default-gateway 2-519
show ip filter 2-520
show ip radius-client 2-522
show ip route 2-523

show ip rpc-adapter 2-524
show ip ssh 2-525
show ip ssh mng-vlan 2-526
show line vty 2-527
show log 2-528
show logger device 2-529
show logging 2-531
show logging counters 2-532
show management-agent 2-533
show management-agent sce-api quota 2-534
show mng-vlan 2-535
show mng-vlan service-bind 2-537
show mng-vlan statistics 2-538
show os-fingerprinting config 2-539
show os-fingerprinting subscriber-name 2-541
show os-fingerprinting signature-file 2-542
show party all 2-544
show party name 2-546
show party name hw-bypass 2-548
show party name mappings 2-549
show party mapping 2-551
show party num-parties-with-active-flows 2-553
show party num-parties-with-open-flows 2-554
show pqi file 2-555
show pqi last-installed 2-556
show processes cpu 2-557
show rdr-formatter 2-559
show rdr-formatter buffer-size 2-561
show rdr-formatter connection-status 2-563
show rdr-formatter counters 2-565
show rdr-formatter destination 2-567
show rdr-formatter enabled 2-569
show rdr-formatter forwarding-mode 2-570
show rdr-formatter history-size 2-572
show rdr-formatter protocol netflowv9 dscp 2-573

show rdr-formatter rdr-mapping 2-574
show rdr-formatter statistics 2-576
show running-config 2-578
show running-config-all 2-580
show running-config-application 2-584
show running-config-party-db 2-586
show scmp 2-588
show snmp 2-590
show snmp accelerate-query 2-592
show snmp community 2-593
show snmp contact 2-594
show snmp enabled 2-595
show snmp engine-id 2-596
show snmp group 2-597
show snmp host 2-599
show snmp location 2-600
show snmp mib 2-601
show snmp traps 2-604
show snmp user 2-605
show snmp view 2-607
show sntp 2-608
show startup-config 2-609
show startup-config-all 2-611
show startup-config-application 2-615
show startup-config-party-db 2-617
show system operation-status 2-619
show system-uptime 2-620
show tacacs 2-621
show telnet sessions 2-623
show telnet status 2-624
show timezone 2-625
show users 2-626
show version 2-627
show version all 2-632
show version software 2-635

show vty mng-vlan 2-636
silent 2-637
snmp-server accelerate-query 2-638
snmp-server 2-640
snmp-server community 2-641
snmp-server contact 2-643
snmp-server enable traps 2-644
snmp-server group 2-646
snmp-server host 2-648
snmp-server interface 2-650
snmp-server location 2-651
snmp-server mng-vlan 2-652
snmp-server user 2-654
snmp-server view 2-656
sntp broadcast client 2-658
sntp server 2-659
sntp update-interval 2-660
speed 2-661
subscriber aging 2-662
subscriber anonymous-group export csv-file 2-663
subscriber anonymous-group import csv-file 2-664
subscriber anonymous-group name ip-range 2-665
subscriber capacity-options 2-668
subscriber downstream-split-flow-pull 2-670
subscriber export csv-file 2-671
subscriber Gx-pull-request-disable 2-673
subscriber ip-linger-stats 2-674
subscriber ip-linger-time 2-675
subscriber import csv-file 2-676
subscriber load property-file 2-677
subscriber max-subscribers 2-678
subscriber name property name 2-680
subscriber sm-connection-failure 2-682
subscriber template export csv-file 2-684
subscriber template import csv-file 2-685

subscriber TP-IP-range 2-686
subscriber TP-IP-range export csv-file 2-688
subscriber TP-IP-range import csv-file 2-689
subscriber virtual-gi-mode 2-690
tacacs-server host 2-691
tacacs-server key 2-693
tacacs-server timeout 2-695
telnet 2-696
timeout 2-697
tracert 2-698
traffic-counter 2-699
traffic-rule ip addresses 2-701
traffic-rule ipv6 2-705
traffic-side (SCE 8000 10G platform only) 2-708
tunable value 2-710
unzip 2-712
username 2-713
username privilege 2-715
vas-traffic-forwarding 2-716
vas-traffic-forwarding traffic-link 2-718
vas-traffic-forwarding vas server-id health-check 2-720
vas-traffic-forwarding vas server-id vlan 2-723
vas-traffic-forwarding vas server-group 2-725
vas-traffic-forwarding vas server-group failure 2-727
vas-traffic-forwarding vas server-id 2-729
virtual-links index direction 2-731
vlan 2-735
vty mng-vlan 2-737
wap 2-739

About This Guide

Revised: August 26, 2014

Introduction

This guide contains Command-Line Interface (CLI) commands to maintain the Cisco SCE platform. This guide assumes a basic familiarity with telecommunications equipment and installation procedures.

This reference provides a list of all commands at the admin authorization level or below, with examples of performing typical Cisco SCE platform management functions.

Audience

This guide is intended for the networking or computer technician responsible for configuring and maintaining the Cisco SCE platform on-site. It is also intended for the operator who manages the Cisco SCE platforms. This guide does not describe high-level technical support procedures available to root administrators and Cisco technical support personnel.

Document Revision History

The following Document Revision History records the changes made to this document.

Table 1 Document Revision History

Release and Date	Change Summary
Release 4.2.x August 26, 2014	The following new commands were added: • bursty-traffic-convergence • debug const-db name CcConstDb.Party.maxNum128bitIps • diameter Gx send-attributes • flow-filter set-table rule 1 ipv6 any-ip-prefix-port1-port2-tos protocol • Ipv6-IANA • show applications slot lookup Double-Wildcard • pir-deviation-percentage • show diameter Gx send-attributes

Organization

This guide contains the following sections.

Table 2 Document Organization

Section	Title	Description
Chapter 1	Command-Line Interface	Describes how to use the Cisco SCE platform Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.
Chapter 2	CLI Command Reference	Provides an alphabetical list of the available CLI commands that you can use to configure the Cisco SCE platform.

Related Publications

Use the *Cisco SCE8000 CLI Command Reference* in conjunction with the following Cisco SCE 8000 platform guides:

- *Cisco SCE8000 10GBE Software Configuration Guide*
- *Cisco SCE8000 GBE Software Configuration Guide*
- *Cisco SCE8000 10GBE Installation and Configuration Guide*
- *Cisco SCE8000 GBE Installation and Configuration Guide*

Conventions

This document uses the following conventions.

Table 3 Document Conventions

Convention	Indication
bold font	Commands and keywords and user-entered text appear in **bold** font.
italic font	Document titles, new or emphasized terms, and arguments for which you supply values are in *italic* font.
[ ]	Elements in square brackets are optional.
{x | y | z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[x | y | z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
`courier` font	Terminal sessions and information the system displays appear in `courier` font.
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Note Means *reader take note*.

Tip Means *the following information will help you solve a problem*.

Caution Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.

Timesaver Means *the described action saves time*. You can save time by performing the action described in the paragraph.

Warning **Means *reader be warned*. In this situation, you might perform an action that could result in bodily injury.**

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

Command-Line Interface

Revised: August 26, 2014

Introduction

This chapter describes how to use the Cisco SCE platform Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features. The Command-Line Interface is one of the Cisco SCE platform management interfaces.

The CLI is accessed through a Telnet session or directly via the console port on the front panel of the Cisco SCE platform. When you enter a Telnet session, you enter as the simplest level of user, in the User Exec mode.

the Cisco SCE platform supports up to eleven concurrent CLI sessions; five sessions initiated by Telnet connection, five sessions via SSH connection, and one session on the console port.

- Authorization and Command Mode Levels (Hierarchy), page 1-2
- CLI Help Features, page 1-9
- Navigational and Shortcut Features, page 1-12
- Managing Command Output, page 1-15
- Creating a CLI Script, page 1-17

Authorization and Command Mode Levels (Hierarchy)

When using the CLI there are two important concepts that you must understand to navigate:

- Authorization Level — Indicates the level of commands you can execute. A user with a simple authorization level can only view some information in the system, while a higher level administrator can actually make changes to configuration.

  This manual documents commands up to and including the admin authorization level.

- Command Hierarchy Level — Provides you with a context for initiating commands. Commands are broken down into categories and you can only execute each command within the context of its category. For example, to configure parameters related to the Line Card, you need to be within the Linecard Interface Configuration Mode. (See "CLI Command Mode Hierarchy" section on page 1-3.)

The following sections describe the available Authorization and Command Hierarchy Levels and how to maneuver within them.

The on-screen prompt indicates both your authorization level and your command hierarchy level, as well as the assigned hostname.

Note Throughout the manual, Cisco SCE is used as the sample host name.

CLI Authorization Levels

The Cisco SCE platform has four authorization levels, which represent the user access permissions. When you initially connect to the Cisco SCE platform, you automatically have the most basic authorization level, that is User, which allows minimum functionality.

To monitor the system, you must have Viewer authorization, while to perform administrative functions on the Cisco SCE platform, you must have Admin or Root authorization. A higher level of authorization is accessed by logging in with appropriate password, as described in the procedures below.

In each authorization level, all the commands of the lower authorization layers are available in addition to commands that are authorized only to the current level.

The following CLI commands are related to authorization levels:

- **enable**
- **disable**

Each authorization level has a value (number) corresponding to it. When using the CLI commands, use the values, not the name of the level, as shown in Table 1-1.

Table 1-1 Authorization Levels

Level	Description	Value	Prompt
User	Password required. This level enables basic operational functionality.	0	>
Viewer	Password required. This level enables monitoring functionality. All show commands are available to the Viewer authorization level, with the exception of those that display password information.	5	>

Table 1-1 Authorization Levels (continued)

Level	Description	Value	Prompt
Admin	Password required. For use by general administrators, the Admin authorization level enables configuration and management of the Cisco SCE platform.	10	#
Root	Password required. For use by technical field engineers, the Root authorization level enables configuration of all advanced settings, such as debug and disaster recovery. The Root level is used by technical engineers only.	15	#>

CLI Command Mode Hierarchy

The set of all CLI commands is grouped in hierarchical order, according to the type of the commands. The first two levels in the hierarchy are the User Exec and Privileged Exec modes. These are non-configuration modes in which the set of available commands enables the monitoring of the Cisco SCE platform, file system operations, and other operations that cannot alter the configuration of the Cisco SCE platform.

The next levels in the hierarchy are the Global and Interface configuration modes, which hold a set of commands that control the global configuration of the Cisco SCE platform and its interfaces. Any of the parameters set by the commands in these modes should be saved in the startup configuration, such that in the case of a reboot, the Cisco SCE platform restores the saved configuration.

Table 1-2 shows the available CLI modes.

Table 1-2 CLI Modes

Mode	Description	Level	Prompt indication
User Exec	Initial mode. Also allows monitoring of the system (show commands).	User/Viewer	SCE8000>
Privileged Exec	General administration; file system manipulations and control of basic parameters that do not change the configuration of the Cisco SCE platform.	• Admin • Root	• SCE8000# • SCE8000#>
Global Configuration	Configuration of general system parameters, such as DNS, host name, and time zone.	• Admin • Root	• SCE8000(config)# • SCE8000(config)#>
Management Interface Configuration	Configuration of management interface parameters, such as the Ethernet interface properties and selection of the active port.	• Admin • Root	• SCE8000(config if)# • SCE8000(config if)#>
Interface Configuration	Configuration of specific system interface parameters, for the following interface modes. • linecard interface • specific traffic interface	• Admin • Root	• SCE8000(config if)# • SCE8000(config if)#>

Table 1-2 CLI Modes (continued)

Mode	Description	Level	Prompt indication
Interface Range Configuration	Configuration of a range of traffic interfaces.	• Admin • Root	• `SCE8000(config if range)#` • `SCE8000(config if range)#>`
Line Configuration	Configuration of Telnet lines, such as an access-list.	• Admin • Root	• `SCE8000(config-line)#` • `SCE8000(config-line)#>`

When you login to the system, you have the User authorization level and enter User Exec mode. Changing the authorization level to Viewer does not change the mode. Changing the authorization level to Admin automatically moves you to Privileged Exec mode. To move to any of the configuration modes, you must enter command specific to that mode.

The list of available commands in each mode can be viewed using the question mark '?' at the end of the prompt.

The figure below illustrates the hierarchical structure of the CLI modes, and the CLI commands used to enter and exit a mode.

Figure 1-1 CLI Command Modes

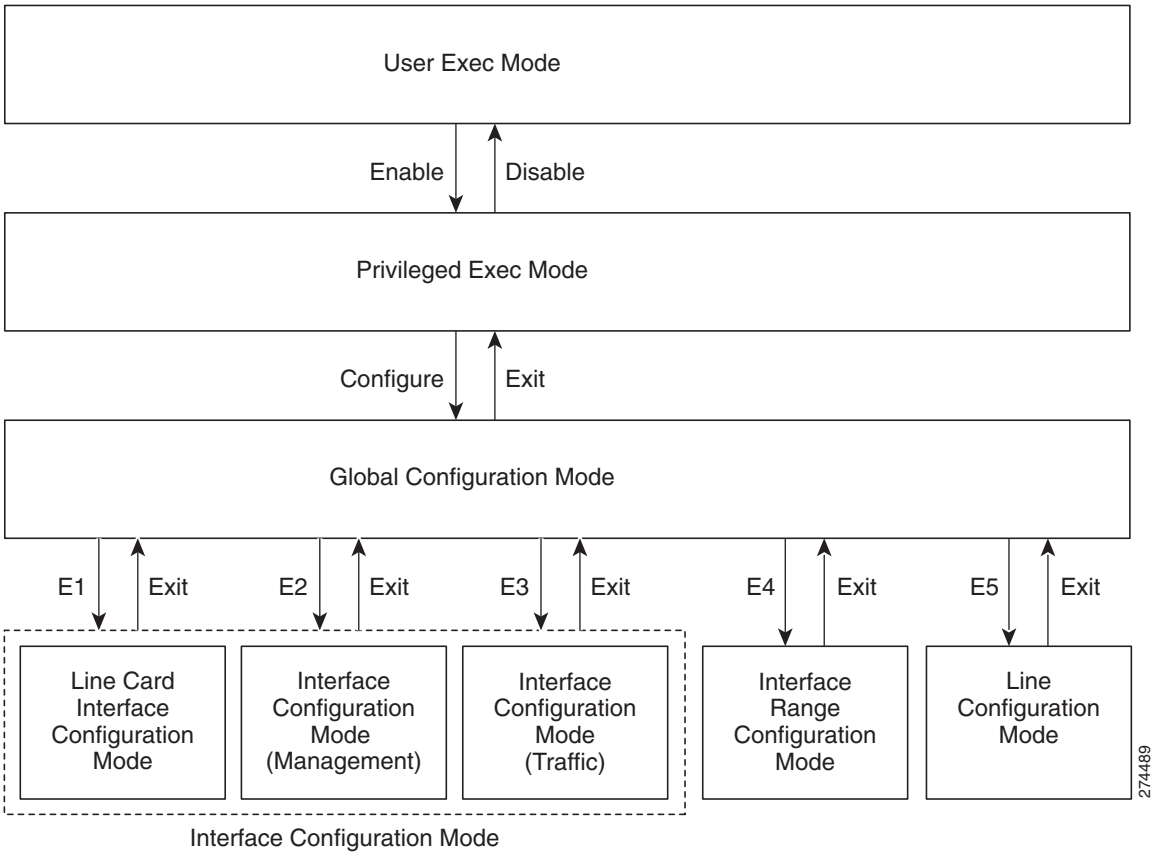

The following commands are used to enter the various specific configuration modes from the global configuration mode:

- E1: **interface Linecard 0**
- E2: **interface Mng** *0/1, 0/2* **OR interface GigabitEthernet** *1/1, 1/2* (management ports, both platforms)
- E3: (traffic ports)
  - Cisco SCE 8000 GBE: **interface GigabitEthernet** *3/0/0-3/0/7*, *3/1/0-3/1/7*
  - Cisco SCE 8000 10GBE: **interface TenGigabitEthernet** *3/0/0*, *3/1/0*, *3/2/0*, or *3/3/0*

- E4:
  - Cisco SCE 8000 GBE: **interface range GigabitEthernet** *3/<bay-range (0 | 1 | 0-1)>/<port-range (any range between 0 and 7)>*
  - Cisco SCE 8000 10GBE: **interface range TenGigabitEthernet** *3/<bay-range (any range between 0 and 3)>/0*
- E5: **line vty 0**

Note Although the system supports up to five concurrent Telnet connections, you cannot configure them separately. This means that any number you enter in the **line vty** command (**0**, **1**, **2**, **3** or **4**) will act as a **0** and configure all five connections together.

Note In order for the auto-completion feature to work, when you move from one interface configuration mode to another, you must first exit the current interface configuration mode (as illustrated in the above figure).

Example:

This example illustrates moving into and out of configuration modes as follows:

1. Enter the global configuration mode.
2. Configure the Cisco SCE platform time zone.
3. Enter MNG (management) interface configuration mode.
4. Configure the speed of the management interface.
5. Exit the MNG configuration mode and enter the global configuration mode.
6. Enter the Linecard interface configuration mode.
7. Define the link mode.
8. Exit the Linecard interface configuration mode and enter the user EXEC mode.

```
SCE8000#configure
SCE8000(config)#clock timezone PST -10
SCE8000(config)#interface mng 0/1
SCE8000(config if)#speed 100
SCE8000(config if)#exit
SCE8000(config)#interface Linecard 0
SCE8000(config if)#link mode forwarding
SCE8000(config if)#end
SCE8000>
```

Prompt Indications

The on-screen prompt indicates your authorization level, your command hierarchy level, and the assigned host name. The structure of the prompt is:

<hostname (mode-indication) level-indication>

Authorization levels are indicated as listed in Table 1-3.

Table 1-3 Prompt Indications: Authorization Levels

This prompt...	Indicates this...
>	User and Viewer levels
#	Admin level
#>	Root level

Command hierarchy levels are indicated as listed in Table 1-4.

Table 1-4 Prompt Indications: Command Hierarchy Levels

This command hierarchy...	Is Indicated as...
User Exec	SCE8000>
Privileged Exec	SCE8000#
Global Configuration	SCE (config)#
Interface Configuration	SCE (config if)#
Interface Range Configuration	SCE (config if range)#
Line Configuration	SCE (config-line)#

Example:

The prompt SCE1(config if)# indicates:

- The name of the Cisco SCE platform is SCE1
- The current CLI mode is Interface configuration mode
- The user has Admin authorization level

Navigating Between Authorization Levels and Command Modes

The authorization levels and command modes function together in one hierarchy. The User and Viewer authorization levels have only a single command mode. When you enter either the Admin or Root authorization level (which function in parallel), you enter the Privileged Exec command mode. From this command mode you can access the other command modes.

- User EXEC authorization level
- Viewer authorization level
- Privileged EXEC command mode (you are now in either Admin or Root authorization level)

- Global Configuration command mode

  From this command mode, the following Interface Command Modes can be accessed:

  - MNG Interface Configuration (management interface)
  - Linecard Interface Configuration
  - TenGigabitEthernet Interface Configuration (Cisco SCE 8000 10GBE traffic interfaces)
  - GigabitEthernet Interface Configuration (Cisco SCE 8000 GBE traffic interfaces)
  - Interface Range Configuration (range of traffic interfaces)
  - Line Configuration

Table 1-5 summarizes how to navigate the CLI command hierarchy.

Table 1-5 CLI Command Navigation Hierarchy

Authorization Level or Command Mode	Use This Command to Access	Use This Command to Exit
User Exec	Not applicable	**logout** or **exit** (Exits the current CLI session)
Viewer	**enable 5**	**disable**
Privileged Exec	**enable 10** or **enable 15** (accesses root level)	**disable**
Global configuration	**configure**	**exit** (Exits to Privileged Exec) **end** (Exits to User Exec)
MNG interface configuration (management)	**interface mng (0/1 | 0/2)** Or **interface gigabitethernet (1/1 | 1/2)**	**exit** (Exits to Global Configuration) **end** (Exits to User Exec)
Linecard interface configuration	**interface linecard 0**	**exit** (Exits to Global Configuration) **end** (Exits to User Exec)
TenGigabitEthernet interface configuration (Cisco SCE 8000 10GBE traffic)	**interface tengigabitethernet** *3/<bay-number (0-3)>/0* Or **interface range tengigabitethernet** *3/<bay-range (any range between 0 and 3)>/0*	**exit** (Exits to Global Configuration) **end** (Exits to User Exec)

Table 1-5 CLI Command Navigation Hierarchy (continued)

Authorization Level or Command Mode	Use This Command to Access	Use This Command to Exit
GigabitEthernet Interface Configuration (Cisco SCE 8000 GBE traffic)	**interface gigabitethernet** *3/<bay-number (0|1)>/<port-number (0-7)>* Or **interface range gigabitethernet** *3/<bay-range (0 | 1 | 0-1)>/<port-range (any range between 0 and 7)>*	**exit** (Exits to Global Configuration) **end** (Exits to User Exec)
Line Configuration	**line vty 0**	**exit** (Exits to Global Configuration) **end** (Exits to User Exec)

The do Command: Executing Commands Without Exiting

When you are in either the global configuration mode or any of the interface configuration modes, it is possible to execute an EXEC mode command (such as a **show** command) or a privileged EXEC (such as **show running-config**) without exiting to the relevant command mode. Use the **do** command for this purpose.

How to execute an exec mode command from a configuration command mode

At the Cisco SCE8000(config)# (or SCE8000(config if)# or SCE8000(config-line)#) prompt, type **do** <*command*> and press **Enter**.

The specified command executes without exiting to the appropriate exec command mode.

The following example shows how to display the running configuration while in interface configuration mode:

```
SCE8000(config if#) do show running-config
```

CLI Help Features

CLI provides context sensitive help. Two types of context sensitive help are supported:

- Partial Help, page 1-9
- Argument Help, page 1-10

Partial Help

To obtain a list of commands that begin with a particular character string, enter the abbreviated command entry immediately followed by a question mark (?). This form of help is called partial help, because it lists only the keywords or arguments that begin with the abbreviation you entered.

Example:

The following example illustrates how typing **c?** displays all available arguments that start with the letter c.

```
SCE8000(config)#snmp-server c?
Communitycontact
SCE8000(config)#snmp-server c
```

Argument Help

To obtain a list of keywords or parameters associated with a command, type a question mark (?) in place of a keyword or parameter on the command line.

Note that if **<Enter>** is acceptable input, the symbol <cr> represents the **Enter** key.

Example:

The following example illustrates how to get a list of all arguments or keywords expected after the command **snmp-server**.

```
SCE8000(config)#snmp-server?
community Define community string
contact Set system contact
enable Enable the SNMP agent
host Set traps destination
interface Set interface parameters
SCE8000(config)# snmp-server
```

When asking for help on particular parameter, the system informs you of the type of data that is an accepted legal value. The types of parameters supported are:

STRING	When a String is expected, you can enter any set of characters or digits. If the string has a space as one of its characters, use double-quote (“) marks to enclose the string.
DECIMAL	Any decimal number. Positive number is assumed, for negative numbers use the “–” symbol.
HEX	A hexadecimal number; must start with either 0x or 0X.

Example:

The following example illustrates the use of **?** to get help on commands syntax. In this example, you can enter either the word **running-config**, or any name of a file, after the word **copy**.

```
SCE8000#copy?
running-config Copy running configuration file
startup-config Backup the startup-config to a specified destination
STRING Source file
SCE8000#copy
```

Table 1-6 summarizes the CLI help features.

Table 1-6 Getting Help

Command	Purpose
?	List all commands available for a particular command mode

<abbreviated-command-entry>?
 	
Example:
`c?`
`calendar cd clear clock configure`
`copy copy-passive`
	Obtain a list of commands that begin with a particular character string.
	(Do not leave a space between the command and question mark.)

<abbreviated-command-entry><Tab>
 	
Example:
`en <Tab>`
`enable`
	Complete a partial command name.

<command>?	List the keywords associated with the specified command.

<command keyword> ?
 	
Example:
`show ?`
`access-lists Show all access-lists`
	List the arguments associated with the specified keyword.
	Leave a space between the keyword and question mark

Navigational and Shortcut Features

- Command History, page 1-12
- Keyboard Shortcuts, page 1-12
- Auto-Completion, page 1-13
- FTP User Name and Password, page 1-14

Command History

CLI maintains a history buffer of the most recent commands you used in the current CLI session for quick retrieval. Using the keyboard, you can navigate through your last commands, one by one, or all commands that start with a given prefix. By default, the system saves the last 30 commands you typed. You can change the number of commands remembered using the **history size** command.

To use the history functions, use the keys shown in Table 1-7.

Table 1-7 Keyboard Shortcuts for History Functions

Arrow	Shortcut	Description
Up arrow	Ctrl-P	Move cursor to the previous command with the same prefix.
Down arrow	Ctrl-N	Moves the cursor to the next command with the same prefix as original.
	Ctrl-L Ctrl-R	Re-display the current command line.

Keyboard Shortcuts

The Cisco SCE platform has several keyboard shortcuts that make it easier to navigate and use the system. Table 1-8 shows the keyboard shortcuts available.

You can get a display the keyboard shortcuts at any time by typing help bindings.

Table 1-8 Keyboard Shortcuts

Description	Shortcut key
Navigational shortcuts	
Move cursor one character to the right.	CTRL-F /->
Move cursor one character to the left.	CTRL-B /<-
Move cursor one word to the right (forward).	ESC-F
Move cursor one word to the left (backward).	ESC-B
Move cursor to the start of the line.	CTRL-A
Move cursor to the end of the line.	CTRL-E
Editing shortcuts	
Delete the character where the cursor is located.	CTRL-D

Table 1-8 Keyboard Shortcuts (continued)

Description	Shortcut key
Delete from the cursor position to the end of the word.	ESC-d
Delete the character before the current location of the cursor.	Backspace
Delete the character before the current location of the cursor.	CTRL-H
Deletes from the cursor position to the end of the line	CTRL-K
Deletes all characters from the cursor to the beginning of the line	CTRL-U
Delete the word to the left of the cursor.	CTRL-W
Recall the last item deleted.	CTRL-Y
Completes the word when there is only one possible completion.	<Tab>
Completes the word when there is only one possible completion. (Same functionality as <Tab>.)	CTRL-I

Auto-Completion

The CLI interface features tab completion. When you type in the first letters of a command and press **<Tab>**, the system automatically fills in the rest of the command or keyword. This feature works only when there is one command that could be possible using the starting letters.

Example:

The letters **snm** followed by **<Tab>** will be completed to the command **snmp-server**.

```
SCE8000(config)#snm <Tab>
SCE8000(config)#snmp-server
```

If you press **<Enter>** instead of **<Tab>**, and there is no ambiguity, the system actually carries out the command that is the result of the auto-completion.

Example: 1

The following example displays how the system completes a partial (unique) command for the **enable** command. The system carries out the command using the default authorization level (10) when you press **Enter**.

```
SCE8000>en <Enter>
Password:
SCE8000#
```

Example: 2

The following example illustrates how to use the completion feature with a non-default value for the argument. In this example, the **enable** command is completed using the specified value (15) for the authorization level.

```
SCE8000>en 15 <Enter>
Password:
SCE8000#
```

FTP User Name and Password

CLI enables saving FTP user name and password to be used in FTP operations—download and upload, per session.

These settings are effective during the current CLI session.

The following example illustrates how to set FTP password and user name and the use in these settings for getting a file named *config.tmp* from a remote station using FTP protocol.

```
SCE8000#ip FTP password pw123
SCE8000#ip FTP username user1
SCE8000#copy ftp://@10.10.10.10/h:/config.tmp myconf.txt connecting 10.10.10.10 (user name
user1 password pw123) to retrieve config.tmp
SCE8000#
```

Managing Command Output

- Scrolling the Screen Display, page 1-15
- Filtering Command Output, page 1-15
- Redirecting Command Output to a File, page 1-16

Some commands, such as many show commands, may have many lines of output. There are several ways of managing the command output:

- Scrolling options — When the command output is too large to be displayed all at once, you can control whether the display scrolls line by line or refreshes the entire screen.
- Filtering options — You can filter the output so that output lines are displayed only if they include or exclude a specified expression.
- Redirecting to a file — You can send the output to a specified file.

Note that by default, the show commands act the same as the more commands; that is, the output is displayed interactively a single screen at a time. Use the **no more** command to disable this feature so that show commands display the complete output all at one time.

Scrolling the Screen Display

The output of some **show** and **dir** commands is quite lengthy and cannot all be displayed on the screen at one time. Commands with many lines of output are displayed in chunks of 24 lines. You can choose to scroll the display line by line or refresh the entire screen. At the prompt after any line, you can type one of the following keys for the desired action:

- **<Enter>**- Show one more line
- **<Space>**- Show 24 more lines (a new chunk)
- **<g>**- Stop prompting for more
- **<?>**- Display a help string showing possible options
- Any other key- Quit showing the file

Filtering Command Output

You can filter the output of certain commands, such as **show**, **more**, and **dir**, so that output lines are displayed only if they include or exclude a specified expression. The filtering options are as follows:

- include — Shows all lines that include the specified text.
- exclude — Does not show any lines that include the specified text.
- begin — Finds the first line that includes the specified text, and shows all lines starting from that line. All previous lines are excluded.

The syntax of filtered commands is as follows:

- <command>| include <expression>
- <command>| exclude <expression>
- <command>| begin <expression>

Following is an example of how to filter the **show version** command to display only the last part of the output, beginning with the version information.

```
SCE8000# show version | begin revision
```

Redirecting Command Output to a File

You can redirect the output of commands, such as **show**, **more**, and **dir**, to a file. When writing the output of these commands to a file, you can specify either of the following options:

- redirect — The new output of the command will overwrite the existing contents of the file.
- append — The new output of the command will be appended to the existing contents of the file.

The syntax of redirection commands is as follows:

- <command>| redirect <file-name>
- <command>| append <file-name>

Following is an example of how to do the following:

- Filter the more command to display from a csv subscriber file only the gold package subscribers.
- Redirect that output to a file named current_gold_subscribers. The output should not overwrite existing entries in the file, but should be appended to the end of the file.

```
SCE8000# more subscribers_10.10.2008 include gold | append current_gold_subscribers
```

Creating a CLI Script

The CLI scripts feature allows you to record several CLI commands together as a script and play it back. This is useful for saving repeatable sequence of commands, such as software upgrade. For example, if you are configuring a group of Cisco SCE platforms and you want to run the same configuration commands on each platform, you could create a script on one platform and run it on all the other Cisco SCE platforms. The available script commands are:

- **script capture**
- **script stop**
- **script print**
- **script run**

Step 1 At the SCE8000# prompt, type **script capture** ***filename.scr*** where *filename.scr* is the name of the script, with a scr file extension.

Step 2 Perform the actions you want to be included in the script.

Step 3 Type **script stop**.

The system saves the script.

The following is an example of recording a script for upgrading software.

```
SCE8000#script capture upgrade.scr
SCE8000#configure
SCE8000(config)#boot system new.pkg Verifying package file...
Package file verified OK.
SCE8000(config)#exit
SCE8000#copy running-config startup-config
Writing general configuration file to temporary location...
Extracting files from '//apps/data/scos/images/new.pkg'...
Verifying package file...
Package file verified OK.
Device '//apps/data/scos/' has 81154048 bytes free, 21447973 bytes are needed for
extraction, all is well.
Extracting files to temp locations...
Renaming temp files...
Extracted OK.
Backing-up general configuration file...
Copy temporary file to final location...
SCE8000#script stop
SCE8000#
```

CLI Command Reference

Revised: August 26, 2014

Introduction

This chapter contains all of the CLI commands available on the Cisco SCE 8000 platform at the admin authorization level or lower.

Each command description includes the information shown in Table 2-1.

Table 2-1 Command Description Subsections

Description	Description of the command
Command Syntax	General format.
Syntax Description	Description of parameters and options for the command.
Default	If relevant, the default setting for the command.
Mode	Mode (command line) from which the command can be invoked.
Usage Guidelines	Information about when to invoke the command and additional details.
Authorization	Level of user authorization required for using the command.
Example	An illustration of how the command looks when invoked. Because the interface is straightforward, some of the examples are included for clarity only.
Related Commands	Other commands that might be used with the command.

Syntax and Conventions

The CLI commands are written in the following format:

command ***required-parameter*** *[optional-parameter]*

no is an optional parameter that may appear before the command name.

When entering commands, you may enclose parameters in quotation marks, and you must do so when a parameter name includes a space.

?

Lists all of the commands available for the current command mode. You can also use the **?** command to obtain specific information about a keyword or argument.

To display a list of commands that begin with a particular character string, enter the abbreviated command entry immediately followed by a question mark (?). This form of help is called partial help, because it lists only the commands that begin with the abbreviation you entered.

?

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

All

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

To list a command's associated keywords or arguments, enter a question mark (?) in place of a keyword or argument on the command line. This form of help is called argument help because it lists the keywords or arguments that apply based on the command, keywords, and arguments you have already entered.

Examples

The following example shows how to request help using the ? wildcard:

```
SCE8000(config)#ip ?
default-gateway    Sets the default gateway
domain-lookup      Enables the IP DNS-based host name-to-address translation
domain-name        Define a default domain name
host               Add a host to the host table
name-server        Specify the address of one or more name servers to use for name and
                   address resolution
route              Add IP routing entry
SCE8000(config)#ip d?
default-gateway domain-lookup domain-name
SCE8000(config)#ip de?
default-gateway
SCE8000(config)#ip de
```

aaa accounting commands

Enables TACACS+ accounting.

To disable TACACS+ accounting, use the **no** form of this command.

aaa accounting commands *level* **default stop-start group tacacs+**

no aaa accounting commands *level* **default**

Syntax Description

level	Privilege level for which to enable TACACS+ accounting. Choose one of the following levels: • **0** (user) • **5** (viewer) • **10** (admin) • **15** (root).
stop-start	Sends the accounting message before and after the CLI command is executed.

Command Default

TACACS+ accounting is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

If TACACS+ accounting is enabled, the Cisco SCE platform sends an accounting message to the TACACS+ server after every command execution. The accounting message is logged in the TACACS+ server for use by the network administrator.

The **start-stop** keyword (required) indicates that the accounting message is sent at the beginning and the end (if the command was successfully executed) of the execution of a CLI command.

Authorization: admin

Examples

The following example shows how to enable TACACS+ accounting for the admin privilege level (10):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# aaa accounting commands 10 default stop-start group tacacs+
SCE8000(config)#
```

Related Commands

Command	Description
aaa authentication attempts	Sets the maximum number of login attempts that will be permitted before a Telnet session is terminated.
aaa authentication command default	Specifies which command authentication methods are to be used, and in what order of preference.
aaa authentication enable default	Specifies which privilege level authentication methods are to be used, and in what order of preference.
aaa authentication login default	Specifies which login authentication methods are to be used, and in what order of preference.
tacacs-server host	Defines a new TACACS+ server host that is available to the Cisco SCE platform TACACS+ client.
tacacs-server key	Defines the global default encryption key for the TACACS+ server hosts.

aaa authentication attempts

Specifies the number of login attempts allowed before a Telnet session is terminated.

aaa authentication attempts login [*number-of-attempts]*

Syntax Description

login *number-of-attempts*	Maximum number of login attempts that will be permitted before the Telnet session is terminated.

Command Default

The default number of authentication attempts is 3.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The maximum number of login attempts is relevant only for Telnet sessions. From the local console, the number of retries is unlimited.

Authorization: admin

Examples

The following example shows how to set the maximum number of login attempts to 5:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# aaa authentication attempts login 5
SCE8000(config)#
```

Related Commands

Command	Description
aaa authentication accounting commands	Enables TACACS+ accounting.
aaa authentication commands default	Specifies which command level authentication methods are to be used, and in what order of preference.
aaa authentication enable default	Specifies which privilege level authentication methods are to be used, and in what order of preference.
aaa authentication login default	Specifies which login authentication methods are to be used, and in what order of preference.

aaa authentication commands default

Specifies which command level authentication methods are to be used, and in what order of preference.

To delete the command level authentication list, use the **no** form of this command.

aaa authentication command *level* **default** *method1 [method2]*

no aaa authentication command *level* **default**

Syntax Description

level	Privilege level for which to enable TACACS+ command authorization. Choose one of the following levels: • **0** (user) • **5** (viewer), • **10** (admin) • **15** (root)
method1 [method2]	Command level authentication methods to be used. You may specify up to two different methods, in the order in which they are to be used. See **Usage Guidelines** for more information.

Command Default

The default command level authentication method is **enable**.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Use this command to configure “backup” command level authentication methods to be used if the primary command level authentication method fails. The following methods are available:

- **group tacacs+—**Use TACACS+ authentication.
- **none—**Use no authentication.

If the command level authentication methods list is deleted, the default command level authentication method only (**enable**) is used. TACACS+ authentication is not used.

Authorization: admin

Examples

The following example shows how to configure command level authentication methods:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# aaa authentication command 15 default group tacacs+ none
SCE8000(config)#
```

Related Commands

Command	Description
aaa authentication enable default	Specifies which privilege level authentication methods are to be used, and in what order of preference.
aaa authentication login default	Specifies which login authentication methods are to be used, and in what order of preference.
aaa accounting commands	Enables TACACS+ accounting.
aaa authentication attempts	Sets the maximum number of login attempts that will be permitted before a Telnet session is terminated.
show tacacs	Displays statistics for the TACACS+ servers.

aaa authentication enable default

Specifies which privilege level authentication methods are to be used, and in what order of preference.

To delete the privilege level authentication methods list, use the **no** form of this command.

aaa authentication enable default *method1 [method2...]*

no aaa authentication enable default

Syntax Description

method1...	Privilege level authentication methods to be used. You may specify up to four different methods, in the order in which they are to be used. See Usage Guidelines for more information.

Command Default

The default privilege level authentication method is **enable**.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use this command to configure "backup" privilege level authentication methods to be used if the primary privilege level authentication method fails. The following methods are available:

- **group tacacs+—**Use TACACS+ authentication.
- **local—**Use the local username database for authentication.
- **enable** (default)—Use the **enable** password for authentication.
- **none—**Use no authentication.

If the privilege level authentication methods list is deleted, the default privilege level authentication method only (**enable** password) is used. TACACS+ authentication is not used.

Authorization: admin

Examples

The following example shows how to configure privilege level authentication methods:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# aaa authentication enable default group tacacs+ enable none
SCE8000(config)#
```

Related Commands

Command	Description
aaa authentication command default	Specifies which command authentication methods are to be used, and in what order of preference.
aaa authentication commands default	Specifies which command level authentication methods are to be used, and in what order of preference.
aaa authentication login default	Specifies which login authentication methods are to be used, and in what order of preference.
aaa accounting commands	Enables TACACS+ accounting.
aaa authentication attempts	Sets the maximum number of login attempts that will be permitted before a Telnet session is terminated.
show tacacs	Displays statistics for the TACACS+ servers.

aaa authentication login default

Specifies which login authentication methods are to be used, and in what order of preference.

To delete the login authentication methods list, use the **no** form of this command.

aaa authentication login default *method1 [method2...]*

no aaa authentication login default

Syntax Description

method1...	Login authentication methods to be used. You may specify up to four different methods, in the order in which they are to be used. See Usage Guidelines for more information.

Command Default

The default login authentication method is **enable**.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Use this command to configure "backup" login authentication methods to be used if the primary login authentication method fails. The following methods are available:

- **group tacacs+—**Use TACACS+ authentication.
- **local—**Use the local username database for authentication.
- **enable** (default)—Use the **enable** password for authentication.
- **none—**Use no authentication.

If the login authentication methods list is deleted, the default login authentication method only (**enable** password) is used. TACACS+ authentication is not used.

Authorization: admin

Examples

The following example shows how to configure login authentication methods:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# aaa authentication login default group tacacs+ enable none
SCE8000(config)#
```

Related Commands

Command	Description
aaa authentication command default	Specifies which command authentication methods are to be used, and in what order of preference.
aaa authentication commands default	Specifies which command level authentication methods are to be used, and in what order of preference.
aaa authentication enable default	Specifies which privilege level authentication methods are to be used, and in what order of preference.
aaa accounting commands	Enables TACACS+ accounting.
aaa authentication attempts	Sets the maximum number of login attempts that will be permitted before a Telnet session is terminated.
show tacacs	Displays statistics for the TACACS+ servers.

accelerate-packet-drops

Enables drop-wred-packets-by-hardware mode. This mode improves performance, but prevents the application from being able to count all dropped packets.

To disable drop-wred-packets-by-hardware mode, enabling the software to count all dropped packets (at the expense of some loss of performance), use the **no** form of this command.

accelerate-packet-drops

no accelerate-packet-drops

Syntax Description

This command has no arguments or keywords.

Command Default

This command (drop-wred-packets-by-hardware mode) is enabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

By default, the Cisco SCE platform hardware drops WRED packets (packets that are marked to be dropped due to bandwidth-control criteria). However, dropping these packets might be a problem if you need to know the number of dropped packets per service.

You can disable drop-wred-packets-by-hardware mode. The application can then retrieve the number of dropped packets for every flow and provide better visibility into the exact number of dropped packets and their distribution.

Note that counting all dropped packets impacts system performance and therefore, by default, drop-wred-packets-by-hardware mode is enabled.

Note The MIB object *tpTotalNumWredDiscardedPackets* counts dropped packets. The value in this counter is absolute only in **no accelerate-packet-drops** mode. When in **accelerate-packet-drops** mode (the default mode), this MIB counter provides only a relative value indicating the trend of the number of packet drops, with a factor of approximately 1:6.

Authorization: admin

Examples

The following example shows how to disable drop-wred-packets-by-hardware mode so that the application can count all dropped packets:

```
SCE8000>enable 10
password:<cisco>
SCE8000#>config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no accelerate-packet-drops
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard accelerate-packet-drops	Displays the currently configured hardware packet drop mode.

access-class

Restricts Telnet server access to those addresses listed in the specified ACL.

Use the **no** form of this command to either remove a specified ACL or to set the Telnet server to accept access from any IP address.

access-class ***acl-number*** **in**

no access-class [*acl-number*] in

Syntax Description

acl-number	An access-list number (1–99).

Command Default

By default, no ACL is configured (Telnet access is available from any IP address).

Command Modes

Line Configuration Mode

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

You must configure the ACL before you can assign it to a service. (See **access-list**.)

Authorization: admin

Examples

The following are examples of the access-class command:

EXAMPLE 1

The following example configures an access class for all Telnet lines.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#line vty 0
SCE8000(config-line)#access-class 1 in
SCE8000(config-line)#
```

EXAMPLE 2

The following example removes an access class for Telnet lines.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#line vty 0
SCE8000(config-line)#no access-class 1 in
SCE8000(config-line)#
```

Related Commands

Command	Description
access-list	Creates or updates a specified ACL
show access-lists	Displays all currently configured ACLs.

access-list

Adds an entry to the bottom of the specified access list.

To remove an entry from the specified access list, use the **no** form of this command.

access-list *number permission address*

no access-list *number*

Syntax Description

number	Number of an access list (1 to 99).
permission	Indicates whether the IP address should be allowed or denied access permission, as described in Table 2-2 in Usage Guidelines.
address	Addresses to be matched by this entry, as described in Table 2-2 in Usage Guidelines.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The Cisco SCE platform can be configured with access control lists (ACLs), which are used to permit or deny incoming connections on any of the management interfaces. An access control list is an ordered list of entries, each consisting of the following elements:

- Permit/deny field
- IP address
- Optional wildcard “mask” defining an IP address range

The order of the entries in the list is important. The default action of the first entry that matches the connection is used. If no entry in the access list matches the connection, or if the access list is empty, the default action is deny. Table 2-2 lists valid permission values.

Table 2-2 Valid Permission Values

deny	Denies access to list member.
permit	Permits access to list member.

Table 2-2 Valid Permission Values (continued)

any	All IP addresses are matched by this entry. This value is equivalent to specifying the address 0.0.0.0 255.255.255.255.
address	IP address or range of IP addresses, matched by this entry. This value can be one address in the format *x.x.x.x* or a range of addresses in the format *x.x.x.x y.y.y.y*, where *x.x.x.x* specifies the prefix bits common to all IP addresses in the range, and *y.y.y.y* is a mask that specifies the bits that are ignored. In this notation, 1 means bits to ignore. For example, the address 0.0.0.0 255.255.255.255 means any IP address. The address 10.0.0.0 0.1.255.255 means IP addresses from 10.0.0.0 to 10.1.255.255. The address 1.2.3.4 0.0.0.255 means IP addresses from 1.2.3.0 to 1.2.3.255 (a more natural way of expressing the same range is 1.2.3.0 0.0.0.255).

Authorization: admin

Examples

The following example adds entries to the bottom of access-list 1. The first entry permits access to 10.1.1.0 to 10.1.1.255. The second entry denies access to any address. Together, this list allows access only to addresses 10.1.1.*.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#access-list 1 permit 10.1.1.0 0.0.0.255
SCE8000(config)#access-list 1 deny any
SCE8000(config)#
```

The following example defines access-list 2, a list that denies access to all IP addresses in the range 10.1.2.0 to 10.1.2.255, permits access to all other addresses in the range 10.1.0.0 to 10.1.15.255, and denies access to all other IP addresses. Note that, because the first range is contained within the second range, the order of entries is important. If they had been entered in the opposite order, the deny entry would not have any effect.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE (config)#access-list 2 deny 10.1.2.0 0.0.0.255
SCE (config)#access-list 2 permit 10.1.0.0 0.0.15.255
SCE8000(config)#
```

Related Commands

Command	Description
ip access-class	Specifies which access control list (ACL) controls global access to the Cisco SCE platform.
show access-lists	Displays all access lists or a specific access list.

active-port

Specifies which management port is currently active.

active-port

Syntax Description

This command has no arguments or keywords.

Command Default

Default Mng port is 0/1.

Command Modes

Mng Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The command must be executed from the Mng interface that is to be defined as the active port, as follows:

- Use the **interface mng** command, specifying the desired port number (0/1 or 0/2), to enter the proper command mode.
- Execute the active-port command.

The use of this command varies slightly depending on whether the management interface is configured as a redundant interface (auto fail-over disabled)

- auto fail-over enabled (automatic mode): the specified port becomes the currently active port, in effect forcing a fail-over action even if a failure has not occurred.
- auto fail-over disabled (manual mode): the specified port should correspond to the cabled Mng port, which is the only functional port and therefore must be and remain the active management port

Authorization: admin

Examples

The following example shows how to use this command to configure Mng port 2 as the currently active management port.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface mng 0/2
SCE8000(config if)#active-port
SCE8000(config if)#
```

application slot replace force completion

Forces the current application replace process to complete and immediately start finalization (killing all old flows).

application slot *slot-number* **replace force completion**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to force the application replace operation to complete immediately:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#application slot 0 replace force completion
SCE8000#
```

asymmetric-l2-support

Configures the system to treat flows as having asymmetric Layer 2 characteristics (including Ethernet, VLAN, and L2TP), for the purpose of packet injection.

To disable asymmetric L2 support, use the **no** form of this command.

asymmetric-l2-support

no asymmetric-l2-support

Syntax Description

This command has no arguments or keywords.

Command Default

Asymmetric Layer 2 support is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

You should enable asymmetric Layer 2 support when the following conditions apply for any flows:

- Each direction of the flow has a different pair of MAC addresses.
- The routers do not accept packets with the MAC address of the other link.

Note "Asymmetric routing topology" support and "asymmetric tunneling support" are two separate features. Asymmetric routing topology refers to topologies where the Cisco SCE platform might see some flows only in one direction (upstream or downstream).
Asymmetric tunneling support (asymmetric L2 support) refers to the ability to support topologies where the Cisco SCE platform sees both directions of all flows, but some of the flows may have different Layer 2 characteristics (such as MAC addresses, VLAN tags, and L2TP headers), which the Cisco SCE platform must specifically take into account when injecting packets into the traffic (such as in block and redirect operations).
Note as well that, to support asymmetric Layer 2, the Cisco SCE platform switches to asymmetric flow open mode, which impacts performance. This limitation is *not* the case for asymmetric routing topology.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)# asymmetric-L2-support
```

Related Commands

Command	Description
show interface linecard	Displays information for a specific line card interface.

attack-detector

Enables the specified attack detector and assigns an access control list (ACL) to it.

attack-detector *number* **access-list** *access-list*

Syntax Description

number	Number of the attack detector.
access-list	Number of the ACL containing the IP addresses selected by this detector.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the following commands to define the attack detector and the ACL:

- **attack-detector**
- **access-lis**t

Authorization: admin

The following example shows how to enable attack detector number 2 and assign ACL 8:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#attack-detector 2 access-list 8
SCE8000(config if)#
```

Related Commands

Command	Description
access-list	Adds an entry to the bottom of the specified access list.
attack-detector ***number***	Configures a specific attack detector for a particular attack type with the assigned number.
show interface linecard attack-detector	Displays the configuration of the specified attack detector.
show access-lists	Displays all access lists or a specific access list.

attack-detector default

Defines default thresholds and attack handling action. If a specific attack detector is defined for a particular situation (protocol, attack direction, or side), the detector overrides the defaults.

To delete the user-defined defaults, use the **no** form of this command. The system defaults are used instead.

attack-detector default protocol *protocol* **attack-direction** *attack-direction* **side** *side* **[action** *action]* **[open-flows** *open-flows]* **[ddos-suspected-flows** *ddos-suspected-flows]* **[suspected-flows-ratio** *suspected-flows-ratio]* **[notify-subscriber | dont-notify-subscriber] [alarm |noalarm]**

no attack-detector default protocol *protocol* **attack-direction** *attack-direction* **side** *side* **[action** *action]* **[open-flows** *open-flows]* **[ddos-suspected-flows** *ddos-suspected-flows]* **[suspected-flows- ratio** *suspected-flows-ratio]*

Syntax Description

protocol	For *protocol*, choose **TCP**, **UDP**, **IMCP**, or **other**.
attack-direction	For *attack-direction*, choose **attack-source**, **attack-destination**, or **both**.
side	For *size*, choose **subscriber**, **network**, or **both**.
action	For *action*, choose **report** or **block**.
open-flows	Threshold for concurrently open flows (new open flows per second).
ddos-suspected-flows	Threshold for DDoS-suspected flows (new suspected flows per second).
suspected-flows-ratio	Threshold for ratio of suspected flow rate to open flow rate.
notify-subscriber, dont-notify-subscriber	Enables or disables subscriber notification.
alarm, **noalarm**	Enables or disables sending of SNMP traps.

Command Default

The default attack detector uses the following default values:

- Action—report
- Thresholds—varies according to the attack type
- Subscriber notification—disabled
- Sending an SNMP trap—disabled

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the **attack-detector *number* command** to configure a specific attack detector.

Authorization: admin

Examples

The following example shows how to configure a default attack detector for TCP flows from the attack source:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#attack-detector default protocol TCP attack-direction attack-source
side both action report open-flows 500 ddos-suspected-flows 75 suspected-flows-ratio 50
SCE8000(config if)#
```

The following example shows how to enable subscriber notification for the specified default attack detector:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#attack-detector default protocol TCP attack-direction attack-source
side both notify-subscriber
SCE8000(config if)#
```

Related Commands

Command	Description
attack-detector *number*	Configures a specific attack detector for a particular attack type with the assigned number.
attack-filter subscriber-notification ports	Specifies a port as a subscriber notification port.
show interface linecard attack-detector	Displays the configuration of the specified attack detector.

attack-detector *number*

Configures a specific attack detector for a particular attack type (protocol, attack direction, or side) with the assigned number.

To configure the default attack detector for the specified attack type, use the **default** form of this command.

To delete the specified attack detector, use the **no** form of this command.

attack-detector *number* **protocol {TCP | UDP | ICMP | other | all} [destination-port** *destination-port*] **attack-direction** *attack-direction* **side** *side* **[action** *action]* **[open-flows** *open-flows*] **[ddos-suspected-flows** *ddos-suspected-flows*] **[suspected-flows-ratio** *suspected-flows-ratio*] **[notify-subscriber | dont-notify-subscriber] [alarm | no-alarm]**

no attack-detector *number*

attack-detector default protocol {TCP | UDP | ICMP | other | all} [destination-port *destination-port*] **attack-direction** *attack-direction* **side** *side* **[action** *action]* **[open-flows** *open-flows*] **[ddos-suspected-flows** *ddos-suspected-flows*] **[suspected-flows-ratio** *suspected-flows-ratio*] **[notify-subscriber | dont-notify-subscriber] [alarm | no-alarm]**

no attack-detector default protocol {TCP | UDP | ICMP | other | all} [destination-port *destination-port*] **attack-direction** *attack-direction* **side** *side*

default attack-detector {all | all-numbered}

default attack-detector number protocol {all | IMCP | other | TCP | UDP} [destination-port *destination-port]* **attack-direction** *attack-direction* **side** *side*

Syntax Description

number	Assigned number for the attack detector.
protocol	For *protocol*, choose **TCP**, **UDP**, **IMCP**, or **other**.
destination port	(TCP and UDP protocols only) Defines whether the default attack detector applies to specific (port-based) or not-specific (port-less) detections. For *destination-port*, choose **specific**, **not-specific**, or **both**.
attack-direction	For *attack-direction*, choose s**ingle-side-destination**, **single-side-both**, **dual-sided**, or **all**.
side	For *side*, choose **subscriber**, **network**, or **both**.
action	For *action*, choose **report** or **block**.
open-flows-rate	Threshold for rate of open flows (new open flows per second).
suspected-flows-rate	Threshold for rate of suspected DDoS flows (new suspected flows per second).
suspected-flows-ratio	Threshold for ratio of suspected flow rate to open flow rate.
notify-subscriber, **dont-notify-subscriber**	Enables or disables subscriber notification.
alarm, **noalarm**	Enables or disables sending of SNMP traps.

Command Default

The default attack detector uses the following default values:

- Action—report
- Thresholds—varies according to the attack type
- Subscriber notification—disabled
- Sending an SNMP trap—disabled

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

If a specific attack detector is defined for a particular attack type, this detector overrides the configured default attack detector.

If the selected protocol is either TCP or UDP, specify whether destination ports are specific, not specific, or both. If the destination ports are specific, configure the ports using the attack-detector number, page 2-25 command.

To enable a configured attack detector, use the attack-detector number, page 2-25 command.

To configure a default attack detector, use the attack-detector default, page 2-23 command.

Authorization: admin

Examples

The following example shows how to configure attack detector number 2:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)# attack-detector 2 protocol UDP dest-port not-specific attack-direction
single-side-destination side both action block open-flows-rate 500 suspected-flows-rate
500 suspected-flows-ratio 50 notify-subscriber alarm
SCE8000(config if)#
```

The following example shows how to delete attack detector number 2:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#no attack-detector 2
SCE8000(config if)#
```

The following example shows how to disable subscriber notification for attack detector number 2:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
```

```
SCE8000(config if)#attack-detector 2 protocol UDP dest-port not-specific attack-direction
single-side-destination side both dont-notify-subscriber
SCE8000(config if)#
```

Related Commands

Command	Description
attack-detector	Enables the specified attack detector and assigns an access control list (ACL) to it.
attack-detector tcp-port-list | udp-port-list	Defines the list of destination ports for specific port detections for TCP or UDP protocols.
attack-filter subscriber-notification ports	Specifies a port as a subscriber notification port.
attack-detector default	Defines default thresholds and attack handling action.
show interface linecard attack-detector	Displays the configuration of the specified attack detector.

attack-detector tcp-port-list | udp-port-list

Defines the list of destination ports for specific port detections for TCP or UDP protocols.

attack-detector *number* **{tcp-port-list | udp-port-list} {all |** *port1 [port2...]}*

Syntax Description

number	Number of the attack detector for which this list of specific ports is relevant.
port1 ...	List of up to 15 specific port numbers.
all	Includes all ports in the list.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

TCP and UDP protocols may be configured for specified ports only (port-based). Use this command to configure the list of specified destination ports for each protocol. Up to 15 different TCP port numbers and 15 different UDP port numbers can be specified.

Configuring a TCP or UDP port list for an attack detector affects only those attack types that have the same protocol (TCP or UDP) and are port-based (that is, detect a specific destination port). Settings for other attack types are not affected by the configured port list.

Authorization: admin

Examples

The following example shows how to configure the destination port list for the TCP protocol for attack detector 10:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#attack-detector 10 tcp-port-list 100 101 102 103
SCE8000(config if)#
```

Related Commands

Command	Description
attack-detector *number*	Configures a specific attack detector for a particular attack type with the assigned number.
attack-filter (Interface Linecard Configuration)	Enables specific attack detection for a specified protocol and attack direction.

attack-filter

Enables specific attack detection for a specified protocol and attack direction.

To disable attack detection, use the **no** form of this command.

attack-filter protocol {TCP | UDP | ICMP | other | all} [dest-port *destination-port***]**
attack-direction *attack-direction*

no attack-filter protocol {TCP | UDP | ICMP | other | all} [dest-port *destination-port***]**
attack-direction *attack-direction*

Syntax Description

protocol	Choose **TCP**, **UDP**, **IMCP**, **other**, or **all**.
destination-port	(TCP and UDP protocols only) Defines whether the default attack detector applies to specific (port-based) or not-specific (port-less) detections. Choose **specific**, **not-specific**, or **both**.
attack-direction	Choose **single-side-destination**, **single-side-source**, **single-side-both**, **dual-sided**, or **all**.

Command Default

This command is enabled.

The default for ***protocol*** is **all** (no protocol specified).

The default for *destination-port* is **both** (port-based and port-less).

The default for *attack-direction* is **all** (all directions).

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Specific attack filtering is configured in two steps:

1. Enabling specific IP filtering for the particular attack type (using this command).
2. Configuring an attack detector for the relevant attack type (using the attack-detector number, page 2-25command). Each attack detector specifies the thresholds that define an attack and the action to be taken when an attack is detected.

In addition, you can manually override the configured attack detectors to either force or prevent attack filtering in a particular situation (using the **attack filter force filter | dont-filter** command).

By default, specific IP detection is enabled for all attack types. You can configure specific IP detection to be enabled or disabled for a specific defined situation only, depending on the following options:

- For a selected protocol only

- For TCP and UDP protocols, for only port-based or only port-less detections
- For a selected attack direction, either for all protocols or for a selected protocol

If the selected protocol is either TCP or UDP, specify whether the destination port is specific (port-based), not specific (port-less), or both. If the destination ports are specific, configure the ports using the attack-detector tcp-port-list | udp-port-list, page 2-28command.

Authorization: admin

Examples

The following example shows how to enable specific, dual-sided attack detection for TCP protocol only:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#attack-filter protocol TCP dest-port specific attack-direction
dual-sided
SCE8000(config if)#
```

The following example shows how to enable single-sided attack detection for ICMP protocol only:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)# attack-filter protocol ICMP attack-direction single-side-source
SCE8000(config if)#
```

The following example shows how to disable attack detection for all protocols that are not TCP, UDP, or ICMP:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface LineCard 0
SCE8000(config if)#no attack-filter protocol other attack-direction all
SCE8000(config if)#
```

Related Commands

Command	Description
attack-detector tcp-port-list | udp-port-list	Defines the list of destination ports for specific port detections for TCP or UDP protocols.
attack-detector *number*	Configures a specific attack detector for a particular attack type with the assigned number.
show interface linecard attack-filter	Displays the attack-filtering configuration.

attack-filter dont-filter | force-filter

Prevents attack filtering for a specified IP address or protocol. If filtering is already in process, it will be stopped. When attack filtering has been stopped, it remains stopped until explicitly restored by another CLI command (either specific or general). To restore attack filtering, use the **no** form of this command.

The **force-filter** option forces attack filtering for a specified IP address or protocol. When attack filtering has been forced, it continues until explicitly stopped by another CLI command (either specific or general). To stop attack filtering, use the **no** form of this command.

attack-filter force-filter [action {block | report}] protocol {TCP | UDP | ICMP | other} [destination-port {*port-number* **| not-specific}] attack-direction {single-side-source | single-side-destination | single-side-both | dual-sided} {ip** *ip-address* **| dual-sided source-ip** *ip-address* **destination-ip** *ip-address* **| dual-sided source-ipv6** *ipv6-address* **destination-ipv6** *ipv6-address***} side {both | network | subscribe}**

attack-filter dont-filter protocol {TCP | UDP | ICMP | other} attack-direction {single-side-source | single-side-destination | single-side-both | dual-sided} {ip *ip-address* **| dual-sided source-ip** *ip-address* **destination-ip** *ip-address* **| dual-sided source-ipv6** *ipv6-address* **destination-ipv6** *ipv6-address***} side {both | network | subscribe}**

no attack-filter dont-filter protocol {TCP | UDP | ICMP | other} attack-direction {single-side-source | single-side-destination | single-side-both| dual-sided} {ip *ip-address* **| dual-sided source-ip** *ip-address* **destination-ip** *ip-address* **| dual-sided source-ipv6** *ipv6-address* **destination-ipv6** *ipv6-address***} side {both | network | subscribe}**

no attack-filter force-filter protocol {TCP | UDP | ICMP | other} [destination-port {*port-number* **| not-specific}] attack-direction {single-side-source | single-side-destination | single-side-both | dual-sided) {ip** ***ip****-address* **| dual-sided source-ip** *ip-address* **destination-ip** *ip-address* **| dual-sided source-ipv6** *ipv6-address* **destination-ipv6** *ipv6-address***} side {both | network | subscribe}**

no attack-filter force-filter all

no attack-filter dont-filter all

Syntax Description

action (**force-filte**r option only)	Specifies the action the **force-filter** option should perform. Choose either **block** or **report**.
protocol	Choose **TCP**, **UDP**, **ICMP**, or **other**.
destination port	(TCP and UDP protocols only) Defines whether specific IP detection is forced or prevented for the specified port number or is port-less (not specific). *Choose port-number* or **not-specific**.
attack direction	Defines whether specific IP detection is forced or prevented for single-sided or dual-sided attacks: • Single-sided—Specify the direction (**single-side-source**, **single-side-destination**, **single-side-both**) and the IP address. • Dual-sided—Specify **dual-sided** and both the source IP address and the destination IP address.

ip-address	IP address from which traffic will not be filtered: • For single-sided filtering, specify only one IP address. • For dual-sided filtering, specify both a source IP address and a destination IP address.
side	For *side*, choose **subscriber**, **network**, or **both**.
all	Restores or stops all filtering.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.0	This command was introduced.

Usage Guidelines

After configuring the attack detectors, the Cisco SCE platform automatically detects attacks and handles them according to the configuration. However, to manually intervene (either for debugging purposes or because reconfiguring the Cisco SCE attack detectors properly would be difficult), you can use the CLI attack- filtering commands to:

- Prevent or stop filtering of an attack related to a protocol, direction, and specified IP address
- Force filtering of an attack related to a protocol, direction, and specified IP address

Attack filtering can be prevented for a specified IP address or protocol by executing a **dont-filter** CLI command. If filtering is already in process, it will be stopped. When attack filtering has been stopped, it remains stopped until explicitly restored by another CLI command (either **force-filter** or **no dont-filter**).

Authorization: admin

Examples

The following example shows how to prevent attack filtering for the specified conditions:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#attack-filter dont-filter protocol other attack-direction
single-side-source ip 10.10.10.10 side both
SCE8000(config if)#
```

The following example shows how to restore all attack filtering:

```
SCE8000>enable 10
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no attack-filter dont-filter all
SCE8000(config if)#
Password:<cisco>
```

The following example shows how to force attack filtering:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#attack-filter force-filter protocol TCP dest-port not-specific
attack-direction dual-sided source-ip 10.10.10.10 destination-ip 20.20.20.20 side both
SCE8000(config if)#
```

The following example shows how to stop all forced attack filtering:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no attack-filter force-filter all
SCE8000#
```

Related Commands

Command	Description
attack-filter	Enables specific attack detection for a specified protocol and attack direction.

attack-filter subscriber-notification ports

Specifies a port as a subscriber notification port. TCP traffic from the subscriber side to this port will never be blocked by the attack filter, leaving it always available for subscriber notification.

To remove the port from the subscriber notification port list, use the **no** form of this command.

attack-filter subscriber-notification ports *port*

no attack-filter subscriber-notification ports *port*

Syntax Description

port	Port number. One port can be specified as the subscriber notification port.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

This command configures the port to be used for subscriber notification as configured using the **attack-filter** and **attack-detector *number* commands**.

Authorization: admin

Examples

The following example shows how to specify port 100 as the subscriber notification port:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#attack-filter subscriber-notification ports 100
SCE8000(config if)#
```

Related Commands

Command	Description
attack-detector default	Defines default thresholds and attack-handling action.
attack-detector *number*	Configures a specific attack detector for a particular attack type with the assigned number.
show interface linecard attack-filter	Displays the attack-filtering configuration.

auto-fail-over

Enables automatic fail-over on the Mng ports. Use the **no** form of the command to disable automatic fail-over on the Mng ports.

auto-fail-over

no auto-fail-over

Syntax Description

This command has no arguments or keywords.

Command Default

By default, the auto fail-over mode is enabled.

Command Modes

Interface Management Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

This parameter can be configured for either management port, and is applied to both ports with one command.

The automatic mode must be enabled to support management interface redundancy. This mode automatically switches to the backup management link when a failure is detected in the currently active management link.

When the automatic fail-over mode is disabled, by default Mng port 1 is the active port. If Mng port 2 will be the active port, it must be explicitly configured as such (see **active-port**).

Authorization: admin

Examples

This example shows how to disable the auto fail-over mode.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface Mng 0/1
SCE8000(config if)#no auto-fail-over
SCE8000(config if)#
```

Related Commands

Command	Description
active-port	Specifies which management port is currently active.

auto-negotiate

Configures GigabitEthernet interface auto-negotiation mode. Use this command to either enable or disable auto-negotiation.

To always have auto-negotiation disabled, regardless of the connection mode, use the **no** form of this command.

auto-negotiate

no auto-negotiate

default auto-negotiate

Syntax Description

This command has no arguments or keywords.

Command Default

Auto-negotiation is:

- On for inline connection mode
- Off for receive-only connection mode

Command Modes

GigabitEthernet Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Auto-negotiation does not work when the Cisco SCE platform is connected through an optical splitter (receive-only connection mode).

In the Cisco SCE 8000 10GBE platform, auto-negotiation is supported by the GBE management interface only (1/1). The connection mode is not relevant to the management interface.

Authorization: admin

Examples

The following example shows how to configure all the GigabitEthernet line interfaces on the specified SPA to perform no auto-negotiation:

```
SCE_GBE>enable 10
Password:<cisco>
SCE_GBE#config
SCE_GBE(config)#interface range GigabitEthernet 3/0/0-7
SCE_GBE(config range if)#no auto-negotiate
SCE_GBE(config range if)#
```

Related Commands

Command	Description
show interface gigabitethernet	Displays the details of the GigabitEthernet management interface.

bandwidth

Sets Ethernet shaping for the TenGigabitEthernet line interfaces.

bandwidth *bandwidth* **burst-size** *burstsize*

Syntax Description

bandwidth	Bandwidth measured in kbps.
burstsize	Burst size in bytes.

Command Default

The default bandwidth is 100000K (100 Mbps).

The default burst size is 5000 (5K bytes).

Command Modes

TenGigabitEthernet Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

This command is valid for a specified TenGigabitEthernet line interface only. It must be executed explicitly for each interface.

Authorization: admin

Examples

The following example shows how to set the bandwidth and burst size for the TenGigabitEthernet line interface 3/2/0:

```
SCE8000#config
SCE8000(config)#interface TenGigabitEthernet 3/2/0
SCE8000(config if)#bandwidth 100000 burstsize 5000
SCE8000(config if)#
```

Related Commands

Command	Description
interface tengigabitethernet	Displays the details of a TenGigabitEthernet interface.
queue	Sets the queue shaping.

banner

Enables the display of the warning banner every time a user connects to the Cisco SCE platform through either the console connection or Telnet.

Use the **no** form of the command to disable the display of the warning banner.

banner login ***banner-text***

no banner login

Syntax Description

banner-text	Text of the warning banner message, enclosed in delimiting characters (such as quotation marks).

Command Default

By default, the banner is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The warning banner serves as a security warning for unauthorized users trying to connect to Cisco SCE platform. It can also provide device details, as well as information about the service and application.

You do not have to shutdown the Cisco SCE platform in order to enable or disable the banner.

Authorization: admin

Examples

The following example shows how to enable the login banner:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#banner login "Welcome to the Cisco SCE8000"
SCE8000(config)#
```

blink

Blinks a slot LED for visual identification.

To stop slot blinking, use the **no** form of this command.

blink slot *slot-number*

no blink slot *slot-number*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

Not blinking

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the Cisco SCE platform to stop blinking:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#no blink slot 0
SCE8000#
```

Related Commands

Command	Description
show blink	Displays the blinking status of a slot.

boot system

Specifies a new package file to install. The Cisco SCE platform extracts the actual image files from the specified package file only during the **copy running-config startup-config** command.

boot system *pkg-file*

no boot system

Syntax Description

pkg-file	The package file that contains the new firmware. The filename should end with the .pkg file type.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to upgrade the Cisco SCE platform embedded firmware. The package file is verified for the system and checked that it is not corrupted. The actual upgrade takes place only after you run the **copy running-config startup-config** command, and reboot the Cisco SCE device.

If you are transferring the pkg file to the device manually, after the pkg file is transferred to the device, move it to the /apps/data/scos directory (The default SCOS directory) before saving the running configuration. The Cisco SCE device expects the pkg file in the /apps/data/scos directory. The upgrade fails if the pkg file is not placed in this directory.

Authorization: admin

Examples

The following example shows how to upgrade the system:

```
SCE8000> enable 10
Password: <cisco>
SCE8000#
SCE8000# copy ftp://user:1234@10.10.10.10/downloads/SENum.pkg pkg-file.pkg
SCE8000#config
SCE8000(config)#boot system pkg-file.pkg
Verifying package file…
Package file verified OK.
SCE8000(config)# do copy running-config startup-config
Backing –up configuration file…
Writing configuration file…
Extracting new system image…
Extracted OK.
```

Related Commands

Command	Description
copy running-config startup-config	Builds a configuration file with general configuration commands called config.txt, which is used in successive boots.

bursty-traffic-convergence

Enables or configures bursty traffic convergence algorithm for specific agc in aggregative global controllers mode.

Use the **no** form of the command to disable bursty traffic convergence for specific agc in aggregative global controllers mode.

aggregative-global-controller {network | subscriber} *agc-index* **bursty-traffic-convergence**

no aggregative-global-controller {network | subscriber} *agc-index* **bursty-traffic-convergence**

Syntax Description

agc-index	ID of the aggregative global controller. The range is from 1 to 5. The agc-index is already created through Cisco SCABB and verified if the created agc-index is reflected in running-config after the AGC policy application. The agc-index which is already created through Cisco SCABB, is used in the bursty-traffic-convergence CLI. The bursty-traffic-convergence CLI will not work for AGC that is created manually through CLI.

Command Default

By default, bursty traffic convergence is disabled.

Command Modes

Linecard Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: root

Use the **show interface Linecard** *slot* **aggregative-global-controller {network | subscriber}** *agc-index* **bursty-traffic-convergence** command to display the bursty traffic convergence algorithm for a specific agc index in aggregative global controllers mode.

Examples

The following example shows how to enable bursty traffic convergence algorithm for a specific agc in aggregative global controllers mode:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> aggregative-global-controller network 2 bursty-traffic-convergence
```

Note Cisco recommends that the agc index that you choose is a dedicated agc for only one service traffic such as P2P, which is uncontrolled by legacy bandwidth algorithm at a configured PIR limit.

calendar set

Sets the system calendar. The calendar is a system clock that continues functioning even when the system shuts down.

calendar set ***hh:mm:ss day month year***

Syntax Description

hh:mm:ss	Current local time in hours in 24-hour format, minutes, and seconds (hh:mm:ss).
day	Current day (date) in the month.
month	Current month (by 3-letter abbreviated name).
year	Current year using a 4-digit number.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Always coordinate between the calendar and clock by using the **clock read-calendar** command after setting the calendar.

Authorization: admin

Examples

The following example shows how to set the calendar to 20 minutes past 10 a.m., January 13, 2006, synchronize the real-time clock to the calendar time, and display the result:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#calendar set 10:20:00 13 jan 2006
SCE8000#clock read-calendar
SCE8000#show calendar
10:20:03 UTC THU January 13 2006
SCE8000#show clock
10:20:05 UTC THU January 13 2006
SCE8000#
```

Related Commands

Command	Description
clock read-calendar	Synchronizes clocks by setting the system clock from the calendar.
clock set	Manually sets the system clock.
clock update-calendar	Synchronizes clocks by setting the calendar from the system clock.

cd

Changes the path of the current working directory.

cd *new-path*

Syntax Description

new-path	Path name of the new directory. This name can be either a full path or a relative path.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The new path should already have been created in the local flash file system.

Authorization: admin

Examples

The following example shows how to display the current directory (root directory) and then change the directory to the log directory located under the root directory:

```
SCE8000>enable 10
Password:<cisco>
SCE8000>enable 10
SCE8000#pwd
system
SCE8000#cd log
SCE8000#pwd
system:log
SCE8000#
```

Related Commands

Command	Description
pwd	Displays the current working directory.
mkdir	Creates a new directory.

cdp enable

Enables Cisco Discovery Protocol (CDP) on a specific traffic interface. Use the **no** form of the command to disable CDP on a specific interface.

CDP is not supported on management interfaces.

cdp enable

no cdp enable

Syntax Description

This command has no arguments or keywords.

Command Default

By default, CDP is enabled on all traffic interfaces.

Command Modes

Cisco SCE 8000 GBE: GigabitEthernet Interface Configuration (traffic interfaces only)

Cisco SCE 8000 10G: TenGigabitEthernet Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

By default, CDP is enabled on all traffic interfaces. CDP must be enabled globally on the Cisco SCE 8000 platform (**cdp run** command) in order to enable a specific interface.

Tip For consistent CDP operation, it is recommended that both ports of any one traffic link be either enabled or disabled.

Authorization: admin

Examples

The following example illustrates how to disable CDP on both 10 Gigabit Ethernet traffic interfaces of the first traffic link on a Cisco SCE 8000 10G platform.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface range TenGigabitEthernet 3/0-1/0
SCE8000(config if range)#no cdp enable
```

Related Commands

Command	Description
cdp mode	Sets the CDP mode.
cdp run	Enables Cisco Discovery Protocol (CDP) globally.
show cdp	Displays the current CDP configuration.

cdp holdtime

Specifies the amount of time the receiving device should hold a Cisco Discovery Protocol (CDP) packet from the Cisco SCE 8000 before discarding it.

Use either the **no** or the **default** form of the command to restore the holdtime to the default value (180 seconds).

cdp holdtime ***seconds***

no cdp holdtime

default cdp holdtime

Syntax Description

seconds	Hold time value to be sent in the CDP update packets in seconds.

Command Default

180 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

CDP packets are sent with a time to live, or hold time, value. The receiving device will discard the CDP information in the CDP packet after the hold time has elapsed.

You can set the hold time lower than the default setting of 180 seconds if you want the receiving devices to update their CDP information more rapidly.

The specified CDP hold time must be greater than the time between CDP transmissions, which is set using the **cdp timer** command.

Authorization: admin

Examples

The following example sets the CDP hold time to 60 seconds.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#cdp holdtime 60
SCE8000(config)#
```

Related Commands

Command	Description
cdp run	Enables Cisco Discovery Protocol (CDP) globally.
cdp enable	Enables Cisco Discovery Protocol (CDP) on a specific traffic interface.
cdp timer	Specifies how often the Cisco SCE 8000 platform sends CDP updates.
show cdp	Displays the current CDP configuration.

cdp mode

Sets the Cisco Discovery Protocol (CDP) mode on the Cisco SCE 8000 platform.

To reset the CDP mode to the default mode (bypass) use the **default** form of the command.

cdp mode (standard | monitor | bypass)

default cdp mode

Syntax Description

standard	Standard CDP operation. CDP packets are received and processed, as well as generated. In this mode CDP functions as it does on a typical Cisco device. This mode should be used in most cases, even though it is not the default mode.
bypass (default)	CDP packets are received and transmitted unchanged on the corresponding interface. Received packets are not processed. No packets are generated. In this mode, 'bump-in-the-wire' behavior is applied to CDP packets. This is the backward compatible mode, equivalent to not having CDP support.
monitor	CDP packets are received, processed, and transmitted unchanged. CDP packets are analyzed and CDP neighbor information is available. No packets are generated. In this mode 'bump-in-the-wire' behavior is applied to CDP packets. This mode may be confusing to operators and network management tools, since it is contrary to the concept of CDP as a physical link protocol.

Command Default

Bypass

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

The Cisco SCE 8000 is usually installed as a bump-in-the-wire device, and therefore forwards packets (including CDP packets) from one interface to the corresponding interface, whereas a typical Cisco device never forwards CDP packets from one interface to another interface. Therefore, the Cisco SCE 8000 extends the enabled state with three different CDP modes, allowing it to either function as a typical CDP device, or to only monitor the CDP packets, or to bypass them altogether.

Note When CDP is either not running or disabled at the interface level, CDP packets are discarded and CDP packets are not generated, regardless of the CDP mode.

Table 2-3 CDP Modes in the Cisco SCE 8000

CDP Mode	"cdp run" AND "cdp enable"	"no cdp run" OR "no cdp enable"
Standard	Received CDP packets processed CDP packets generated	Received CDP packets discarded CDP packets not generated
Bypass (Default)	Received CDP packets bypassed (not processed) CDP packets not generated	Received CDP packets discarded CDP packets not generated
Monitor	Received CDP packets processed and bypassed CDP packets not generated	Received CDP packets discarded CDP packets not generated

Caution In cascade topologies, both SCE 8000 platforms must be configured to the same CDP mode.

Authorization: admin

Examples

The following example illustrates how to set the CDP to "standard" so that CDP functions on the Cisco SCE 8000 platform like it does on a typical Cisco device.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#cdp mode standard
SCE8000(config)#
```

Related Commands

Command	Description
cdp run	Enables Cisco Discovery Protocol (CDP) globally.
cdp enable	Enables Cisco Discovery Protocol (CDP) on a specific traffic interface.
show cdp	Displays the current CDP configuration.

cdp run

Enables Cisco Discovery Protocol (CDP) globally on the Cisco SCE 8000 platform. Use the **no** form of the command to disable CDP.

cdp run

no cdp run

Syntax Description

This command has no arguments or keywords.

Command Default

By default, CDP is enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

By default, CDP is enabled on the Cisco SCE 8000. If you prefer not to use the CDP device discovery capability, use the **no cdp run** command to disable it.

By default, when CDP is enabled, it is enabled on all traffic interfaces. To disable CDP on a specific interface, use the **no cdp enable** command in interface configuration mode.

Note By default, when you enable CDP, it is set to bypass mode. To change the mode, use the **cdp mode** command.

Authorization: admin

Examples

The following example illustrates how to disable CDP.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no cdp run
SCE8000(config)#
```

Related Commands

Command	Description
cdp mode	Sets the CDP mode.
cdp enable	Enables Cisco Discovery Protocol (CDP) on a specific traffic interface.
show cdp	Displays the current CDP configuration.

cdp timer

Specifies how often the Cisco SCE 8000 platform sends Cisco Discovery Protocol (CDP) updates.

Use either the **no** or the **default** form of the command to restore the timer to the default value (60 seconds).

cdp timer

no cdp timer

default cdp timer

Syntax Description

seconds	How often the Cisco SCE 8000 platform sends CDP updates, in seconds.

Command Default

60 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Adjust the value to balance the advantage of more up-to-date CDP information with the increased bandwidth required for more frequent transmissions.

The specified CDP timer value must be less than the hold time value sent in the CDP updated packets, which is set using the **cdp holdtime** command.

Authorization: admin

Examples

The following example sets the timer value to 80 seconds.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#cdp timer 80
SCE8000(config)#
```

Related Commands

Command	Description
cdp run	Enables Cisco Discovery Protocol (CDP) globally.
cdp enable	Enables Cisco Discovery Protocol (CDP) on a specific traffic interface.
cdp holdtime	Specifies the amount of time the receiving device should hold a CDP packet from the Cisco SCE 8000 before discarding it.
show cdp	Displays the current CDP configuration.

clear arp-cache

Deletes all dynamic entries from the ARP cache. The Address Resolution Protocol (ARP) is a TCP/IP protocol that converts IP addresses to physical addresses. Dynamic entries are automatically added to and deleted from the cache during normal use. Entries that are not reused age and expire within a short period of time. Entries that are reused have a longer cache life.

clear arp-cache

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the ARP cache:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear arp-cache
SCE8000#
```

Related Commands

Command	Description
clear interface linecard mac-resolver arp-cache	Clears all the MAC addresses in the MAC resolver database.

clear cdp counters

Resets the Cisco Discovery Protocol (CDP) traffic counters to zero.

clear cdp counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example illustrates how to use this command. The **show cdp traffic** output shows that all of the traffic counters have been reset to zero.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear cdp counters
SCE8000#show cdp traffic
CDP counters:
        Total packets output: 0, Input: 0
        Hdr syntax: 0, Chksum error: 0, Encaps failed: 0
        No memory: 0, Invalid packet: 0, Fragmented: 0
        CDP version 1 advertisements output: 0, Input: 0
        CDP version 2 advertisements output: 0, Input: 0
SCE8000#
```

Related Commands

Command	Description
clear cdp table	Clears the table that contains CDP information about neighbors.
show cdp traffic	Displays the CDP traffic counters.

clear cdp table

Clears the table that contains Cisco Discovery Protocol (CDP) information about neighbors.

clear cdp table

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example illustrates how to use this command. The output of the **show cdp neighbors** command shows that all information has been deleted from the table.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear cdp table
SCE8000#show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
S - Switch, H - Host, I - IGMP
Device ID        Local Intrfce     Holdtme    Capability  Platform  Port I
SCE8000#
```

Related Commands

Command	Description
clear cdp counters	Resets the CDP traffic counters to zero.
show cdp neighbors	Displays the table that contains CDP information about neighbors.

clear diameter counters

Resets all diameter stack message statistics.

clear diameter counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000> enable 10
Password: <cisco>
SCE8000# clear diameter counters
SCE8000#
```

Related Commands

Command	Description
show diameter counters	Displays stack message statistics.

clear diameter Gx counters

Resets all Gx application message statistics.

clear diameter Gx counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear diameter Gx counters
SCE8000#
```

Related Commands

Command	Description
show diameter Gx counters	Displays Gx message statistics.

clear diameter Gy counters

Resets Gy application counters.

clear diameter Gy counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear diameter Gy counters
SCE8000#
```

Related Commands

Command	Description
show diameter Gy counters	Displays Gy counters.

clear interface linecard counters

Clears the line card interface counters.

clear interface linecard *slot-number* **counters**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the counters for line card 0:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 counters
SCE8000#
```

Related Commands

Command	Description
show interface linecard counters	Displays the hardware counters for the line card interface.

clear interface linecard flow-filter

Clears all flow filter rules for the specified partition.

clear interface linecard *slot-number* **flow-filter partition name** *name*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the partition for which to clear the flow filter rules.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>clear interface linecard 0 flow-filter partition name partition_1
SCE8000#>
```

Related Commands

Command	Description
show interface linecard flow-filter	Displays data relating to flow filtering.

clear interface linecard mac-resolver arp-cache

Clears all the MAC addresses in the MAC resolver database.

clear interface linecard *slot-number* **mac-resolver arp-cache**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 mac-resolver arp-cache
SCE8000#
```

Related Commands

Command	Description
clear arp-cache	Deletes all dynamic entries from the ARP cache.
mac-resolver arp	Adds a static IP entry to the MAC resolver database.
show interface linecard mac-resolver arp	Displays a listing of all IP addresses and corresponding MAC addresses currently registered in the MAC resolver database.

clear interface linecard subscriber anonymous all

Clears all anonymous subscribers in the system.

clear interface linecard *slot-number* **subscriber anonymous all**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	Updated to include IPv6 anonymous subscribers.

Usage Guidelines

Authorization: admin

Caution Because the **clear interface linecard subscriber anonymous all** command clears all the anonymous subscribers in the system, do not use the command in a production environment. Using this command in a production environment impacts anonymous subscribers' accountability. Use the command only when the linecard interface is shut down.

Examples

The following example shows how to clear all anonymous subscribers:

```
SCE8000>enable 10
Password: <cisco>
SCE8000# clear interface linecard 0 subscriber anonymous all
SCE8000#
```

Related Commands

Command	Description
no subscriber	Removes a specified subscriber from the system.
no subscriber anonymous-group	Deletes the anonymous group or removes it from the specified SCMP destination.
show interface linecard subscriber anonymous	Displays the subscribers in a specified anonymous subscriber group.

clear interface linecard subscriber db counters

Clears the "total" and "maximum" subscriber database counters.

clear interface linecard *slot-number* **subscriber db counters**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear all anonymous subscribers:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 subscriber db counters
SCE8000#
```

Related Commands

Command	Description
show interface linecard subscriber db counters	Displays the subscriber database counters.

clear interface linecard TpReportCounters

To clear the following reports that are displayed, use the **clear interface linecard TpReportCounters** command in the user EXEC mode:

- Total Number of Reports generated
- Number of Reports successfully sent to the Control Processor(CP)
- Number of Reports dropped at the corresponding Traffic Processor(TP)

clear interface lineCard *slot-number* **TpReportCounters**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is admin.

Examples

The following is sample output from the **clear interface linecard TpReportCounters** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000>clear interface linecard 0 TpReportCounters
SCE8000>
```

Related Commands

Command	Description
show interface lineCard *slot-number* **TpReportCounters**	Displays the total number of RDR reports generated, reports successfully sent to the CP and reports dropped at the corresponding TP.

clear interface linecard traffic-counter

Clears the specified traffic counter.

clear interface linecard *slot-number* **traffic-counter** {*name* | **all**}

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the traffic counter to be cleared.
all	Clears all traffic counters.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the traffic counter named counter1:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 traffic-counter name counter1
SCE8000#
```

Related Commands

Command	Description
show interface linecard traffic-counter	Displays information of a specified traffic counter.
traffic-counter	Defines a new traffic counter

clear interface linecard vas-traffic-forwarding vas counters health-check

Clears the VAS health check counters. Use the all keyword to clear counters for all VAS servers.

clear interface linecard ***slot-number*** **vas-traffic-forwarding vas server-id** ***number*** **counters health-check**

clear interface linecard ***slot-number*** **vas-traffic-forwarding vas all counters health-check**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.
number	ID number of the specified VAS server for which to clear the counters.

Command Default

This command has no default settings.

Command Modes

Privilege Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use the **all** keyword to clear counters for all VAS servers.

Authorization: admin

Examples

This example illustrates how to clear the health check counters for all VAS servers.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 vas-traffic-forwarding vas all counters health-check
SCE8000#
```

Related Commands

Command	Description
vas-traffic-forwarding vas server-id health-check	Enables or disables the VAS health check, and defines the ports it should use.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

clear interface linecard vpn

Removes VLAN VPNs that were created automatically by the Cisco SCE platform.

clear interface linecard ***slot-number*** **vpn automatic**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.

Command Default

This command has no default settings.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example illustrates the use of this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface linecard 0 vpn automatic
SCE8000#
```

clear interface range

Clears all the specified interfaces.

clear interface range *interface-type [sce-id/]bay-range/interface-range*

Syntax Description

interface-type	For the Cisco SCE 8000 10GBE, enter a value of ***tengigabitethernet***. For the Cisco SCE 8000 GBE traffic ports (in bays 0 and 1), enter a value of ***gigabitethernet***. For the Cisco SCE 8000 GBE cascade ports (in bays 2 and 3), enter a value of ***tengigabitethernet***.
bay-range	For the Cisco SCE 8000 10GBE, specify the range of bays in the format *bay1-bay2,* where the overall range of possible bay numbers is 0-3. For the Cisco SCE 8000 GBE traffic ports, enter a value of *0*, *1*, or *0-1*. For the Cisco SCE 8000 GBE cascade ports, enter a value of *2*, *3*, or *2-3*.
interface-range	For the Cisco SCE 8000 10GBE, enter a value of 0 (cannot be a range). For the Cisco SCE 8000 GBE traffic ports, specify the range of ports in the format *port1-port2*, where the overall range of possible port numbers is 0 to 7. For the Cisco SCE 8000 GBE cascade ports, enter a value of 0 (cannot be a range).
sce-id	In an installation of two cascaded SCE 8000 GBE platforms, identifies the specific SCE platform of the cascaded pair. Enter a value of *0* or *1*.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

The **clear interface range** command clears a group of interfaces with one command, with the limitation that all the interfaces in the group must be of the same physical and logical type.

- For the Cisco SCE 8000 10GBE platform, use the following command syntax:

  clear interface range t*engigabitethernet* *sce-id/bay-range/**0***

- For the Cisco SCE 8000 GBE platform traffic ports, use the following command syntax (the bay numbers are in the range of 0-1):

  clear interface range *gigabitethernet* *sce-id/bay-range/interface-range*

- For the Cisco SCE 8000 GBE cascade ports, use the following command syntax (the bay numbers are in the range of 2-3):

  clear interface range ***tengigabitethernet*** *sce-id/bay-range****/0***

Authorization: admin

Examples

The following example shows how to clear all the traffic interfaces in SCE 8000 platform 1 of a cascaded SCE 8000 GBE system:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface range gigabitethernet 1/0-1/0-7
SCE8000#
```

The following example shows how to clear the cascade interfaces in the same SCE 8000 GBE platform:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface range tengigabitethernet 1/2-3/0
SCE8000#
```

The following example shows how to clear all the interfaces in SCE 8000 platform 1 of a cascaded SCE 8000 10GBE system:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear interface range tengigabitethernet 1/0-3/0
SCE8000#
```

Related Commands

Command	Description
show interface linecard counters	Displays the hardware counters for the line card interface.

clear logger

Clears the Cisco SCE platform logger (user log files). This operation erases the information stored in the user log files.

clear logger device {user-file-log | line-attack-file-log} [counters | nv-counters]

Syntax Description

device	Device name to be cleared. Choose **user-file-log** or **line-attack-file-log**.
counters	Clears the couters of the Cisco SCE platform logger.
nv-counters	Clears the nonvolatile counters for the entire log or for only the specified SCE platform.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The user log files have a size limit, with new entries overwriting the oldest entries, so you do not need to regularly clear the log files. Use this operation when you are certain that the information contained in the logs is irrelevant and might be confusing (for example, when reinstalling the system at a new site whose administrators do not need old information).

- The **counters** keyword clears the counters of the Cisco SCE platform logger (user log files). These counters keep track of the number of info, warning, error, and fatal messages.
- The **nv-counters** keyword clears the nonvolatile counters for the entire log or for only the specified SCE platform. These counters are not cleared during bootup, and must be cleared explicitly by using this command.

Authorization: admin

Examples

The following example shows how to clear the Cisco SCE platform user log file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear logger device user-file-log
Are you sure? Y
SCE8000#
```

The following example shows how to clear the Cisco SCE platform user log file counters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear logger device user-file-log counters
Are you sure? Y
SCE8000#
```

The following example shows how to clear the user log file nonvolatile counters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear logger device user-file-log nv-counters
Are you sure? Y
SCE8000#
```

Related Commands

Command	Description
show logger device	Displays the configuration of the specified SCE platform logger file.
show log	Displays the contents of the user log file.

clear management-agent notifications counters

Clears the counters for the number of notifications sent to the management agent

clear management-agent notifications counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the management agent notifications counters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear management-agent notifications counters
SCE8000#
```

clear rdr-formatter

Clears the RDR formatter counters and statistics.

clear rdr-formatter

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the RDR formatter counters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear rdr-formatter
SCE8000#
```

Related Commands

Command	Description
show rdr-formatter counters	Displays the RDR formatter counters.

clear scmp name counters

Clears the counters for the specified SCMP peer device.

clear scmp name *name* **counters**

Syntax Description

name	Name of the SCMP peer device.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to clear the counters for the SCMP peer device named device_1:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clear scmp name device_1 counters
SCE8000#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.

clock read-calendar

Synchronizes clocks by setting the system clock from the calendar.

clock read-calendar

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to update the system clock from the calendar:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clock read-calendar
SCE8000#
```

Related Commands

Command	Description
calendar set	Sets the system calendar.
clock update-calendar	Synchronizes clocks by setting the calendar from the system clock.
show calendar	Displays the time maintained by the real-time system calendar clock.

clock set

Manually sets the system clock.

clock set *hh:mm:ss day month year*

Syntax Description

hh:mm:ss	Current local time in hours in 24-hour format, minutes, and seconds (hh:mm:ss).
day	Current day (date) in the month.
month	Current month (by 3-letter abbreviated name).
year	Current year using a 4-digit number.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Always coordinate between the calendar and clock by using the **clock update-calendar** command after setting the clock.

Authorization: admin

Examples

The following example shows how to set the clock to 20 minutes past 10 p.m. on January 13, 2006:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clock set 22:20:00 13 jan 2006
SCE8000#clock update-calendar
SCE8000#show clock
22:21:10 UTC THU January 13 2006
SCE8000#show calendar
22:21:18 UTC THU January 13 2006
SCE8000#
```

Related Commands

Command	Description
clock update-calendar	Synchronizes clocks by setting the calendar from the system clock.
show calendar	Displays the time maintained by the real-time system calendar clock.
show clock	Displays the time maintained by the system clock.

clock summertime

Configures the Cisco SCE platform to automatically switch to daylight saving time on a specified date, and also to switch back to standard time. In addition, the time-zone code can be configured to vary with daylight saving time if required. (For example, in the eastern United States, standard time is designated as EST, and daylight saving time is designated as EDT).

To cancel the daylight saving time transitions configuration, use the **no** form of this command.

clock summertime

no clock summertime

Syntax Description

zone	Code for the time zone for daylight saving time.
week1/week2	Week of the month on which daylight saving time begins (week1) and ends (week2). A day of the week, such as Monday, must also be specified. The week/day of the week is defined for a recurring configuration only. Default: Not used
day1/day2	Day of the week on which daylight saving time begins (day1) and ends (day2). For recurring configurations, *day* is a day of the week, such as Sunday. (Use the **first and last keywords** to specify the occurrence of a day of the week in a specified month. For example, last Sunday March.) For nonrecurring configurations, *day* is a date in the month, such as 28. Defaults: *day1* is second Sunday, *day2* is first Sunday
month1/month2	Month in which daylight saving time begins (month1) and ends (month2). Defaults: *month1* is March, *month2* is November
year1/year2	Year in which daylight saving time begins (year1) and ends (year2). For nonrecurring configurations only. Default: Not used
time1/time2	Time of day (24-hour clock) at which daylight saving time begins (time1) and ends (time2). Required for all configurations. Default: *time1* and *time2* is 2:00
offset	Difference in minutes between standard time and daylight saving time. Default: 60

Command Default

For recurring configurations, *offset* is 60 minutes.

The following recurrent time changes are configured:

- Daylight saving time begins at 2:00 (a.m.) on the second Sunday of March.
- Daylight saving time ends at 2:00 (a.m.) on the first Sunday of November.

Command Modes Global configuration

Command History This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines The format of the command varies somewhat, depending on how the dates for the beginning and end of daylight saving time are determined for the particular location:

- If daylight saving time always begins and ends on the same day every year (recurring, as in the United States):
  - Use the **clock summertime recurring** command.
  - Do not specify the **year** keyword.
- If the start and end of daylight saving time is different every year (not recurring, as in Israel):
  - Use the **clock summertime** command.
  - Specify the **year** keyword.

Authorization: admin

General Guidelines

The following guidelines apply to configuring daylight saving time transitions:

- Specify the time-zone code for daylight saving time.
- For recurring configurations, specify a day of the month (week number/**first**|**last**/day of the week/month).
- For nonrecurring configurations, specify a date (month/day of the month/year).
- Define two days:
  - *day1* is the beginning of daylight saving time.
  - *day2* is the end of daylight saving time.
- In the Southern hemisphere, *month2* must be earlier than *month1*, because daylight saving time begins in the fall and ends in the spring.
- Specify the exact time that the transition should occur (24-hour clock):
  - Time of transition into daylight saving time, according to local standard time
  - Time of transition out of daylight saving time, according to local daylight saving time

Recurring Configurations

For the **clock summertime recurring** command, the default values are the United States transition rules:

- Daylight saving time begins at 2:00 (a.m.) on the second Sunday of March.
- Daylight saving time ends at 2:00 (a.m.) on the first Sunday of November.

Use the **recurring** keyword if daylight saving time always begins and ends on the same day every year.

Specifying Explicit Days

To specify the occurrence of a day of the week in a specified month, use the **first and last** keywords. For example, last Sunday March.

For a nonrecurring configuration, use a specific date, including the year. For example, March 29, 2004.

For a recurring configuration, use week/day of the week/month (no year):

- Use the first or last occurrence of a day of the week in a specified month. For example, last Sunday March (the last Sunday in March).
- Use the day of the week in a specific week in a specified month. For example, 4 Sunday March (the fourth Sunday in March). This day is different from the last Sunday of a month that has five Sundays.

Examples

The following examples show how to use this command.

Example 1

The following example shows how to configure recurring daylight saving time for a time zone designated as DST:

- Daylight saving time begins at 0:00 on the last Sunday of March.
- Daylight savings time ends at 23:59 on the Saturday of the fourth week of November.
- Offset is 1 hour (default).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#clock summertime DST
recurring last Sunday March 00:00 4 Saturday November 23:59
SCE8000(config)#
```

Example 2

The following example shows how to configure nonrecurring daylight saving time for a time zone designated as DST:

- Daylight savings time begins at 0:00 on April 16, 2007.
- Daylight savings time ends at 23:59 October 23, 2007.
- Offset is 1 hour (default).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#clock summertime DST April 16 2005 00:00 October 23 2005 23:59
SCE8000(config)#
```

Example 3

The following example shows how to cancel the daylight saving time configuration:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no clock summertime
SCE8000(config)#
```

Related Commands

Command	Description
clock set	Manually sets the system clock.
calendar set	Sets the system calendar.
show calendar	Displays the time maintained by the real-time system calendar clock.
show clock	Displays the time maintained by the system clock.

clock timezone

Sets the time zone so that the system can correctly interpret time-stamp data coming from systems located in other time zones.

To remove current time zone settings, use the **no** form of this command.

clock timezone *zone hours [minutes]*

no clock timezone

Syntax Description

zone	Name of the time zone to be displayed.
hours	Hours offset from UTC. This number must be an integer ranging from –23 to 23.
minutes	Minutes offset from UTC. This number must be an integer ranging from 0 to 59. Use this argument to specify an additional offset in minutes when the offset is not measured in whole hours.

Command Default

UTC (hours = 0)

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the time zone to Pacific Standard Time with an offset of 10 hours behind UTC:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#clock timezone PST -10
SCE8000(config)#
```

Related Commands

Command	Description
calendar set	Sets the system calendar.
clock set	Manually sets the system clock.
show calendar	Displays the time maintained by the real-time system calendar clock.

clock update-calendar

Synchronizes clocks by setting the calendar from the system clock.

clock update-calendar

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to update the calendar according to the clock:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#clock update-calendar
SCE8000#
```

Related Commands

Command	Description
clock set	Manually sets the system clock.
calendar set	Sets the system calendar.
clock read-calendar	Synchronizes clocks by setting the system clock from the calendar.

configure

Enables the user to move from Privileged EXEC mode to Global Configuration mode.

configure

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

After you enter the **configure** command, the system prompt changes from <*hostname*># to <*hostname*>(config)#, indicating that the system is in Global Configuration mode. To leave Global Configuration mode and return to the Privileged EXEC mode prompt, use the **exit** command.

Authorization: admin

Examples

The following example shows how to enter Global Configuration mode:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#
```

Related Commands

Command	Description
exit	Exits from the current mode to the next “lower” mode.

connection-mode

Sets the connection mode parameters.

connection-mode *connection-mode* **sce-id** *sce-id* **priority** *priority* **on-failure** *on-failure*

Syntax Description

connection-mode	Establishes the connection: • **inline**—Single SCE platform inline • **receive-only**—Single SCE platform receive-only • **inline-cascade**—(Cascaded SCE platform topology only) Two SCE platforms inline • **receive-only-cascade**—(Cascaded SCE platform topology only) Two SCE platforms receive-only
sce-id	(Cascaded SCE platform topology only) Number that identifies the Cisco SCE platform in a cascaded pair. Choose **0** or **1**. In a pair of cascaded SCE 8000 GBE platforms, this number allows the system to identify the traffic links, with links 0 to 7 connected through one SCE platform and links 8 to 15 on the other. These link numbers are used in the SCA BB Reporter reports as well as in the Global Control configuration menu in the SCA BB console.
priority	(Cascaded SCE platform topology only) Defines the primary SCE platform. Choose **primary or secondary.**
on-failure	(Inline topologies only) Determines system behavior on failure of the Cisco SCE platform. Choose **bypass, cutoff, or external-bypass.**

Command Default

The default for *connection-mode* is **inline**.

The default for *sce-id* is 0.

The default for *priority* is **primary**.

The defaults for *on-failure* are:

- **external-bypass** for inline mode.
- **bypass** for inline-cascade mode.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Caution This command can be used only if the line card is in either **no-application** or **shutdown** mode.

Note The *sce-id* argument, which identifies the Cisco SCE platform, replaces the *physically-connected-link* argument, which identified the link. This change was required with the introduction of the Cisco SCE 8000 GBE platform, which supports multiple links. However, for backward compatibility, the *physically-connected-link* argument is still recognized and the number of the link assigned to that argument (0 or 1) is defined as the Cisco SCE ID.

Authorization: admin

Examples

The following example shows how to configure the primary SCE 8000 platform in a two-SCE platform inline topology. This device is designated as SCE platform 0, and the behavior of the Cisco SCE platform if a failure occurs is bypass (default).

```
SCE8000>enable 10
Password: <cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#connection-mode inline-cascade sce-id 0 priority primary on-failure
bypass
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard connection-mode	Displays the current configuration of the Cisco SCE platform traffic-link connection.
show interface linecard physically-connected- links	Displays the link mapping for the line card interface.
show interface linecard cascade connection-status	Displays information about the connection between two cascaded SCE 8000 platforms, using the cascade interfaces.
show interface linecard cascade peer-sce-information	Displays information about the peer SCE platform.

copy

Copies any file from a source directory to a destination directory on the local flash file system.

copy *source-file destination-file*

Syntax Description

source-file	Name of the original file.
destination-file	Name of the new destination file.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Both filenames should be in 8.3 format, that is, the names have a maximum of eight characters before the period and three characters after it.

Authorization: admin

Examples

The following example shows how to copy the local analysis.sli file located in the root directory to the applications directory:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy analysis.sli applications/analysis.sli
SCE8000#
```

Related Commands

Command	Description
copy ftp://	Uploads or downloads a file system using FTP.
copy-passive	Uploads or downloads a file using passive FTP.

copy ftp://

Uploads or downloads a file system using FTP.

copy ftp://*username[:password]@server-address[:port]/path/source-file destination-file*

copy *source-file* **ftp://***username[:password]@server-address[:port]/path/destination-file*

Syntax Description

username	Username known by the FTP server.
password	Password of the given username.
server-address	Dotted decimal IP address of the FTP server.
port	(Optional) Port number on the FTP server.
source-file	Name of the source file. When downloading a file, this source must be an FTP location.
destination-file	Name of the destination file. When uploading a file, this destination must be an FTP location. When downloading a file to the local flash file system, this filename should be in 8.3 format.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the following syntax for remote upload or download using FTP:

ftp://*username[:password]@server-address[:port]/path/file*

You can configure keyword shortcuts for the **copy** command using the following commands:

- **ip ftp password** to configure a password shortcut
- **ip ftp username** to configure a username shortcut

Authorization: admin

Examples

The following example shows how to download the ftp.sli file from the host 10.10.10.10 with the username user and the password a1234:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy ftp://user:a1234@10.10.10.10/p:/applications/ftp.sli appl/analysis.sli
SCE8000#
```

Related Commands

Command	Description
copy-passive	Uploads or downloads a file using passive FTP.
ip ftp password	Specifies the password to be used for FTP connections for the current session.
ip ftp username	Configures the username for FTP connections for the current session.

copy-passive

Uploads or downloads a file using passive FTP.

copy-passive *source-file* ***ftp://****username[:password]@server-address[:port]/path/destination-file* **[overwrite]**

copy-passive ***ftp://****username[:password]@server-address[:port]/path/source-file destination-file*

Syntax Description

source-file	Name of the source file. When downloading a file, this source must be an FTP location.
username	Username known by the FTP server.
password	Password of the given username.
server-address	Dotted decimal IP address.
port	(Optional) Port number on the FTP server.
destination-file	Name of the destination file. When uploading a file, this destination must be an FTP location.
overwrite	Allows the command to overwrite an existing file.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the following syntax for remote upload or download using FTP:

ftp://*username[:password]@serveraddress[:port]/path/file*

You can configure keyword shortcuts for the **copy** command using the following commands:

- **ip ftp password** to configure a password shortcut
- **ip ftp username** to configure a username shortcut

Authorization: admin

Examples

The following example shows how to download the analysis.sli file from the host 10.10.10.10 with the username user and the password a1234:

```
SCE8000>enable 10
Password:<cisco>0
SCE8000#copy-passive ftp://user:a1234@10.10.10.10/p:/applications/analysis.sli
appl/analysis.sli
SCE8000#
```

Related Commands

Command	Description
copy ftp://	Uploads or downloads a file system using FTP.
ip ftp password	Specifies the password to be used for FTP connections for the current session.
ip ftp username	Configures the username for FTP connections for the current session.

copy running-config-application startup-config-application

To enable the task of copying the currently running configuration application to the startup configuration application in the Cisco SCE platform, use the **copy running-config-application startup-config-application** command in the privileged EXEC mode.

copy running-config-application startup-config-application

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **copy running-config-application startup-config-application** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>copy running-config-application startup-config-application
Writing application configuration file to temporary location...
Removing old application configuration file...
Renaming temporary application configuration file with the final file's name...
SCE8000#>
```

Related Commands

Command	Description
more running-config-all	Displays the contents of all the currently running configuration files.
more running-config-application	DisplayS the contents of the currently running configuration application in the Cisco SCE platform.
more startup-config-all	Displays the contents of all the startup configuration files.
more startup-config-application	DisplayS the contents of the startup configuration application files in the Cisco SCE platform
show running-config-all	Displays the contents of all the running configuration files.
show running-config-application	Displays the contents of the currently running configuration application in the Cisco SCE platform.
show startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-application	Displays the contents of the startup configuration application files in the Cisco SCE platform.

copy running-config-party-db startup-config-party-db

To enable the task of copying the currently running configuration party database to the startup configuration party database of the static parties that are configured on the Cisco SCE platform, use the **copy running-config-party-db startup-config-party-db** command in the privileged EXEC mode.

copy running-config-party-db startup-config-party-db

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **copy running-config-party-db startup-config-party-db** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>copy running-config-party-db startup-config-party-db
SCE8000#>show startup-config-party-db
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:53  UTC  TUE  July  12  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
show running-config-all	Displays the contents of all the running configuration files.
show running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured on the Cisco SCE platform.
show startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-party-db	Displays the startup party database configuration of the static parties that are configured on the Cisco SCE platform.

copy running-config startup-config

Builds a configuration file called *config.txt* that contains general configuration commands. This file is used in successive boots.

copy running-config startup-config

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

This command must be entered to save newly configured parameters so that they will be effective after a reboot. To view the running configuration before saving it, use the **more running-config** command.

The old configuration file is automatically saved in the */system/prevconf* directory.

Authorization: admin

Examples

The following example shows how to save the current configuration for successive boots:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy running-config startup-config
Backing-up configuration file...
Writing configuration file...
SCE8000#
```

Related Commands

Command	Description
more	Displays the contents of a file.
show running-config	Displays the current configuration.

copy *source-file* ftp://

Uploads a file to a remote station using FTP.

copy *source-file* ***ftp://****username[:password]@server-address[:port]/path/destination-file*

Syntax Description

source-file	Name of the source file located in the local flash file system.
username	Username known by the FTP server.
password	Password of the given username.
server-address	Dotted decimal IP address.
port	(Optional) Port number on the FTP server.
destination-file	Name of the file to be created in the FTP server.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the following syntax for remote upload or download using FTP:

ftp://*username[:password]@serveraddress[:port]/path/file*

You can configure keyword shortcuts for the **copy** command using the following commands:

- **ip ftp password** to configure a password shortcut
- **ip ftp username** to configure a username shortcut

Authorization: admin

Examples

The following example shows how to upload the analysis.sli file located on the local flash file system to the host 10.1.1.105:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy /appl/analysis.sli ftp://myname:mypw@10.1.1.105/p:/applications/analysis.sli
SCE8000#
```

Related Commands

Command	Description
copy ftp://	Uploads or downloads a file system using FTP.

copy *source-file* startup-config

Copies the specified source file to the startup-config file.

The command uploads a backup configuration file created using the **copy startup-config destination-file** command. In a cascaded solution, you can copy the configuration from one SCE platform to the other.

copy *source-file* **startup-config**

Syntax Description

source-file	Name of the backup configuration file. Choose either: • ***ftp://****user:pass@host/drive:/dir/bckupcfg.txt* • */system/preconf*

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The source filename should be in 8.3 format, that is, the names have a maximum of eight characters before the period and three characters after it.

Authorization: admin

Examples

The following example shows how to upload a backup configuration file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy ftp://user:pass@host/drive:/dir/bakupcfg.txt startup-config
SCE8000#
```

Related Commands

Command	Description
copy startup-config destination-file	Copies the startup-config file to the specified destination file.

copy startup-config *destination-file*

Copies the startup-config file to the specified destination file.

The command creates a backup configuration file. In a cascaded solution, you can copy the configuration from one SCE platform to the other. The file created by this command can be uploaded to the second SCE platform using the **copy source-file startup-config** command.

copy startup-config ***destination-file***

Syntax Description

destination-file	Name of the file to which the configuration is copied. Choose either: • ***ftp://****user:pass@host/drive:/dir/bckupcfg.txt* • */system/prevconf*

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The destination filename should be in 8.3 format, that is, the names have a maximum of eight characters before the period and three characters after it.

Authorization: admin

Examples

The following example shows how to create a backup configuration file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy startup-config ftp://user:pass@host/drive:/dir/bckupcfg.txt
SCE8000#
```

Related Commands

Command	Description
copy source-file startup-config	Copies the specified source file to the startup-config file.

copy startup-config-party-db *backupfile*

To enable the task of copying the startup configuration party database and create a backup file of the configured static parties in the Cisco SCE platform, use the **copy startup-config-party-db** *backup-file* command in the privileged EXEC mode.

copy startup-config-party-db *backup-file name*

Syntax Description

backup-file name	Name of the backup file to which the startup configuration party database is copied.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **copy startup-config-party-db backupfile** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>copy startup-config-party-db partydbcfgbackup.txt
SCE8000#>more partydbcfgbackup.txt
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:02 UTC TUE July 12 2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
more running-config-all	Displays the contents of all the currently running configuration files.
more startup-config-all	Displays the contents of all the startup configuration files.
show running-config-all	Displays the contents of all the currently running configuration files.
show running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured on the Cisco SCE platform.
show startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-party-db	Displays the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform.

cpa-client destination

Configures the destination CPA server.

cpa-client destination ***ip-address*** **port** ***port#***

no cpa-client destination

Syntax Description

ip-address	IP address of the destination CPA server.
port#	Port number of the CPA server.

Command Default

None

Command Modesl

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how configure the destination of the CPA client.

```
SCE8000>enable 10
password:<cisco>
SCE8000#>config
SCE8000(config)#interface linecard 0
SCE8000(config if)#cpa-client destination 10.10.10.20 port 135
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard cpa-client	Displays the current configuration of the CPA client.

cpa-client retries

Configures the number of retries to make if a request to the CPA server times out.

cpa-client retries ***number***

no cpa-client retries

Syntax Description

number	Number of retries to allow for the CPA server.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how configure the number of retries for the CPA client.

```
SCE8000>enable 10
password:<cisco>
SCE8000#>config
SCE8000(config)#interface linecard 0
SCE8000(config if)#cpa-client retries 5
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard cpa-client	Displays the current configuration of the CPA client.

debug const-db name CcConstDb.Party.maxNum128bitIps

Increases the DS-Lite table buffer size when the system is configured in 128-bit mode.

debug const-db name CcConstDb.Party.maxNum128bitIps value {*decimal}*

Syntax Description

decimal	Specifies the DS-Lite table buffer size. Suggested buffer size is 1000.

Command Default

By default, value is 0.

Command Modes

Global Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: root

If DS-Lite and IANA traffic has more than 100 K flows, configure the DSLite constdb to increase DS-Lite table size.

```
debug const-db name CcConstDb.Party.maxNum128bitIps value 1000
```

Examples

The following example shows how to increase the buffer table size:

```
SCE8000>enable 10
password:<cisco>
SCE8000#>config
SCE8000(config)#debug const-db name CcConstDb.Party.maxNum128bitIps value 1000
```

default subscriber template all

Removes all user-defined subscriber templates from the system. Only the default template remains.

default subscriber template all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to remove all user-defined subscriber templates:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# default subscriber template all
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber template import csv-file	Imports a subscriber template from the specified CSV file, according to the party template.
show interface linecard subscriber templates	Displays a specified subscriber template.

delete

Deletes a file from the local flash file system.

delete *filename* **[/recursive]**

Syntax Description

filename	Name of the file or directory to be deleted.
/recursive	Deletes a complete directory and its contents. When used with this switch, the *filename* argument specifies a directory rather than a file.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to delete the file oldlog.txt:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#delete oldlog.txt
SCE8000#
```

The following example shows how to delete the directory oldlogs:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#delete oldlogs /recursive
3 files and 1 directories will be deleted.
Are you sure? y
3 files and 1 directories have been deleted.
SCE8000#
```

Related Commands

Command	Description
dir	Displays the files in the current directory.
rmdir	Removes an empty directory.

diameter

Starts the diameter stack.

To stop the stack, use the **no** form of this command.

To reset the stack to the default state (stopped), use the **default** form of this command.

diameter

no diameter

default diameter

Syntax Description

This command has no arguments or keywords.

Command Default

Diameter stack is stopped.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Stopping the stack using this command is a brute force shutdown. All messages and states may be lost.

Authorization: admin

Examples

The following example shows how to stop the stack.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter
SCE8000(config)#
```

Related Commands

Command	Description
show diameter	Displays the current diameter stack state.

diameter Gx

Starts the Gx application.

To stop the Gx application, use the **no** form of this command.

diameter Gx

no diameter Gx

Syntax Description

This command has no arguments or keywords.

Command Default

Gx application is stopped.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to stop the Gx application.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter Gx
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application state.

diameter Gx failure-grace-time

Configures Gx detection time out. If no connection to any server is detected for the configured length of time, all diameter sessions are closed and a new connection must be established. The sessions will be reopened once a connection is reestablished.

To reset the grace period to the default, use the **default** form of this command.

diameter Gx failure-grace-time *time*

default Gx failure-grace-time

Syntax Description

time	Detection grace period in seconds.

Command Default

300 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter Gx failure-grace-time 360
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application configuration.

diameter Gx login-rate

Configures the maximum Gx login rate when only Gx is enabled.

To reset login-rate to the default value, use the **default** form of this command.

diameter Gx login-rate *login-rate*

default Gx login-rate

Syntax Description

login-rate	Maximum Gx login rate. Possible value range is from 360 to 456. The default value varies based on the Gx and Gy configuration. When Gy is enabled, the default value is 200 and when only Gx is enabled, the default value is 360. We recommend that you set a value more than 360 only for Gx integration. Revert to the default values for Subscriber Manager integration. You cannot configure the Gx login-rate if Gy is enabled. The default value changes to 200 when Gy is enabled on the device.

Command Default

This command is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.0.0	This command was introduced.

Usage Guidelines

Authorization: admin

This command is applicable when only Gx is enabled.

Examples

The following example shows how to use this command.

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# diameter Gx login-rate 400
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application configuration.

diameter Gx MIP Support

Enables multiple IP mapping for a Gx subscriber.

To disable the multiple IP mapping, use the no form of the command.

diameter Gx MIP-support

no diameter Gx MIP-support

Syntax Description

This command has no arguments or keywords.

Command Default

Diameter Gx MIP support is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

If MIP-support is enabled, a subscriber can have multiple IP mappings. When a subscriber with an IP mapping is logged in with an existing subscriber ID in Gx, the new IP mapping flow is logged out implicitly and the IP mapping is mapped to the existing subscriber ID.

If MIP-support is disabled, a subscriber can have only one mapping. When a new subscriber is logged in with an existing subscriber ID in Gx, the existing subscriber IP mapping is logged out and the subscriber is logged in with a new IP mapping.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000#> enable 10
Password: <cisco>
SCE8000#> configure

diameter Gx MIP-support
SCE8000(config)#> diameter Gx MIP-support
SCE8000(config)#> end
SCE8000#> show diameter Gx MIP-support

MIP SUPPORT IS ENABLED
SCE8000#
```

diameter Gx PCRF-connection-failure-grace-time

Configures the diameter Gx connection failure grace period.

To reset the grace period to the default, use the **default** form of this command.

diameter Gx pcrf-connection-failure-grace-time *time*

default diameter Gx pcrf-connection-failure-grace-time

Syntax Description

time	Grace period in seconds.

Command Default

150 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Failover functions as follows:

- If a connection fails and is reestablished within the failover grace period, no failover action is taken
- If a connection fails and is not reestablished within the failover grace period, failover action is taken.
- If a server fails, all its sessions remain open for the failover grace period. After that period has expired, all the server sessions are closed and reopened on secondary server.
- If a server fails on a system using session-sharing, no failover action is taken.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter Gx pcrf-connection-failure-grace-time 120
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application configuration.

diameter Gx peer-proxyagent

To enable the peer proxy agent in CCR messages for Gx, use the **diameter Gx peer-proxyagent** command.

Use the **no** form of the command to disable the peer proxy agent in CCR messages.

diameter Gx peer-proxyagent

no diameter Gx peer-proxyagent

Syntax Description

This command has no syntax or keywords.

Command Default

None.

Command Modes

CONFIG (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

Example 1

The following example shows how to enable peer proxy agent in CCR messages for Gx:

```
SCE8000> enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)# diameter Gx peer-proxyagent
```

Example 2

The following example shows how to disable peer proxy agent in CCR messages for Gx:

```
SCE8000> enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)# no diameter Gx peer-proxyagent
```

diameter Gx send-attributes

Configures the diameter Gx VSA attributes send mode.

Use the **no** form of command to change the mode to DONT_SEND.

diameter Gx send-attributes {always | on-change | on-initial}

Syntax Description

always	Sends the subscriber VSA attributes always.
on-change	Sends the subscriber VSA attributes on change.
on-initial	Sends the subscriber VSA attributes on initial.

Command Default

By default, the mode is DONT_SEND

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000#enable 10
password: <cisco>

SCE8000#configure
SCE8000(config)#diameter gx send-attributes on-initial
```

Examples

The following example shows how to use this command:

```
SCE8000#enable 10
password: <cisco>

SCE8000#configure
SCE8000(config)#no diameter gx send-attributes
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application configuration.

diameter Gx tx-timer

Configures the transmit timeout value for messages.

To reset the tx timeout to the default value, use the **default** form of this command.

diameter Gx tx-timer *time*

default diameter Gx tx-timer

Syntax Description

time	Timeout interval in seconds.

Command Default

5 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

If the PCRF does not respond to a Gx message in the configured tx-timer seconds, the message is considered timed out. The message is dumped if it arrives after tx-timer expires.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)# diameter Gx tx-timeout 20
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gx	Displays the current Gx application configuration.

diameter Gx virtual-gi multi-mapping

Configures multiple VLAN ID to a virtual Gi ID mapping.

diameter Gx virtual-gi multi-mapping {enable| disable| disable force}

Syntax Description

enable	Enables multiple VLAN ID to a virtual Gi ID mapping. Cisco SCE adds the new VLAN ID mapping to an existing VGi ID without overwriting the VLAN ID.
disable	Disables multiple VLAN ID to a virtual Gi ID mapping if no two or more VLAN IDs are configured to a VGi ID.
disable force	Disables multi-mapping configurations on the device and removes all multi-mapping configurations.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

Authorization: admin

When configuring a VLAN ID mapping to an already mapped virtual Gi ID, by default, the previous VLAN ID is overwritten because only one VLAN ID can be mapped to a virtual Gi ID.

Examples

The following example shows how to enable TACACS+ accounting for the admin privilege level (10):

Enable and configure multi-mapping:

```
SCE8000#>
SCE8000#> configure
SCE8000(config)#> diameter gx virtual-gi multi-mapping enable
SCE8000(config)#> end
SCE8000#> show diameter gx virtual-gi multi-mapping

Multiple VLAN ID to single VGi ID mapping supported
SCE8000#>
SCE8000#> configure
SCE8000(config)#> diameter gx virtual-gi vlan-id 1 mapping 100
SCE8000(config)#> diameter gx virtual-gi vlan-id 2 mapping 100
SCE8000(config)#> diameter gx virtual-gi vlan-id 3 mapping 100
SCE8000#>
```

```
SCE8000#> show diameter gx virtual-gi all
Virtual Gi Mapping Table:
---------------------
| VLAN | Mapping |
---------------------
| 1 | 100 |
| 2 | 100 |
| 3 | 100 |
---------------------
```

Disable multi-mapping:

```
SCE8000(config)#> diameter Gx virtual-gi multi-mapping disable
SCE8000(config)#> do show diameter gx virtual-gi multi-mapping
Multiple VLAN ID to single VGi ID mapping NOT supported
SCE8000(config)#>
```

Disable fails when multi-mapping is configured:

```
SCE8000(config)#> do show diameter gx virtual-gi all
Virtual Gi Mapping Table:
---------------------
| VLAN | Mapping |
---------------------
| 1 | 100 |
| 2 | 100 |
| 3 | 100 |
| 4 | 101 |
---------------------
SCE8000(config)#> diameter gx virtual-gi multi-mapping disable
Error - Cannot disable Multi Mapping option as multiple mappings existing; Use 'force'
option to remove all the multiple mappings and disable
```

Disable multi-mapping and remove all multi-mapping configurations:

```
SCE8000(config)#> do show diameter gx virtual-gi all
Virtual Gi Mapping Table:
---------------------
| VLAN | Mapping |
---------------------
| 1 | 100 |
| 2 | 100 |
| 3 | 100 |
| 4 | 101 |
---------------------
SCE8000(config)#> diameter gx virtual-gi multi-mapping disable force
SCE8000(config)#> do show diameter gx virtual-gi all
Virtual Gi Mapping Table:

diameter Gx virtual-gi multi-mapping
---------------------
| VLAN | Mapping |
---------------------
| 4 | 101 |
---------------------
SCE8000(config)#>
SCE8000(config)#> do show diameter gx virtual-gi multi-mapping
Multiple VLAN ID to single VGi ID mapping NOT supported
SCE8000(config)#>
```

diameter gx virtual-gi vlan-id

Configures the mapping of VLAN ID to virtual Gi ID.

To disable the configuration or to remove the mapping, use the no form of this command.

diameter gx virtual-gi vlan-id *vlan-id* mapping *value*

no diameter gx virtual-gi mapping vlanid *vlan-id*

no diameter gx virtual-gi mapping vgi-id *vgi-id*

no diameter gx virtual-gi mapping all

Syntax Description

vlan-id	VLAN tag (1-4094) to be mapped to virtual Gi ID.
value	Virtual Gi ID (1-255) mapped to a VLAN ID.
vgi-id	Specifies to remove Virtual Gi ID.
vgi-id	Virtual Gi ID (1-255) to be removed.
all	Removes all configured mappings.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.
3.7.x	This command was modified.
4.1.0	This command was modified to add new VLAN ID mapping to an existing VGi ID when multiple VLAN-ID to VGi ID mapping is enabled.

Usage Guidelines

The VLAN ID (1-4094) retrieved by SCE 8000 from the subscriber traffic is mapped to a static virtual Gi ID (1-255).

By default, when configuring a VLAN ID mapping to an already mapped virtual Gi ID, the previous VLAN ID is overwritten, because only one VLAN ID can be mapped to a virtual Gi ID.

If multiple VLAN ID to a Virtual Gi ID is enabled using the diameter Gx virtual-gi multiple-mapping enable command, Cisco SCE adds the new VLAN ID ID mapping to an existing VGi ID without overwriting the VLAN ID.

Authorization: admin

Examples

The following example shows how to enable TACACS+ accounting for the admin privilege level (10):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# diameter Gx virtual-gi vlan-id 2 mapping 3
SCE8000(config)#
```

Related Commands

Command	Description
subscriber virtual-gi-mode	Enables virtual Gi mode.
VLAN symmetric classify	Specifies the VLAN tag as subscriber.

diameter Gy peer-proxyagent

To enable the peer proxy agent in CCR messages for Gy, use the **diameter Gy peer-proxyagent** command.

Use the **no** form of the command to disable the peer proxy agent in CCR messages.

diameter Gy peer-proxyagent

no diameter Gy peer-proxyagent

Syntax Description

This command has no syntax or keywords.

Command Default

None.

Command Modes

CONFIG (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

Example 1

The following example shows how to enable peer proxy agent in CCR messages for Gy:

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter Gy peer-proxyagent
```

Example 2

The following example shows how to disable peer proxy agent in CCR messages for Gy:

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter Gy peer-proxyagent
```

diameter Gy subscriber-attribute-mapping

Maps the specified PS Information AVP (3GPP-charging-characteristics) into the specified realm.

diameter Gy subscriber-attribute-mapping attribute-name 3GPP-charging-characteristics attribute-value ***attribute-value*** **realm-id** ***realm-id***

Syntax Description

attribute-value	The PS Information AVP to be mapped to the realm.
realm-id	Name of the realm. **Note** The specified realm must be configured in the realm table. If no such realm was configured (or configuration was removed), the first realm in the table is used as default.

Command Default

As configured for peer.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command. This example maps all subscriber s that logged in with VSA attribute 3GPP-charging-characteristics value = **0800** to the realm called '**PrePaidSubsRealm**'.

Note If the specified realm is not found in the realm table, the first realm in the table is used as default.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter Gy subscriber-attribute-mapping attribute-name
3GPP-charging-characteristics attribute-value 0800 realm-id PrePaidSubsRealm
SCE8000(config)#
```

diameter Gy tx-timer

Configures the transmit timeout value for messages.

To reset the tx timeout to the default value, use the **default** form of this command.

diameter Gy tx-timer ***time***

default diameter Gy tx-timer

Syntax Description

time	Timeout interval in seconds.

Command Default

5 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

If the PCRF does not respond to a Gy message in the configured tx-timer seconds, the message is considered timed out. The message is dumped if it arrives after tx-timer expires.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter Gy tx-timeout 20
SCE8000(config)#
```

Related Commands

Command	Description
show diameter Gy	Displays the current Gy application configuration.

diameter host

Configures the diameter host IP address.

To return to the default diameter host IP address, use the **no** form of this command.

diameter host ***ip-address***

no diameter host

Syntax Description

ip-address	IP address of the host.

Command Default

ip-address = Management interface IP address

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

By default, the IP address the diameter stack uses is the IP address that is configured for the management interface. Use this command to configure a different IP address for the diameter stack.

Caution Run this command only when the stack is stopped. Use the **no diameter** command to stop the stack.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter
SCE8000(config)#diameter host 1.1.1.1
```

Note The IP address configured in the above CLI 'diameter host 1.1.1.1' should be present either physically or logically in the Cisco SCE box. Otherwise, the diameter stack will fail to start.

Related Commands

Command	Description
show diameter	Displays the current diameter stack state.

diameter origin-realm

Configures the name of the stack realm.

To reset the stack realm to the default, use the **default** form of this command.

diameter origin-realm ***realm***

default diameter origin-realm

Syntax Description

realm	Name of the realm.

Command Default

sce.cisco.com

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Caution Run this command only when the stack is stopped. Use the **no diameter** command to stop the stack.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter
SCE8000(config)#diameter origin-realm realm1
```

Related Commands

Command	Description
no diameter	Stops the diameter stack.

diameter peer

Adds an entry to the peer table.

To remove an entry from the peer table, use the **no** form of this command.

To clear the peer table, removing all the entries, use the **no diameter peer all** command**.**

diameter peer ***name*** **peer-host** ***ip-address*** **[port** ***port#*****]**

no diameter peer ***name***

no diameter peer all

Syntax Description

name	Name to be assigned to the entry in the peer table
ip-address	IP address of the host **Note** A peer is defined by an URI. This means that the same IP can not be used on different ports to distinguish between two servers except when a DNS is used.
port#	Port number used.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

The peer table holds a list of all the peers with which the Cisco SCE has a direct connection. The information for each entry includes:

- Peer host – The host IP
- Peer port
- State – Up, Down, or N/A (stack is not currently activated). This information is non-configurable.
- Peer name – Name assigned by this command

Note Removing a peer from the peer table removes all the peer related configuration information from the Routing table and from the forwarding scheme.

General Guidelines

- Do not assign the same IP address to two peers, even if the port numbers are different, unless they are in different domains.
- To remove one entry from the peer table, use the **no diameter peer** ***name*** command.
- To clear the peer table, use the use the **no diameter peer all** command**.**

Authorization: admin

Examples

Example 1

The following example shows how to add an entry to the peer table for a peer named “test_peer”.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter peer test_peer peer-host 1.1.1.1
```

Example 2

The following example shows how to clear the peer table.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter peer all
```

Related Commands

Command	Description
show diameter peer	Displays the specified peer table entry.
show diameter peer-table	Displays the peer table.

diameter port

Configures the stack host.

To reset the stack port to the default, use the **default** form of this command.

diameter port *port*

default diameter port

Syntax Description

port	Port number to be used by the stack.

Command Default

3868

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Caution Run this command only when the stack is stopped. Use the **no diameter** command to stop the stack.

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter
SCE8000(config)#diameter port 3333
```

Related Commands

Command	Description
no diameter	Stops the diameter stack.

diameter realm

Adds an entry to the routing table.

To remove an entry from the routing table, use the **no** form of this command.

To clear the routing table, removing all the entries, use the **no diameter realm all** command.

diameter realm ***realm-name*** **(Gx|Gy) peer** ***peer-name*** **priority** ***priority***

no diameter realm ***realm-name*** **[Gx|Gy] peer** ***peer-name***

no diameter realm all

Syntax Description

realm-name	Name of the realm.
Gx or Gy	Indicate whether the application is Gx or Gy. • Required when adding a peer. • Optional when removing a peer entry, depending on whether you are removing only the entry for a specific application or removing entires for both applications.
peer-name	Name of the peer. (See the **diameter peer** command)
priority	Priority assigned to the peer within the forwarding scheme. (0-99) Priority is optional for the first peer entry for a realm, but required for all subsequent peer entries.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

The routing table contains the peer application support and the forwarding scheme priority information. The information for each entry includes:

- peer name
- supported application (Gx or Gy)
- realm
- priority

General Guidelines

- Priority is required except for the first peer entry assigned to a realm. If a priority is not assigned to the first peer entry for a realm, a priority of 100 is assigned automatically.
- In the Gx application there is one realm with many peers supporting that realm.
- In the Gy application there can be several realms, each with multiple peers.
- Peers can support more than one application.
- To remove the entry for a peer only for a specific application, specify Gx or Gy in the **no** form of the command. If you do not specify the application, if two peer entries exist, they will both be removed.
- To clear the routing table use the **no diameter realm all** command.

Authorization: admin

Examples

Example 1

The following example shows how to add a route.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter realm test_realm.cisco.com Gy peer test_peer
```

Example 2

The following example shows how delete one entry from the routing table.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter realm test_realm.cisco.com Gy peer test_peer
```

Example 3

The following example is similar to Example 2, but it removes both entries for the specified peer from the routing table.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#no diameter realm test_realm.cisco.com peer test_peer
```

Related Commands

Command	Description
show diameter realm	Displays all routing table entries for the specified realm
show diameter routing table	Displays the routing table.

diameter realm forwarding-mode

Configures the forwarding mode for the specified realm and application.

diameter realm *realm-name*(**Gx |Gy) forwarding-mode (load-balancing| high-availability [shared-session-on [stickness-on |stickness-off]| shared-session-off]**)

Syntax Description

realm-name	Name of the realm.
Gx or Gy	Indicate whether the forwarding mode applies to Gx or Gy applications.

Command Default

Load-Balancing

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Load Balancing

Load balancing is completed by round robin using the available servers. The available servers are round robin cycled per session and not per message, meaning the messages for a specific session are all sent to the same server.

When a server fails, it is removed from the round robin.

High Availability (Failover)

When the high availably scheme is used, there is no load balancing between servers. The high availability scheme is strictly an active and standby scheme.

Each server is assigned a priority. Only the server with the highest priority handles the session. When the active server fails, all new sessions will be started on the next server in the priority list order.

High availability mode has additional options:

- shared-session-on: Sessions are common to all servers, and therefore sessions on a failed server do not need to be reopened on a different server if the server fails.
  - stickiness-on: Sessions move back to the original server when it restarts.
  - stickiness-off: Sessions do not move back to the original server when it restarts.
- shared-session-off: Sessions are not common to all servers, and therefore sessions on a failed server must be reopened on a different server if the server fails.

Authorization: admin

Examples

The following example shows how to configure high-availability forwarding mode where the sessions will be common to all servers and will not return to the original server after failure when that server restarts.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#diameter realm test_realm.cisco.com Gy forwarding-mode high-availability
shared-session-on stickiness-off
SCE8000(config)#
```

Related Commands

Command	Description
show diameter forwarding-mode	Displays the forwarding mode table.

diameter tx-timer

Configures the diameter transmit timeout value for messages.

To reset the timeout to the default, use the **default** form of this command.

diameter tx-timer *time*

default diameter tx-timer

Syntax Description

time	Timeout interval in seconds. Range is 5-6000.

Command Default

30 seconds

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)#diameter tx-timeout 20
SCE8000(config)#
```

Related Commands

Command	Description
show diameter	Displays the current diameter stack state.

dir

Displays the files in the current directory.

dir [applications] [-r]

Syntax Description

applications	Filters the list of files to display only the application files in the current directory.
-r	Includes all files in the subdirectories of the current directory, as well as the files in the current directory.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the files in the current directory (root):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#dir
File list for /system/
512TUE JAN 01 00:00:00 1980LOGDBG DIR
512TUE JAN 01 00:00:00 1980LOG DIR
7653 TUE JAN 01 00:00:00 1980FTP.SLI
29 TUE JAN 01 00:00:00 1980SCRIPT.TXT
512 TUE JAN 01 00:00:00 1980SYSTEM DIR
SCE8000#
```

Related Commands

Command	Description
pwd	Displays the current working directory.
cd	Changes the path of the current working directory.

disable

Moves the user from a higher level of authorization to a lower user level.

disable *level*

Syntax Description

level	User authorization level (0, 5, 10, 15) as specified in *CLI Authorization Levels*.

Command Default

None

Command Modes

Privileged EXEC and Viewer

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command with the *level* argument to lower the user privilege level, as illustrated in Figure 2-1. If a level is not specified, it defaults to User mode.

Figure 2-1 Disable Command

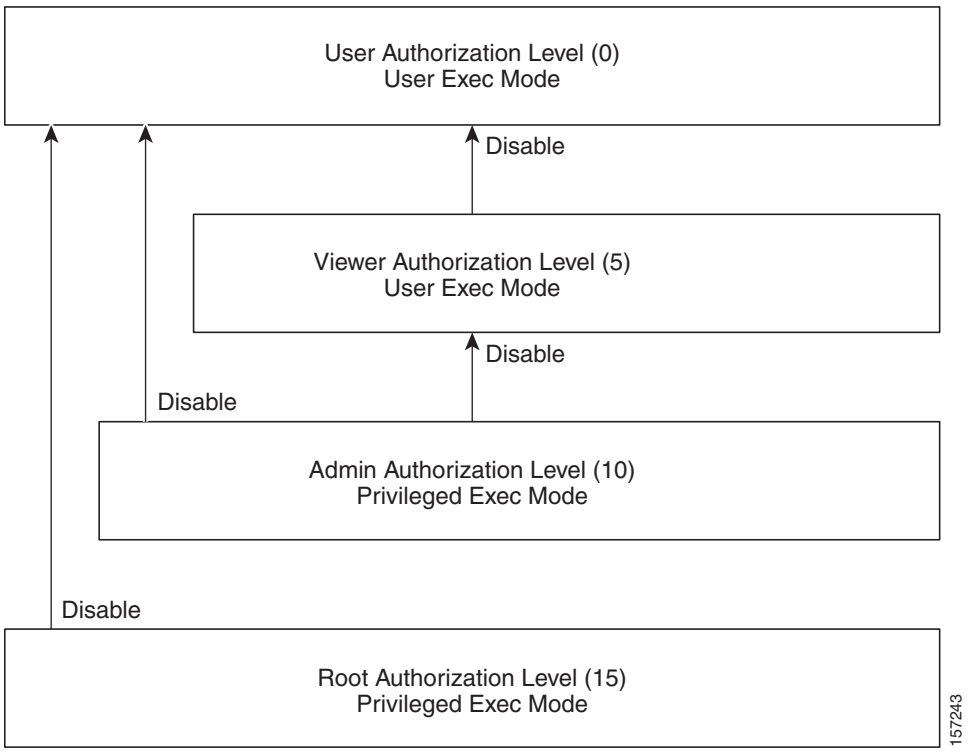

Note that you must **exit** to Privileged EXEC command mode to use this command.

Authorization: user

Examples

The following example shows how to change from root to admin mode:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>disable 10
SCE8000#
```

Related Commands

Command	Description
enable	Allows the user to access a higher authorization level.

do

Executes an EXEC mode command (such as a **show** command) or a privileged EXEC command (such as **show running-config**) without exiting to the relevant command mode.

do *command*

Syntax Description

command	Command to be executed.

Command Default

None

Command Modes

All configuration modes

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use this command when in any configuration command mode (global configuration, linecard configuration, or any interface configuration) to execute a User EXEC or Privileged EXEC command.

Enter the entire command with all parameters as you would if you were in the relevant command mode.

Authorization: admin

Examples

The following example assumes that the on-failure action of the Cisco SCE platform has been changed to **bypass**. The connection mode configuration is then displayed to verify that the parameter was changed. The **do** command is used to avoid having to exit to User EXEC mode.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#connection-mode on-failure bypass
SCE8000(config if)#do show interface linecard 0 connection-mode
slot 0 connection mode
Connection mode is inline
slot failure mode is bypass
Redundancy status is standalone
SCE8000(config if)#
```

duplex

Configures the duplex operation of the GigabitEthernet management interface.

duplex [*mode]*

no duplex

Syntax Description

mode	Sets duplex operation to one of the following modes: • **full**—Full duplex • **half**—Half duplex • **auto**—Auto-negotiation (do not force duplex on the link)

Command Default

The default duplex mode is auto.

Command Modes

GigabitEthernet Interface Configuration

Mng Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to configure the duplex mode of the GigabitEthernet management interface.

If the speed of the management interface is configured to **auto** (see the **speed command**), changing this configuration has no effect.

Authorization: admin

Examples

The following example shows how to configure the management port to auto mode.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface mng 0/1
SCE8000(config if)#duplex auto
SCE8000(config if)#
```

Related CommandsE

Command	Description
speed	Configures the speed of the management interface.
show interface mng	Displays the details of the GigabitEthernet management interface.

enable

Enables the user to access a higher authorization level.

enable [*level*]

Syntax Description

level	User authorization level (0, 5, 10, 15) as specified in *CLI Authorization Levels, page 1-2*.

Command Default

The default authorization level is admin (10).

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Figure 2-2 shows the authorization levels.

Figure 2-2 Enable Command

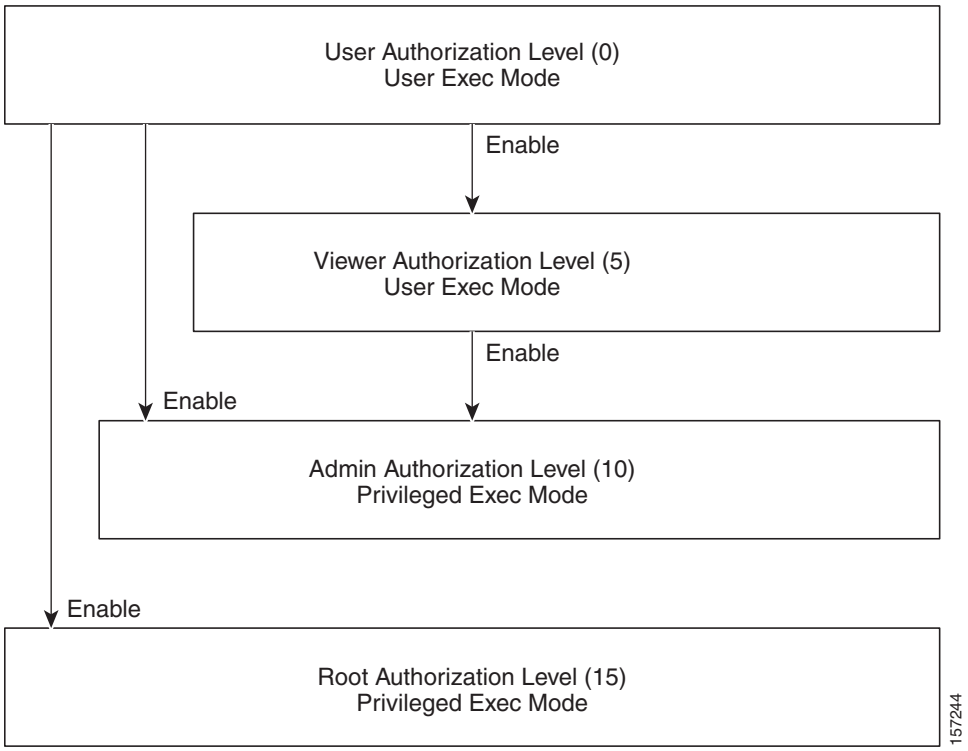

If a level is not specified, it defaults to admin authorization (level 10).

Note that you cannot use the **enable** command from Privileged EXEC or any of the configuration command modes.

Authorization: user

Examples

The following example shows how to access the administrator authorization level. Note that the prompt changes from **SCE8000>** to **SCE8000#,** indicating that the level is the administrator privilege level.

```
SCE8000>enable
Password:<cisco>
SCE8000#
```

Related Commands

Command	Description
disable	Moves the user from a higher level of authorization to a lower user level.
enable password	Configures a password for the specified authorization level.

enable password

Configures a password for the specified authorization level, which prevents unauthorized users from accessing the Cisco SCE platform.

To disable the password for the specified authorization level, use the **no** form of this command.

enable password [level *level***] [***encryption-type* **] [***password]*

no enable password [level *level***]**

Syntax Description

level	User authorization level (0, 5, 10, 15) as specified in *CLI Authorization Levels.* If no level is specified, the default is admin (10).
encryption-type	If you want to enter the encrypted version of the password, set the *encryption type* to **5,** which specifies the algorithm used to encrypt the password.
password	Sets a regular or encrypted password for the access level. If you specify *encryption-type,* you must supply an encrypted password.

Command Default

The default authorization level is admin (10).

The default password is cisco.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

After the command is entered, any user executing the **enable** command must supply the specified password. The following conditions apply to passwords:

- Must be at least 4 and no more than 100 characters long
- Can contain any printable characters
- Must begin with a letter
- Cannot contain spaces
- Are case-sensitive

Authorization: admin

Examples

The following example shows how to set a level 10 password:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#enable password level 10 a123*man
SCE8000(config)#
```

Related Commands

Command	Description
enable	Allows the user to access a higher authorization level.
service password-encryption	Enables password encryption.

end

Exits from Global Configuration mode or an interface configuration mode to the User EXEC authorization level.

end

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Interface Linecard Configuration

Interface GigabitEthernet Configuration

Interface Range GigabitEthernet Configuration

Interface TenGigabitEthernet Configuration

Interface Range TenGigabitEthernet Configuration

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

Use this command to exit to the User EXEC authorization level in one command, rather than having to execute the **exit** command twice. The system prompt changes to reflect the lower-level mode.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#end
SCE8000#
```

Related Commands

Command	Description
configure	Enables the user to move from Privileged EXEC mode to Configuration mode.
interface gigabitethernet	Enters GigabitEthernet Interface Configuration mode.
interface range gigabitethernet	Enters a GigabitEthernet Interface Configuration mode for two or more GBE line interfaces.
interface tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for the 10GBE line interfaces.
interface range tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for two or more 10GBE line interfaces.
interface linecard	Enters Interface Linecard Configuration mode.
line vty	Enters Line Configuration mode for Telent lines, which configures all Telnet lines.

erase startup-config-all

Removes all current configurations by removing all configuration files.

erase startup-config-all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The following data is deleted by this command:

- General configuration files
- Application configuration files
- Static party DB files
- Management agent installed MBeans

After using this command, the Cisco SCE platform should be reloaded immediately to ensure that it returns to the "factory default" state.

To create a backup of the current configuration before it is deleted, use the **copy startup-config destination-file** command.

Authorization: admin

Examples

The following example shows how to erase the startup configuration:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#erase startup-config-all
```

Related Commands

Command	Description
reload	Reboots the Cisco SCE platform.
copy startup-config destination-file	Copies the startup-config file to the specified destination file.

exit

Exits from the current mode to the next "lower" mode. When executed from Privileged EXEC or User EXEC mode, the command logs out of the CLI session.

exit

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

All

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command each time you want to exit a mode. The system prompt changes to reflect the lower-level mode.

Tip Use the **end** command to exit to the User EXEC authorization level.

Authorization: admin

Examples

The following example shows how to exit from Interface Linecard Configuration mode to Global Configuration mode and then to Privileged EXEC mode and then log out:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#exit
SCE8000(config)#exit
SCE8000#exit
Connection closed by foreign host.
```

Related Commands

Command	Description
configure	Enables the user to move from Privileged EXEC mode to Configuration mode.
interface gigabitethernet	Enters GigabitEthernet Interface Configuration mode.
interface range gigabitethernet	Enters a GigabitEthernet Interface Configuration mode for two or more GBE line interfaces.
interface tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for the 10GBE line interfaces.
interface range tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for two or more 10GBE line interfaces.
interface linecard	Enters Interface Linecard Configuration mode.
line vty	Enters Line Configuration mode for Telent lines, which configures all Telnet lines.

external-bypass

Manually activates the external bypass modules.

To deactivate the external bypass modules, use the **no** form of this command.

To return the external bypass module to the default state (deactivated), use the **default** form of this command.

external-bypass

no external-bypass

default external-bypass

Syntax Description

This command has no arguments or keywords.

Command Default

The external bypass module is deactivated.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#external-bypass
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard external-bypass	Displays the state of the external bypass module.

failure-recovery operation-mode

Specifies the operation mode to be applied when the system reboots after a failure.

If you use the **default** form of the command, you do not have to specify the mode.

failure-recovery operation-mode *mode*

default failure-recovery operation-mode

Syntax Description

mode	Indicates whether or not the system boots as operational following a failure. Choose **operational** or **non-operational.**

Command Default

The default mode is operational.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the system to boot as operational after a failure:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#failure-recovery operation-mode operational
SCE8000(config)#
```

Related Commands

Command	Description
show failure-recovery operation-mode	Displays the operation mode to apply after booting resulted from a failure.

flow-capture

Executes flow-capture operations.

flow-capture {**start format cap file-name-prefix** *filename* | **stop**}

Syntax Description

filename	Destination (FTP site path) where the cap file should be created, in the format: **ftp://***username:password@ip_address/path/filename*. (Do not include the ".cap" file extension; it is appended automatically.) In a system with two SCE 8000-SCM modules, which creates two capture files, an indicator is appended to this prefix to indicate which SCE 8000-SCM module created the file. For example, if you assign the filename "myCapFile", the system creates *myCapFile1.cap* and *myCapFile2.cap*.
stop	Stops recording.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Flow capturing is a useful debugging capability that captures packets from the traffic stream in real time and stores them for later analysis using a standard cap format. The classification of the traffic portion to be captured is based on L4 attributes. The captured information is sent to a specified FTP destination. In a system with two SCE 8000-SCM modules installed, a separate cap file is created by each SCE 8000-SCM module.

The following flow-capture operations are available:

- **start**—Starts recording.
- **stop**—Stops recording.

Note that traffic can be captured only when an application is loaded.

To perform a flow capture, follow these steps:

1. (Optional) Configure limits to the flow-capture operation using the **flow-capture controllers** command. Limits prevent a negative impact on traffic processing.

   You may skip this step and use the default controller values.

2. Configure an appropriate recording rule using the **traffic-rule** command. Assign the **flow-capture** action to the rule (see **traffic-rule**).

Tip You must use the **traffic-rule** command to define the recording rule. You cannot use the **flow-filter** command.

3. Start the actual capture. The capture will not start if a valid recording rule has not been defined.

   Use the **flow-capture start** command.

4. (Optional) Stop the capture.

   Use the **flow-capture stop** command.

   If you do not stop the flow capture, it will stop when the maximum duration or capacity has been reached.

At any point, you can use the **show interface linecard flow-capture** command to display the flow-capture status, including whether flow capture is currently recording or is stopped, the capacity already used, and the number of packets recorded.

Authorization: admin

Examples

The following examples show how to use this command. All examples show output for an SCE 8000 with two SCE 8000-SCM modules installed.

Example 1

The following example shows how to perform all the steps in a flow capture:

1. Define the limits (**flow-capture controllers max-l4-payload-length** and **flow-capture controllers time**).
2. Define a counter to be assigned to the traffic rule. (Optional)
3. Define the recording traffic rule (**traffic-rule** with **action flow-capture** option).
4. Start the capture (**flow-capture start**).

   (**The show** command shows that recording is in progress.)
5. Stop the capture (**flow-capture stop**).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#flow-capture controllers max-l4-payload-length 200
SCE8000(config if)#flow-capture controllers time 45
SCE8000(config if)#traffic-counter name counter2 count-packets
SCE8000(config if)#traffic-rule name FlowCaptureRule IP-addresses subscriber-side all
network-side all protocol 250 direction both traffic-counter name counter2 action
flow-capture
SCE8000(config if)#end
SCE8000#flow-capture start format cap file-name-prefix
ftp://myUser:myPassword@10.10.10.80/./myCap
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      26580
Time limit  (sec):             45
Max L4 payload length (bytes): 200
```

```
Number of recorded packets:    152
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      28944
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    167
Number of lost packets:        0
SCE8000#flow-capture stop
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               User Request
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      99392
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    573
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               User Request
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      159344
Time limit  (sec):             45
Max L4 payload length (bytes): 200
SCE8000#
```

Example 2

The following example is identical to the previous one, except that instead of using the **stop** command, the capturing process continues until the defined time limit is reached.

1. Define the limits (**flow-capture controllers max-l4-payload-length** and **flow-capture controllers time**).
2. Define a counter to be assigned to the traffic rule. (Optional)
3. Define the recording traffic rule (**traffic-rule** with **action flow-capture** option).
4. Start the capture (**flow-capture start**).

   (The **show** command shows that recording is in progress.)
5. Capture concludes automatically after 45 seconds.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#flow-capture controllers max-l4-payload-length 200
SCE8000(config if)#flow-capture controllers time 45
SCE8000(config if)#traffic-counter name counter2 count-packets
SCE8000(config if)#traffic-rule name FlowCaptureRule IP-addresses subscriber-side all
network-side all protocol 250 direction both traffic-counter name counter2 action
flow-capture
SCE8000(config if)#end
SCE8000#flow-capture start format cap file-name-prefix
```

```
ftp://myUser:myPassword@10.10.10.80/./myCap
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      26580
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    152
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      28944
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    167
Number of lost packets:        0
```

after 45 seconds...

```
SCE8000>show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               Time Limit
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      558716
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    2696
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               Time Limit
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      673840
Time limit  (sec):             45
Max L4 payload length (bytes): 200
Number of recorded packets:    3335
Number of lost packets:        0
SCE8000#
```

Example 3

In this example, instead of using the **stop** command, the capturing process continues until the defined file-size limit (64 MB for each SCE 8000-SCM) is reached on the first SCE 8000-SCM. The other module is stopped using the **flow-capture stop** command

1. Set the limits back to the defaults (**default flow-capture controllers max-l4-payload-length** and **default flow-capture controllers time**).
2. Define a counter to be assigned to the traffic rule. (Optional)
3. Define the recording traffic rule (**traffic-rule** with **action flow-capture** option).
4. Start the capture (**flow-capture start**).

(**The show** command shows that recording is in progress.)

5. Capture on the first SCE 8000-SCM concludes automatically when the file size reaches the limit.
6. Stop the capture on the second SCE 8000-SCM (**flow-capture stop**).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#default flow-capture controllers max-l4-payload-length
SCE8000(config if)#default flow-capture controllers time
SCE8000(config if)#traffic-counter name counter2 count-packets
SCE8000(config if)#traffic-rule name FlowCaptureRule IP-addresses subscriber-side all
network-side all protocol 250 direction both traffic-counter name counter2 action
flow-capture
SCE8000(config if)#end
SCE8000#flow-capture start format cap file-name-prefix
ftp://myUser:myPassword@10.10.10.80/./myCap
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      11141528
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    20687
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      4150456
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    8365
Number of lost packets:        0
```

after 32 minutes...

```
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               Cannot Write To File or Max Allowed File Size Exceeded
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      67108164
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    124916
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      27551456
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    55140
Number of lost packets:        0
```

after 5 more minutes...

```
SCE8000#flow-capture stop
SCE8000#show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               Cannot Write To File or Max Allowed File Size Exceeded
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      67108164
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    124916
Number of lost packets:        0
Flow Capture Status (module #2):
--------------------------------
Flow capture status:           NOT RECORDING
Capturing type:                ONLINE
Last stop cause:               User Request
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap2.cap
Target file size (bytes):      31647736
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    63463
Number of lost packets:        0
SCE8000(config if)#
```

Related Commands

Command	Description
flow-capture controllers	Configures limitations on the flow capture feature.
traffic-rule	Defines a new traffic rule.
show interface linecard flow-capture	Displays the flow capture status.

flow-capture controllers

Configures limitations on the flow-capture feature.

To reset all options to the default values, use the **default** form of this command.

flow-capture controllers time {*duration* | **unlimited**}

flow-capture controllers max-l4-payload-length {*length* | **unlimited**}

default flow-capture controllers {time | max-l4-payload-length}

Syntax Description

duration	Maximum duration for the flow-capture recording time, in seconds. To specify unlimited duration, use the **unlimited** keyword.
length	Specifies the number of payload bytes per packet. To specify unlimited payload bytes per packet, use the **unlimited** keyword.

Command Default

The default for *duration* is 3600 seconds.

The default for *length* is unlimited.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Flow capturing is a useful debugging capability that captures packets from the traffic stream in real time and stores them for later analysis. The classification of the traffic portion to be captured is based on L4 attributes.

The portion of traffic that is captured does not receive service (is not processed by the application). Therefore, it is important to control the capturing scenario so that service is not negatively affected. You can limit certain aspects of the flow capture using the following options:

- **time** (flow-capture recording time)—The duration of the flow capture may be limited to the specified time limit, or it may be unlimited, so that the flow capture is stopped only by executing an explicit stop command or when the maximum file size is reached (128 MB on the Cisco SCE 8000 platform).
- **max-l4-payload-length** (payload size)—The maximum number of L4 bytes captured from each packet may be specified. This keyword relates to each packet in the traffic stream rather than to overall flow-capture capacity. Using this keyword, the flow-capture throughput (in terms of captured packets) can be increased.

Authorization: admin

Examples

The following example shows how to configure limitations to the flow capture:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#flow-capture controllers time 120
SCE8000(config if)#flow-capture controllers max-l4-payload-length 200
SCE8000(config if)#
```

Related Commands

Command	Description
traffic-rule	Defines a new traffic rule.
flow-capture	Executes flow capture operations.
show interface linecard flow-capture	Displays the flow capture status.

flow-filter set-ff rule

To configure flow-filter rules, use the **flow-filter set-ff rule** command in the interface linecard configuration mode.

flow-filter set-ff rule *rule number* **[any-ip1-ip2-port1-port2-tos | clear | ip1-min | ipv6]**

flow-filter set-ff rule *rule number* **clear**

Syntax Description

rule number	Enter a number for the rule.
any-ip1-ip2-port1-port2-tos	Specifies ip1, ip2, port1, port2, tos matches any value.
clear	Clears all the rule fields.
ip1-min	Specifies the minimum value for IP1.
ipv6	IPv6 flow-filter rule configuration.

Command Default

None

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure limitations to a flow capture:

```
SCE8000> enable 10
Password: <cisco>
SCE8000#> configure
SCE8000(config)# interface linecard 0
SCE8000(config if)# flow-filter set-ff rule 2 ip1-min
SCE8000(config if)#
```

Related Commands

Command	Description
flow-filter set-ff rule ipv6	Configures a flow-filter rule for IPv6.

flow-filter set-ff rule ipv6

To configures flow-filter rules for IPv6 traffic use the **flow-filter set-ff rule** command in the interface linecard configuration mode.

flow-filter set-ff rule *rule number* **ipv6 any-ip1-ip2-port1-port2-tos**

flow-filter set-ff rule *rule number* **clear**

Syntax Description

rule number	Enter a number for the rule.
any-ip1-ip2-port1-port2-tos	Specifies IP 1, IP 2, Port 1 and Port2, Tos matches any value.
clear	Clears all the rule fields.

Command Default

None

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure limitations to flow capture:

```
SCE8000> enable 10
Password: <cisco>
SCE8000#> configure
SCE8000(config)# interface linecard 0
SCE8000(config if)# flow-filter set-ff rule 2 ipv6 any-ip-prefix-port1-port2-tos
SCE8000(config if)#
```

Related Commands

Command	Description
flow-filter set-ff rule	Configures a flow-filter rule.

flow-filter set-table rule ipv6 any-ip-prefix-port1-port2-tos protocol

To configures flow-filter rules for IPv6 traffic, use the **flow-filter set-table rule 1 ipv6 any-ip-prefix-port1-port2-tos protocol** command in the interface linecard configuration mode.

flow-filter set-table rule *rule number* **ipv6 any-ip1-ip2-port1-port2-tos protocol {ALL | EIGRP | ICMP | IGRP | IS-IS | OSPF | TCP | UDP |** *decimal***}**

Syntax Description

rule number	Enter a number for the rule.
any-ip1-ip2-port1-port2-tos	Specifies IP 1, IP 2, Port 1 and Port2, Tos matches any value.
protocol	Configures flow-filter rules for the traffic using specific protocol.
ALL	Specifies any protocol value.
EIGRP	Specifies EIGRP protocol only.
ICMP	Specifies ICMP protocol only.
IGRP	Specifies IGRP protocol only.
IS-IS	Specifies IS-IS protocol only.
OSPF	Specifies OSPF protocol only.
TCP	Specifies TCP protocol only.
UDP	Specifies UDP protocol only.
decimal	Specifie a protocol in the range 0 to 255.

Command Default

None

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: root

Examples

The following example shows how to configure flow-filter rules for IPv6 traffic using any protocol:

```
SCE8000#>enable 15
password : <cisco>
SCE8000#>configure
SCE8000(config)#>interface LineCard 0
SCE8000(config)#>flow-filter set-table rule 1 ipv6 any-ip-prefix-port1-port2-tos protocol
all
```

Command	Description
flow-filter set-ff rule	Configures a flow-filter rule.

force failure-condition

Forces a virtual failure condition, and exits from the failure condition, when performing an application upgrade.

To disable forcing a virtual failure condition, use the **no** form of this command.

force failure-condition

no force failure-condition

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

When upgrading the application in a cascaded system, use this command to force failure in the active SCE 8000 platform (see *System Upgrades* in the *Cisco SCE8000 10GBE Software Configuration Guide* or *System Upgrades* in the *Cisco SCE8000 GBE Software Configuration Guide*).

Authorization: admin

Examples

The following example shows how to force a virtual failure condition.

At the displayed "n," type **Y** and press **Enter** to confirm the forced failure.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#force failure-condition
Forcing failure will cause a failover - do you want to continue? n
SCE8000(config if)#
```

Related Commands

Command	Description
pqi upgrade file	Upgrades the application using the specified pqi file and any specified upgrade options.

help

Displays information relating to all available CLI commands.

help {bindings | tree}

Syntax Description

bindings	Prints a list of keyboard bindings (shortcut commands).
tree	Displays the entire tree of all available CLI commands.

Command Default

None

Command Modes

EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: user

Examples

The following example shows partial output from the **help bindings** command:

```
SCE8000>help bindings
Line Cursor Movements
---------------------
Ctrl-F /->Moves cursor one character to the right.
Ctrl-B /<-Moves cursor one character to the left.
Esc-FMoves cursor one word to the right.
Esc-BMoves cursor one word to the left.
Ctrl-AMoves cursor to the start of the line.
Ctrl-EMoves cursor to the end of the line.
Esc F Moves cursor forward one word.
Esc BMoves cursor backward one word.
Editing
-------
Ctrl-DDeletes the character where the cursor is located.
Esc-DDeletes from the cursor position to the end of the word.
BackspaceDeletes the character before the current location of the cursor.
Ctrl-H Deletes the character before the current location of the cursor.
Ctrl-KDeletes from the cursor position to the end of the line.
Ctrl-UDeletes all characters from the cursor to the beginning of the line.
Ctrl-XDeletes all characters from the cursor to the beginning of the line.
Ctrl-WDeletes the word to the left of the cursor.
Ctrl-YRecall the last item deleted.
Help and Operation Features
---------------------------
? Argument help.
<Tab>Toggles between possible endings for the typed prefix.
```

```
<Esc><Tab>Displays all the possible arguments backwards.
Ctrl-I <TAB>
SCE8000>
```

history

Enables the history feature,which is a record of the last command lines that executed.

To disable the history feature, use the **no** form of this command.

history

no history

Syntax Description

This command has no arguments or keywords.

Command Default

History is enabled.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable the **history** feature:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#history
SCE8000#
```

The following example shows how to disable the **history** feature:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#no history
SCE8000#
```

Related Commands

Command	Description
history size	Sets the number of command lines that the system records in history.

history size

Sets the number of command lines that the system records in the history.

To restore the default size, use the **no** form of this command.

history size [*size]*

no history size

Syntax Description

size	Number of command lines stored in the history of commands for quick recall.

Command Default

The default buffer size is 10 lines.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The size of the history buffer can be any number from 0 to 50. Use the **no** form of this command to restore the default size.

Authorization: admin

Examples

The following example shows how to set the history buffer size to 50 command lines:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#history size 50
SCE8000#
```

Related Commands

Command	Description
history	Enables the history feature, which is a record of the last command lines that were executed.

hostname

Modifies the name of the Cisco SCE platform. The hostname is part of the displayed prompt.

hostname [*hostname]*

Syntax Description

hostname	New hostname. Maximum length is 20 characters.

Command Default

The default hostname is **SCE.**

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to change the hostname to MyHost:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#>hostname MyHost
MyHost(config)#>
```

Related Commands

Command	Description
show hostname	Displays the currently configured hostname.

hw-bypass mode

To enable the hardware bypass mode of the Cisco SCE platform and to set or reset the hardware bypass state for the specified static parties when configured in this mode, use the **hw-bypass mode** in the global configuration mode. To disable the hardware bypass mode, use the **no** form of this command.

hw-bypass mode

no hw-bypass mode

Note The hardware bypass action can be performed only for the static parties created in the hardware bypass mode.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

When **no hw-bypass mode** command is executed, the existing static parties with hardware bypass state will be reset. Secondly, the hardware bypass mode of the Cisco SCE platform will be disabled successfully.

The authorization used is root.

Examples

The following example shows how to enable the hw-bypass mode:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#>hw-bypass mode
SCE8000(config)#
```

The following is the sample output from the **no hw-bypass mode** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#>no hw-bypass mode
hw-bypass for party  party-name is reset
```

```
hw-bypass for party  party-1 is reset
hw-bypass for party  party-2 is reset .
hw-bypass for party  party-N is reset
SCE8000(config)#>exit
SCE8000#>show hw-bypass mode
hw-bypass mode  is  disabled
```

Related Commands

Command	Description
show hw-bypass mode	Displays the hardware bypass mode status of the Cisco SCE platform to the EXEC authorization level.

interface gigabitethernet

Enters GigabitEthernet Interface Configuration mode.

In the Cisco SCE 8000 10GBE platform, only the management interfaces in slot 1 are Gigabit Ethernet interfaces. (To configure the 10 Gigabit Ethernet line interfaces, use the **interface tengigabitethernet** command.)

In the Cisco SCE 8000 GBE platform, both the management interfaces in slot 1 and the line interfaces in slot 3 are Gigabit Ethernet interfaces.

Note To configure two or more GBE line interfaces with a single command, use the **interface range gigabitethernet** command.

Tip To configure the management interfaces, you can also use the **interface mng** command.

interface gigabitethernet *slot-number/interface-number*

interface gigabitethernet *slot-number/bay-number/interface-number*

interface gigabitethernet *sce-id /slot-number/bay-number/interface-number*

Syntax Description

slot-number	For a management interface, enter a value of *1*. (SCE 8000 GBE only) For a GBE line interface, enter a value of *3*.
bay-number	(SCE 8000 GBE only) Enter a value of *0* or *1*. Note that slots 2 and 3 are used only for cascade interfaces, which are 10GBE interfaces and are not explicitly configured.
interface-number	For a management interface, enter a value of *1*. (SCE 8000 GBE only) For a GBE line interface, enter a value in the range of *0 to 7*.
sce-id	(SCE 8000 GBE only) In a cascade installation, identifies the specific Cisco SCE 8000 platform of the cascaded pair. Enter a value of *0* or *1*.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The format of this command depends on the version of the Cisco SCE 8000 platform and the type of interface being configured, as described Table 2-4.

Table 2-4 Interface gigabitethernet Command Formats

Authorization Level or Command Mode	Use this command to access	Use this command to exit
SCE 8000 10GBE	Management	**interface gigabitethernet 1/1**
SCE 8000 GBE	Management	**interface gigabitethernet 1/1**
SCE 8000 GBE	GBE line	**interface gigabitethernet 3/0/(0-7)** **interface gigabitethernet 3/1/(0-7)**
Cascaded SCE 8000 GBE	GBE line	**interface gigabitethernet 0/ 3/(0-1)/(0-7)** **interface gigabitethernet 1/ 3/(0-1)/(0-7)**

To return to Global configuration mode, use the **exit** command.

The system prompt changes to reflect GigabitEthernet Interface Configuration mode.

Authorization: admin

Examples

The following example shows how to enter GigabitEthernet Interface Configuration mode to configure the management port (SCE 8000 GBE and SCE 8000 10GBE):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface gigabitethernet 1/1
SCE8000(config if)#
```

The following example shows how to enter GigabitEthernet Interface Configuration mode to configure a GBE line port in subslot 1 of platform 0 in a cascaded pair (SCE 8000 GBE only):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface gigabitethernet 0/3/1/5
SCE8000(config if)#
```

Related Commands

Command	Description
exit	Exits from the current mode to the next "lower" level.
show interface gigabitethernet	Displays the details of the GigabitEthernet management interface.
interface range gigabitethernet	Enters a GigabitEthernet Interface Configuration mode for two or more GBE line interfaces.
interface mng	Enters Management Interface Configuration mode.

interface linecard

Enters Interface Linecard Configuration mode.

interface linecard *slot-number*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The system prompt changes to reflect Linecard Configuration mode. To return to Global configuration mode, use the **exit** command.

Authorization: admin

Examples

The following example shows how to enter Interface Linecard Configuration mode:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#
```

Related Commands

Command	Description
exit	Exits from the current mode to the next “lower” level.

interface mng

Enters Management Interface Configuration mode.

interface mng ***slot-number/interface-number***

Syntax Description

slot-number	The number of the identified slot. Enter a value of **0.**
interface-number	The Management interface number. Enter a value of 1 or 2 to configure the desired Management port.

Command Default

This command has no default settings.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use this command to configure the management ports for the Cisco SCE platforms.

The system prompt is changed to reflect the Management Interface Interface Configuration mode.

- To return to the Global configuration Mode, use the **exit** command.
- To return to the Use Exec authorization level, use the **end** command.

Authorization: admin

Examples

The following example enters into Management Interface Configure Interface Mode.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface mng 0/1
SCE8000(config if)#
```

Related Commands

Command	Description
exit	Exits from the current mode to the next "lower" level
end	Exits from Global configuration mode or an interface configuration mode to the User EXEC authorization level.
show interface mng	Displays information regarding the specified management interface.
duplex	Configures the duplex operation of the GigabitEthernet management interface.
speed	Configures the speed of the management interface.
active-port	Specifies which management port is currently active.

interface range gigabitethernet (SCE 8000 GBE only)

Enters GigabitEthernet Interface Configuration mode for two or more GBE line interfaces. You can specify a range of bays as well as a range of ports. You can also specify both SCE 8000 platforms of a cascaded pair.

interface range gigabitethernet *slot-number/bay-range/interface-range*

interface range gigabitethernet *sce-id/slot-number/bay-range/interface-range*

Syntax Description

slot-number	Enter a value of *3*.
bay-range	Enter a value of *0, 1, or 0-1*.
interface-range	Specify the range of ports in the format *port1-port2*, where the overall range of possible port numbers is 0 to 7.
sce-id	In a cascade installation, identifies the specific Cisco SCE 8000 platform of the cascaded pair. Enter a value of *0* or *1*.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

The **interface range** command performs a CLI operation on a group of interfaces with one command, with the limitation that all the interfaces in the group must be of the same physical and logical type.

The format of this command depends on the topology of the installation, as described in Table 2-5.

Table 2-5 interface gigabitethernet Command Format

Version	Interface	Command Format
Single SCE 8000 GBE	GBE line	**interface range gigabitethernet 3/0/*interface-range***
		interface range gigabitethernet 3/1/*interface-range*
		interface range gigabitethernet 3/0-1/*interface-range*
Cascaded SCE 8000 GBE	GBE line	**interface range gigabitethernet 0/3/*bay-range/interface-range***
		interface range gigabitethernet 1/3/*bay-range/interface-range*

To return to Global configuration mode, use the **exit** command.

The system prompt changes to reflect GigabitEthernet Interface Configuration mode.

The following commands are executed on all interfaces specified in the **interface range gigabitethernet** command as long as you remain in GigabitEthernet Interface Configuration mode:

- **auto-negotiate** (for a cascaded system, supported for the GBE traffic ports only, not for the 10GBE cascade ports)
- **global-controller bandwidth**
- **global-controller name**

Authorization: admin

Examples

The following example shows how to enter GigabitEthernet Interface Configuration mode to configure interfaces 3 to 6 of both 8-port SPA modules:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface range gigabitethernet 3/0-1/3-6
SCE8000(config if range)#
```

The following example shows how to enter GigabitEthernet Interface Configuration mode to configure interfaces 3 to 6 of both 8-port SPA modules on SCE 8000 platform 0 of a cascaded pair:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface range gigabitethernet 0/3/0-1/3-6
SCE8000(config if range)#
```

Related Commands

Command	Description
exit	Exits from the current mode to the next "lower" level.
end	Exits from Global configuration mode or an interface configuration mode to the User EXEC authorization level.
show interface gigabitethernet	Displays the details of the GigabitEthernet management interface.
interface gigabitethernet	Enters GigabitEthernet Interface Configuration mode.
interface range tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for two or more 10GBE line interfaces.

interface range tengigabitethernet

Enters TenGigabitEthernet Interface Configuration mode for two or more 10GBE line interfaces. You can specify a range of bays.

Note that in the Cisco SCE 8000 GBE platform, only the cascade ports in bays 2 and 3 support 10GBE interfaces.

interface range tengigabitethernet *3/bay-range/0*

Syntax Description

bay-range	For the Cisco SCE 8000 10GBE, specify the range of bays in the format *bay1-bay2,* where the overall range of possible bay numbers is 0 to 3. For the Cisco SCE 8000 GBE, enter a value of *2, 3, or 2-3*.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

The **interface range** command performs a CLI operation on a group of interfaces with one command, with the limitation that all the interfaces in the group must be of the same physical and logical type.

Because each SPA has only one interface (numbered 0), the only argument that has a possible range is the number of the bay or subslot.

To return to Global configuration mode, use the **exit** command.

The system prompt changes to reflect the interface range configuration mode.

Authorization: admin

Examples

The following example shows how to enter TenGigabitEthernet Interface Configuration mode on an SCE 8000 10GBE platform to configure all the interfaces:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface range tengigabitethernet 3/0-3/0
SCE8000(config if range)#
```

The following example shows how to enter TenGigabitEthernet Interface Configuration mode on an SCE 8000 GBE platform to configure both the cascade interfaces:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface range tengigabitethernet 3/2-3/0
SCE8000(config if range)#
```

Related CommandsE

Command	Description
exit	Exits from the current mode to the next "lower" level.
end	Exits from Global configuration mode or an interface configuration mode to the User EXEC authorization level.
show interface tengigabitethernet	Displays the details of the TenGigabitEthernet management interface.
interface tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for the 10GBE line interfaces.
interface range gigabitethernet	Enters a GigabitEthernet Interface Configuration mode for two or more GBE line interfaces.

interface tengigabitethernet

Enters TenGigabitEthernet Interface Configuration mode for the 10GBE line interfaces.

Note that in the Cisco SCE 8000 GBE platform, only the cascade ports in bays 2 and 3 support 10GBE interfaces.

interface tengigabitethernet *3/bay-number/0*

Syntax Description

bay-number	For the Cisco SCE 8000 10GBE, possible bay numbers are 0 to 3. For the Cisco SCE 8000 GBE, possible bay numbers are *2* or *3*.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

To return to Global configuration mode, use the **exit** command.

The system prompt changes to reflect the interface configuration mode.

Authorization: admin

Examples

The following example shows how to enter TenGigabitEthernet Interface Configuration mode on an SCE 8000 10GBE platform to configure the interface in bay 1:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface tengigabitethernet 3/1/0
SCE8000(config if range)#
```

Related CommandsE

Command	Description
exit	Exits from the current mode to the next "lower" level.
end	Exits from Global configuration mode or an interface configuration mode to the User EXEC authorization level.
show interface tengigabitethernet	Displays the details of a TenGigabitEthernet management interface.
interface range tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode for two or more 10GBE line interfaces.
interface gigabitethernet	Enters GigabitEthernet Interface Configuration mode.

ip access-class

Specifies which access control list (ACL) controls global access to the Cisco SCE platform.

To permit global access to the Cisco SCE platform from any IP address, use the **no** form of this command.

ip access-class ***number***

no ip access-class

Syntax Description

number	Number of the access list (1 to 99) to use to allow global access to the Cisco SCE platform.

Command Default

None (all IP addresses can access the system).

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The ACL specified in this command contains the definitions for all IP addresses with permission to access the Cisco SCE platform. IP addresses not permitted in this access list cannot access or detect the Cisco SCE platform; even a **ping** command does not receive a response if it is not from a permitted IP address.

Authorization: admin

Examples

The following example shows how to set access list 1 as the global ACL:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip access-class 1
SCE8000(config)#
```

Related Commands

Command	Description
access-list	Adds an entry to the bottom of the specified access list.
show access-lists	Displays all access lists or a specific access list.

ip address

Sets the IP address and subnet mask of the management interface.

ip address *new-address subnet-mask*

Syntax Description

new-address	New IP address of the management interface. The following IP addresses are used internally by the Cisco SCE 8000 platform and cannot be assigned to the management interface: • 192.168.207.241 to 192.168.207.255 • 92.168.207.145 to 192.168.207.159
subnet-mask	Network mask for the associated IP network.

Command Default

None

Command Modes

GigabitEthernet Interface Configuration

MNG Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

When both management ports are connected, only one port is active at any given time, while the second management port provides a redundant management interface. In this case, the configured IP address acts as a virtual IP address for the currently active management interface, regardless of which port is the active port.

Since this IP address always acts as a virtual IP address for the currently active management port, this command can be executed from the Mng Interface Configuration for either management port.

Note Changing the IP address of the management interface using Telnet results in the loss of the Telnet connection and the inability to reconnect with the interface.

Note After changing the IP address, you must reload the Cisco SCE platform (see **reload**) so that the change will take effect properly in all internal and external components of the Cisco SCE platform.

If a routing table entry maps to the old address, but not to the new address, the command may fail.

Authorization: admin

Examples

The following example shows how to set the IP address of the Cisco SCE platform to 10.1.1.1 and the subnet mask to 255.255.0.0:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface mng 0/1
SCE8000(config if)#ip address 10.1.1.1 255.255.0.0
SCE8000(config if)#
```

Related Commands

Command	Description
gigabitethernet interface	Enters GigabitEthernet Interface Configuration mode.
interface mng	Enters Management Interface Configuration mode.

ip advertising

Enables IP advertising. If either the destination or interval is not configured, the default values are used.

To disable IP advertising, use the **no form** of this command.

To restore the IP advertising destination or interval to the default values, use the **default** form of this command.

ip advertising [destination *destination* **| interval** *interval***]**

no ip advertising

default ip advertising [destination | interval]

Syntax Description

destination	IP address of the destination for the ping requests
interval	Frequency of the ping requests, in seconds

Command Default

IP advertising is disabled.

The default destination is 127.0.0.1.

The default interval is 300 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable IP advertising and specify a destination and an interval:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip advertising destination 10.1.1.1
SCE8000(config)#ip advertising interval 240
SCE8000(config)#
```

The following example shows how to restore the IP advertising destination to the default value:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#default ip advertising destination
SCE8000(config)#
```

Related Commands

Command	Description
show ip advertising	Displays the status of IP advertising, the configured destination, and the configured interval.

ip default-gateway

Configures the default gateway for the Cisco SCE platform.

To remove the Cisco SCE platform default gateway configuration, use the **no** form of this command.

ip default-gateway *x.x.x.x*

no ip default-gateway

Syntax Description

x.x.x.x	IP address of the default gateway for the Cisco SCE platform.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the default gateway IP of the Cisco SCE platform to 10.1.1.1:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip default-gateway 10.1.1.1
SCE8000(config)#
```

Related Commands

Command	Description
show ip default-gateway	Displays the configured default gateway.

ip domain-lookup

Enables or disables the domain name lookups.

To disable domain name lookup, use the **no** form of this command.

ip domain-lookup

no ip domain-lookup

Syntax Description

This command has no arguments or keywords.

Command Default

Domain name lookup is enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable domain lookup:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip domain-lookup
SCE8000(config)#
```

The following example shows how to disable domain lookup:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip domain-lookup
SCE8000(config)#
```

Related Commands

Command	Description
ip domain-name	Defines a default domain name.
ip name-server	Specifies the address of one or more servers to use for name and address resolution.
show hosts	Displays the default domain name, the address of the name server, and the contents of the host table.

ip domain-name

Defines a default domain name.

To remove the current default domain name, use the **no** form of this command. You do not have to specify the domain name.

ip domain-name *domain-name*

no ip domain-name

Syntax Description

domain-name	Default domain name used to complete hostnames that do not specify a domain. Do not include the initial period that separates an unqualified name from the domain name.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure a domain name:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip domain-name cisco.com
SCE8000(config)#
```

The following example shows how to remove the configured domain name:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip domain-name
SCE8000(config)#
```

Related Commands

Command	Description
ip domain-lookup	Enables or disables domain name lookups.
ip name-server	Specifies the address of one or more servers to use for name and address resolution.
show hosts	Displays the default domain name, the address of the name server, and the contents of the host table.

ip ftp password

Specifies the password to be used for FTP connections for the current session. The system uses this password if no password is specified with the **copy ftp** command.

ip ftp password [*password]*

Syntax Description

password	Password for FTP connections.

Command Default

The default password is *admin*.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the password to be used in the FTP connection to *mypw:*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#ip ftp password mypw
SCE8000#
```

Related Commands

Command	Description
copy ftp://	Uploads or downloads a file system using FTP.
copy-passive	Uploads or downloads a file using passive FTP.
ip ftp username	Configures the username for FTP connections for the current session.

ip ftp username

Configures the username for FTP connections for the current session. This username is used if no username is specified with the **copy ftp** command.

ip ftp username [*username]*

Syntax Description

username	Username for FTP connections.

Command Default

The default username is **anonymous.**

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set *myname* as the username for FTP connections:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#ip ftp username myname
SCE8000#
```

Related Commands

Command	Description
copy ftp://	**Uploads or downloads a file system using FTP.**
copy-passive	**Uploads or downloads a file using passive FTP.**
ip ftp password	**Specifies the password to be used for FTP connections for the current session.**

ip host

Adds a hostname and address to the host table.

To remove a hostname and address from the host table, use the **no** form of this command.

ip host *hostname ip-address*

no ip host *hostname [ip-address]*

Syntax Description

hostname	Hostname to be added or removed.
ip-address	Host IP address in *x.x.x.x* format.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to add a host to the host table:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip host PC85 10.1.1.1
SCE8000(config)#
```

Related Commands

Command	Description
show hosts	Displays the default domain name, the address of the name server, and the contents of the host table.

ip name-server

Specifies the address of one or more servers to use for name and address resolution. The system maintains a list of up to three name servers. If the current list is not empty, the command adds the specified servers to the list.

To remove specified servers from the current list, use the **no** form of this command.

ip name-server *server-address1 [server-address2] [server-address3]*

no ip name-server

Syntax Description

server-address1	IP address of the name server.
server-address2	IP address of an additional name server.
server-address3	IP address of an additional name server.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to add the DNS 10.1.1.1 and 10.1.1.2 to the list of configured servers:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip name-server 10.1.1.1 10.1.1.2
SCE8000(config)#
```

Related Commands

Command	Description
ip domain-lookup	Enables or disables domain name lookups.
show hosts	Displays the default domain name, the address of the name server, and the contents of the host table.

ip radius-client retry limit

Configures the parameters for retransmitting unacknowledged RADIUS client messages.

ip radius-client retry limit [*times]* **[timeout** *timeout***]**

Syntax Description

times	Maximum number of times the RADIUS client can try unsuccessfully to send a message.
timeout	Timeout interval for retransmitting a message, in seconds

Command Default

The default for *times* is 3.

The default for *timeout* is 5 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Because of the unreliable nature of UDP, the RADIUS client retransmits requests to the SCMP peer device if they were not acknowledged within the configured number of seconds. Messages that were not acknowledged can be retransmitted up to the configured maximum number of retries.

The optional **timeout** keyword limits the time interval for retransmitting a message.

Authorization: admin

Examples

The following example shows how to configure the retransmission parameters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# ip radius-client retry limit 5 timeout 5
SCE8000(config)#
```

Related Commands

Command	Description
scmp name	Adds an SCMP peer device.
show ip radius-client	Displays the RADIUS client general configuration.

ip route

Adds an IP routing entry to the routing table.

To remove an IP routing entry from the routing table, use the **no** form of this command.

ip route *ip-address mask [next-hop]*

no ip route *prefix mask [next-hop]*

no ip route all

Syntax Description

ip-address	IP address of the new entry.
mask	Relevant subnet mask.
next-hop	Next hop in the route.
all	Used with the **no** form of the command, removes all IP routing entries from the routing table.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

All addresses must be in dotted notation.

The next-hop address must be within the Management Interface subnet.

A maximum of 100 subnets can be configured.

Authorization: admin

Examples

The following example shows how to set the next-hop address for IP addresses in the specified range:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip route 10.10.10.0 255.255.255.0 20.2.2.2
SCE8000(config)#
```

The following example shows how to remove the entry added in the previous example:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip route 10.10.10.0 255.255.255.0
SCE8000(config)#
```

Related Commands

Command	Description
show ip route	Displays the entire routing table and the destination of last resort (default gateway).

ip rpc-adapter

Enables the RPC adapter.

To disable the RPC adapter, use the **no** form of this command.

ip rpc-adapter

no ip rpc-adapter

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable the RPC adapter:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip rpc-adapter
SCE8000(config)#
```

The following example shows how to disable the RPC adapter:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip rpc-adapter
SCE8000(config)#
```

Related Commands

Command	Description
ip rpc-adapter port	Defines the RPC adapter port.
show ip rpc-adapter	Displays the status of the RPC adapter and the configured port.
ip rpc-adaptor security-level	Sets the PRPC server security level.

ip rpc-adapter port

Defines the RPC adapter port.

To reset the RPC adapter port assignment to the default port of 14374, use the **default** form of this command.

ip rpc-adapter port [*port-number]*

default ip rpc-adapter port

Syntax Description

port-number	Number of the port assigned to the RPC adapter.

Command Default

The default port number is 14374.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the RPC interface, specifying 1444 as the RPC adapter port:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip rpc-adapter
SCE8000(config)#ip rpc-adapter port 1444
```

The following example shows how reset the RPC adapter port:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#default ip rpc-adapter port
```

Related Commands

Command	Description
ip rpc-adapter	Enables the RPC adapter.
show ip rpc-adapter	Displays the status of the RPC adapter and the configured port.

ip rpc-adapter security-level

Sets the PRPC server security level.

ip rpc-adapter security-level [*level*]

Syntax Description

level	Security level for the PRPC server. Choose full, semi, or None. See Usage Guidelines for more information.

Command Default

The default security level is **semi**.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Specify the PRPC server security level as follows:

- **full**—All PRPC connections require authentication.
- **semi**—PRPC connections that supply a username and password during connection establishment are authenticated. Connections that do not supply a username and password are accepted with no authentication.
- **none**—No authentication is performed.

Authorization: admin

Examples

The following example shows how to set the PRPC server security level:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#ip rpc-adapter security-level full
SCE8000>
```

Related Commands

Command	Description
ip rpc-adapter	Enables the RPC adapter.
show ip rpc-adapter	Displays the status of the RPC adapter and the configured port.

ip ssh

Enables the SSH server.

SSH allows you to login only when the user password and AAA authentication are configured.

1. Configure at least one user name and password.

   SCE8000(config)# username <username> password <password>

2. Configure AAA authentication for login.

   SCE8000(config)# aaa authentication login default none

To disable the SSH server, use the **no** form of this command.

ip ssh [sshv1]

no ip ssh [sshv1]

Syntax Description

sshv1	Enables SSHv1.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

If the **sshv1** keyword is not specified, both SSHv1 and SSHv2 are enabled. If you want to enable only SSHv2, use the **no** form of this command to disable SSHv1. Use the **ip ssh sshv1** command to reenable SSHv1.

When using an SSH server, you should also generate an SSH key set (**ip ssh key** command). A set of keys must be generated at least once before enabling the SSH server.

Authorization: admin

Examples

The following example shows how to enable the SSH server. Both SSHV1 and SSHv2 are enabled.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip ssh
SCE8000(config)#
```

The following example shows how to disable the SSH server:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip ssh
SCE8000(config)#
```

The following example shows how to disable SSHv1 so that only SSHv2 is enabled:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip ssh
SCE8000(config)#no ip ssh sshv1
SCE8000(config)#
```

Related Commands

Command	Description
ip ssh key	Generates or removes the SSH key set.
show ip ssh	Displays the status of the SSH server, including current SSH sessions.

ip ssh access-class

Assigns an access class list (ACL) to the SSH server, so that access to the SSH server is limited to the IP addresses defined in the ACL.

Use the **no** option to remove the ACL assignment from the SSH server.

ip ssh access-class ***acl-number***

no ip ssh access-class

Syntax Description

acl-number	The access list number of an ACL

Command Default

By default, no ACL is configured (SSH access is available from any IP address).

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

You must configure the ACL before you can assign it to a service. (See **access-list**.)

Authorization: admin

Examples

The following examples illustrate how to use this command.

EXAMPLE 1:

The following example assigns an existing ACL to the SSH server.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip ssh access-class 4
SCE8000(config)#
```

EXAMPLE 2:

The following example removes the ACL assignment from the SSH server.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip ssh access-class
SCE8000(config)#
```

Related Commands

Command	Description
access-list	Creates or updates a specified ACL
ip ssh	Enables the SSH server.
show ip ssh	Displays the current SSH service configuration.

ip ssh key

Generates or removes the SSH key set. A set of keys must be generated at least once before enabling the SSH server.

ip ssh key [generate | remove]

Syntax Description

generate	Generates a new SSH key set and saves it to nonvolatile memory. Key size is always 2048 bits.
remove	Removes the existing key set.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Each SSH server should define a set of keys (DSA2, RSA2, and RSA1) to be used when communicating with various clients. The key sets are pairs of public and private keys. The server publishes the public key, while keeping the private key in nonvolatile memory. The private key is never transmitted to SSH clients.

Note that the keys are kept on the */system/* file, which means that a person with knowledge of the ***enable*** password can access both the private and public keys. The SSH server implementation provides protection against eavesdroppers who can monitor the management communication channels of the Cisco SCE platform, but it does not provide protection against a user with knowledge of the ***enable*** password.

When using an SSH server, you should also enable the SSH server (**ip ssh** command).

Authorization: admin

Examples

The following example shows how to generate a new SSH key set:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip ssh key generate
SCE8000(config)#
```

The following example shows how to remove the SSH key set:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#ip ssh key remove
SCE8000(config)#
```

Related Commands

Command	Description
ip ssh	Enables the SSH server.
ip ssh access-class	Assigns an access control list to the SSH service.
show ip ssh	Displays the status of the SSH server, including current SSH sessions.

ip ssh mng-vlan

Assigns the specified VLAN to SSH services.

Use the **no** form of the command to remove the VLAN configuration for SSH services.

ip ssh mng-vlan *vlan-id*

no ip ssh mng-vlan

Syntax Description

vlan-id	VLAN tag to be assigned to SSH services (1-4094).

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You can create separate VLAN interfaces on the management interface in order to differentiate between various management and control services. There are two steps in this process:

1. Create the VLAN and assign the IP address (**mng-vlan** command).
2. Assign the VLAN to a management service.

Authorization: admin

Examples

The following example shows how to configure a VLAN for SSH services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#mng-vlan 100 address 10.10.10.20 mask 255.255.255.0
SCE8000(config)#ip ssh mng-vlan 100
SCE8000(config)#
```

The following example shows how to remove the VLAN for SSH services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no ip ssh mng-vlan
SCE8000(config)#
```

Related Commands

Command	Description
show ip ssh mng-vlan	Displays the VLAN configured for SSH services, if configured.
show ip ssh	Displays the VLAN configuration of SSH services, if configured, in addition to other SSH properties.

ip-tunnel 6to4

To enable the IPv6-to-IPv4 tunneling in an IP tunnel, use the ip-tunnel 6to4 command in inteface linecard configuartion mode.

To disable IPv6-to-IPv4 tunneling, use the **no** form of this command.

ip-tunnel 6to4

no ip-tunnel 6to4

Syntax Description

This command has no arguments or keywords.

Command Default

IP tunnel recognition is disabled.

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

The 6to4 protocol is an IPv6-based tunneling protocol. The IPv6 environment and the 6to4 environment should be configured before you can use this command.

Caution 6to4 tunneling can be enabled or disabled only when no applications are loaded or the line card is shut down.

If 6to4 is configured, depending on the configuration, the internal or the external IP header is considered as the subscriber traffic. In the 6to4 IPv6 mode, the internal IP header is considered as the subscriber traffic and in the 6to4-IPv4 mode as the external header.

If 6to4 is not configured, the Cisco SCE device considers the external IP header as the subscriber traffic. All the flows in the tunnel are considered as a single flow.

The corresponding subscriber IP address gets mapped to the traffic processors that are configured to handle IPv4 and IPv6, based on the 6to4 hash configuration in the 6to4-IPv6 mode.

Authorization: admin

Examples

The following example shows how to use this command. Note that you must have root level access to shut down the line card, even though an admin level access is sufficient to run the 6to4 command.

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> shutdown
SCE8000(config if)#> ip-tunnel 6to4
SCE8000(config if)#> no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.

ip-tunnel DS-Lite

To enable the DS-Lite tunnel in the IP tunnel, use the **ip-tunnel DS-Lite** command in interface linecard configuration mode.

To disable the DS-Lite tunnelling use the **no** form of this command.

ip-tunnel DS-Lite

no ip-tunnel DS-Lite

Syntax Description

This command has no arguments or keywords.

Command Default

IP tunnel recognition is disabled.

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

The IPv6 environment should be configured before you use this command.

Caution DS-Lite tunneling can be enabled or disabled only when no applications are loaded or the line card is shut down.

When DS-Lite is enabled, IPv6 traffic is handled by the traffic processor configured for IPv6, as TCP or UDP. If DS-Lite is disabled, IPv6 traffic is bypassed on the traffic processor configured for IPv6.

Authorization: admin

Examples

The following example shows how to use this command. Note that you must have root level access to shut down the line card, even though an admin level access is sufficient to run the DS-Lite command.

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> shutdown
SCE8000(config if)#> ip-tunnel DS-Lite
SCE8000(config if)#> no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.

ip-tunnel DS-Lite Extention-Header-Support

To enable DS-Lite extension header support in the IP tunnel, use the **ip-tunnel DS-Lite Extention-Header-Support** command in interface linecard configuration mode.

To disable DS-Lite Extention-Header-Support in the IP tunnel, use the **no** form of this command.

ip-tunnel DS-Lite Extention-Header-Support

no ip-tunnel DS-Lite Extention-Header-Support

Syntax Description

This command has no arguments or keywords.

Command Default

IP tunnel recognition is disabled.

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

The IPv6 environment should be configured before you can use this command. DS-Lite extension header support is significant only if the DS-Lite mode is enabled.

Caution DS-Lite extension header support can be enabled or disabled only when no applications are loaded or the line card is shut down.

When DS-Lite is enabled, IPv6 traffic is handled by the traffic processor configured for IPv6, as TCP or UDP. If DS-Lite is disabled, IPv6 traffic is bypassed on the traffic processor configured for IPv6.

Authorization: admin

Examples

The following example shows how to use this command. Note that you must have root level access to shut down the line card, even though an admin level access is sufficient to run the DS-Lite command.

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> shutdown
SCE8000(config if)#> ip-tunnel DS-Lite
SCE8000(config if)#> ip-tunnel DS-Lite Extention-Header-Support
DS-Lite Extension header support will be significant only if DS-Lite mode gets enabled.
SCE8000(config if)#> no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.

ip-tunnel DS-Lite Extend-IANA

To enable 128 bit hashing for DS-Lite flows, use the **ip-tunnel DS-Lite Extend-IANA** command in interface linecard configuration mode.

To disable 128 bit hashing for DS-Lite flows, use the **no** form of this command.

ip-tunnel DS-Lite Extend-IANA

no ip-tunnel DS-Lite Extend-IANA

Syntax Description

This command has no arguments or keywords.

Command Default

128-bit hashing is disabled.

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
4.0.0	This command was introduced.

Usage Guidelines

The IPv6 environment should be configured before you can use this command. 128-bit hashing of DS-LIte flows is significant only if the DS-Lite mode is enabled.

Caution 128-bit hashing of DS-Lite flows can be enabled or disabled only when no applications are loaded or the line card is shut down.

When DS-Lite is enabled, IPv6 traffic is handled by the traffic processor configured for IPv6, as TCP or UDP. If DS-Lite is disabled, IPv6 traffic is bypassed on the traffic processor configured for IPv6.

Authorization: admin

Examples

The following example shows how to use this command. Note that you must have root level access to shut down the line card, even though an admin level access is sufficient to run the DS-Lite command.

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> shutdown
SCE8000(config if)#> ip-tunnel DS-Lite
SCE8000(config if)#> ip-tunnel DS-Lite Extend-IANA
SCE8000(config if)#> no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.

ip-tunnel gre skip

Enables the recognition of GRE tunnels and skipping into the internal IP packet.

To disable tunnel recognition and classify traffic by the external IP address, use the **no** form of this command.

ip-tunnel gre skip

no ip-tunnel gre skip

Syntax Description

This command has no arguments or keywords.

Command Default

IP tunnel recognition is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

GRE is an IP-based tunneling protocol. If GRE tunnel recognition is not configured, the system treats the external IP header as the subscriber traffic. All of the flows in the tunnel are seen as a single flow.

IP tunnel mode is mutually exclusive with other VLAN-based classifications.

Caution GRE tunneling can be enabled or disabled only when no applications are loaded or the line card is shut down.

Authorization: admin

Examples

The following example shows how to use this command. Note that you must access the root level to shut down the line card, even though the DSCP marking command is at the admin level.

```
SCE8000>enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>shutdown
SCE8000(config if)#>ip-tunnel gre skip
SCE8000(config if)#>no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.

ip-tunnel dscp-marking-skip

Configures the Cisco SCE platform to perform DSCP marking on the internal IP header of IPinIP or GRE traffic.

To perform DSCP marking on the external IP header, use the **no** form of this command.

ip-tunnel (gre | ipinip) dscp-marking-skip

no ip-tunnel (gre | ipinip) dscp-marking-skip

Syntax Description

This command has no arguments or keywords.

Command Default

DSCP marking is performed on the external IP header (**no** form of the command).

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

DSCP marking modifies the DSCP bits of the IPv4 header. IPinIP and GRE tunnels have at least two IP headers. By default, DSCP marking is performed only on the external IP header. Use this command to mark the DSCP bits of the internal IP header.

This command takes effect only when **ipinip skip** or **gre skip** is enabled (see the **ip-tunnel ipinip skip** command or the **ip-tunnel gre skip** command).

Note DSCP marking should be enabled and configured through the SCA BB console. Refer to the section "*How to Manage DSCP Marker Values"* in the *Cisco Service Control Application for Broadband User Guide* for more information.

Caution DSCP marking can be configured only when no applications are loaded or the line card is shut down.

Authorization: admin

Examples

The following example shows how to configure the Cisco SCE platform to perform DSCP marking on the internal IP header of an IPinIP flow.

Note that you must access the root level to shut down the line card, even though the DSCP marking command is at the admin level.

```
SCE8000>enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>shutdown
SCE8000(config if)#>ip-tunnel ipinip dscp-marking-skip
SCE8000(config if)#>no shutdown
```

Related Commands

Command	Description
ip-tunnel gre skip	Enables the recognition of G RE tunnels and skipping into the internal IP packet.
ip-tunnel ipinip skip	Enables the recognition of IPinIP tunnels and skipping into the internal IP packet.

ip-tunnel ipinip skip

Enables the recognition of IPinIP tunnels and skipping into the internal IP packet.

To disable IPinIP skip, use the **no** form of this command.

ip-tunnel ipinip skip

no ip-tunnel ipinip skip

Syntax Description

This command has no arguments or keywords.

Command Default

IPinIP skip is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Use this command as follows:

- IPinIP and other tunnels—IPinIP is supported simultaneously with plain IP traffic and any other tunneling protocol supported by the Cisco SCE platform.
- Overlapping IP addresses—Overlapping IP addresses within different IPinIP tunnels are not supported.
- IPinIP can be enabled or disabled only when no applications are loaded or the line card is shut down.
- DSCP marking—For IPinIP traffic, DSCP marking can be done on either the external or the internal IP header exclusively.

  See the **ip-tunnel dscp-marking-skip** command for more information.

Authorization: admin

Examples

The following example shows how to use this command.

Note that you must access the root level to shut down the line card, even though the **ipinip** command is at the admin level.

```
SCE8000>enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>shutdown
SCE8000(config if)#>ip-tunnel ipinip skip
SCE8000(config if)#>no shutdown
```

Related Commands

Command	Description
ip-tunnel ipinip dscp-marking-skip	Configures the Cisco SCE platform to perform DSCP marking on the internal IP header of IPinIP traffic.
show interface linecard ip-tunnel ipinip	Displays the current IPinIP configuration.

ip-tunnel l2tp skip

Configures the recognition of L2TP tunnels and skipping into the internal IPv4 or IPv6 packet.

To disable tunnel recognition and classify traffic by the external IP address, use the no form of this command.

ip-tunnel l2tp skip

no ip-tunnel

Syntax Description

This command has no arguments or keywords.

Command Default

IP tunnel recognition is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.
4.1.0	Updated for IPv6.

Usage Guidelines

L2TP is an IP-based tunneling protocol. The system must be specifically configured to recognize the L2TP flows, based on the UDP port used for L2TP. The Cisco SCE platform can then skip the external IP, UDP, and L2TP headers and reach the internal IP, which is the actual subscriber traffic.

If L2TP is not configured, the system treats the external IP header as the subscriber traffic. All of the flows in the tunnel are seen as a single flow.

On Cisco SCE 8000, L2TP skip mode supports only L2TP IPv6 over IPv4 and L2TP IPv4 over IPv4. L2TP IPv6 over IPv6 and L2TP IPv4 over IPv6 flows are treated as native IPv6 flows.

IP tunnel mode is mutually exclusive with other MPLS or VLAN-based classifications.

To configure the port number that the LNS and LAC use for L2TP tunnels, use the **l2tp identify-by** command.

Caution L2TP tunneling can be enabled or disabled only when no applications are loaded or the line card is shut down.

Authorization: admin

Examples

The following example shows how to enable recognition of L2TP tunnels.

Note that you must access the root level to shut down the line card, even though the DSCP marking command is at the admin level.

```
SCE8000> enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> shutdown
SCE8000(config if)#> ip-tunnel l2tp skip
SCE8000(config if)#> no shutdown
```

Related Commands

Command	Description
show interface linecard ip-tunnel	Displays the current IP tunnel configuration.
l2tp identify-by	Configures the port number that the LNS and LAC use for L2TP tunnels.
mpls	Configures the MPLS environment.
vlan	Configures the VLAN environment.

Ipv6-IANA

Configures the system to 128-bit mode for 128-IANA support in linecard interface configuration mode.

Ipv6-IANA mode *decimal*

Syntax Description

decimal	Specify the mode. Use 0 to configure the system to 64-bit mode and 1 to configure the system to 128-bit mode.

Command Default

By default, system mode is 64-bit mode.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: root

To configure the system to 64/128 bit-mode, use the **application shutdown mode** command.

When you change one mode to another (64 to 128 bit mode or 128 to 64 bit mode) you must clear anonymous, if any, present in system.

Note When Ipv6 IANA mode is enabled, you need to clear all the anonymous subscribers:

```
SCE8000#>clear interface LineCard 0 subscriber anonymous all
```

Note IPv6 IANA mode is not supported for cascade setup.

Examples

The following example shows how to enable the IPv6 IANA in 64-bit mode:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> Ipv6-IANA mode 0
```

Examples

The following example shows how to enable the IPv6 IANA in 128-bit mode:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#> configure
SCE8000(config)#> interface linecard 0
SCE8000(config if)#> Ipv6-IANA mode 1
```

l2tp identify-by

Configures the port number that the LNS and LAC use for L2TP tunnels.

l2tp identify-by port-number [*port-number]*

l2tp identify-by default port

Syntax Description

port-number	Port number to be configured for L2TP tunnels.
default port	Replaces the user-configured port number with the default port number (1701).

Command Default

The default port number is 1701.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

If external fragmentation exists in the L2TP environment, you must configure a *quick-forwarding-ignore* traffic rule that bypasses all IP traffic targeted to either the LNS or LAC IP address. (See "*Configuring Traffic Rules and Counters"* in the *Cisco SCE8000 10GBE Software Configuration Guide* or *"Configuring Traffic Rules and Counters"* in the *Cisco SCE8000 GBE Software Configuration Guide*.) This rule ensures that any packets not having the L2TP port indication (that is, non-first fragments) will not require handling by the traffic processors.

In addition, to prevent reordering of L2TP tunneled fragments, you should define a *quick-forwarding* traffic rule for all the L2TP traffic. This rule can be based on the IP ranges in use by the internal IPs in the tunnel (as allocated by the LNS) or for all of the traffic passing through the Cisco SCE platform.

Note that flow redirection and flow blocking cannot be performed on the quick-forwarded traffic.

Authorization: admin

Examples

The following example shows how to configure port 1000 as the L2TP port:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#l2tp identify-by port-number 1000
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard l2tp	Displays the currently configured L2TP support parameters.
ip-tunnel l2tp skip	Configures the recognition of L2TP tunnels and skipping into the internal IP packet.

line vty

Enters Line Configuration mode for Telnet lines, which configures all Telnet lines.

line vty *start-number [end-number]*

Syntax Description

start-number	Starting number ranging from 0 to 4. The actual number supplied does not matter. All Telnet lines are configured by this command.
end-number	Ending number ranging from 0 to 4. The actual number supplied does not matter. All Telnet lines are configured by this command.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The system prompt changes to reflect Line Configuration mode. To return to Global configuration mode, use the **exit** command.

Authorization: admin

Examples

The following example shows how to enter Line Configuration mode for all lines:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#line vty 0
SCE8000(config-line)#
```

Related Commands

Command	Description
show line vty	Displays the Telnet configuration.
exit	Exits from the current mode to the next “lower” level.

link failure-reflection

Enables link failure reflection.

To disable link failure reflection, use the **no** form of this command.

link failure-reflection [on-all-ports] [linecard-aware]

no link failure-reflection [linecard-aware]

Syntax Description

on-all-ports	(SCE 8000 10GBE platforms only) Enables reflection of a link failure to all ports.
linecard-aware	(SCE 8000 10GBE platforms only) Prevents link failure reflection if the failure might be in the line card.

Command Default

Link failure reflection is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use the **linecard-aware** keyword when each link of the Cisco SCE 8000 10GBE platform (subscriber-side interface and the corresponding network-side interface) is connected to a different line card.

This mode reflects a failure of one port to the other three ports of the Cisco SCE 8000 10GBE platform differently, depending on whether the failure appears to be in the Cisco SCE platform itself or not:

- One interface of the Cisco SCE 8000 10GBE platform is down, indicating a problem with the Cisco SCE platform—Link failure is reflected to the other three SCE platform ports.
- Two reciprocal ports of the Cisco SCE 8000 10GBE platform are down, indicating a problem in the line card to which the Cisco SCE platform is connected and not in the interface—No action is taken. This response allows the second link in the Cisco SCE platform to continue functioning without interruption.

Use the **no** form of this command with the **linecard-aware** keyword to disable linecard-aware mode without disabling link failure reflection itself.

None of the keywords can be used with the Cisco SCE 8000 GBE platform.

Authorization: admin

Examples

The following example shows how to enable the reflection of a link failure to all ports (SCE 8000 10GBE platform only):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#link failure-reflection on-all-ports
SCE8000(config if)#
```

The following example shows how to enable the reflection of a link failure. This form of the command is the only one that can be used on the Cisco SCE 8000 GBE platform (but it can also be used on the Cisco SCE 8000 10GBE platform).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#link failure-reflection
SCE8000(config if)#
```

Related Commands

Command	Description
link port-enhanced-recovery	Enables link port enhanced recovery.

link mode

Configures the link mode. The link mode allows you to force the specified behavior on the link, which may be useful during installation and for debugging the network.

link mode {all-links *mode}*

Syntax Description

all-links	Sets the link mode for all links. (The link mode cannot be set separately for individual links.)
mode	**Establishes the link mode. Choose forwarding, bypass, or cutoff.**

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#link mode all-links bypass
```

Related Commands

Command	Description
show interface linecard link mode	Displays the configured Linecard Interface link mode.

link port-enhanced-recovery

Enables link port enhanced recovery.

To disable link port enhanced recovery, use the **no** form of this command.

link port-enhanced-recovery

no port-enhanced-recovery

Syntax Description

This command has no arguments or keywords.

Command Default

Link port enhanced recovery is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Link port-enhanced-recovery tries to recover the link before link failure is declared. When enabled, it tries five times to recover the link at 200msec intervals before the link is declared down

If link failure-reflection is also configured, it comes into effect after one second.

Authorization: admin

Examples

The following example shows how to enable link port enhanced recovery.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#link port-enhanced-recovery
SCE8000(config if)#
```

Related Commands

Command	Description
link failure-reflection	Enables link failure reflection.

logger add-user-message

Adds a message string to the user log files.

logger add-user-message *message-text*

Syntax Description

message-text	Message string you want to add.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example show how to add “testing 123” as the message to the user log files:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#logger add-user-message testing 123
SCE8000#
```

logger device

Disables or enables the specified logger device.

logger device {line-attack-file-log | statistics-file-log | user-file-log} [*status]*

Syntax Description

logger device	Available logger devices are Line-Attack-File-Log (**line-attack-file-log),** SCE-agent-Statistics-Log (**statistics-file-log**), or User-File-Log (**user-file-log**).
status	Indicates whether to turn logging on or off. **Choose enabled** or **disabled.**

Command Default

Log devices are enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

System messages generated by the Cisco SCE platform are available from the following sources:

- SCE user logs (managed using **logger** commands)
- SNMP traps (displayed using the **show snmp mib** command)
- syslog server (managed using **logging** commands)

Authorization: admin

Examples

The following example shows how to disable the User-File-Log device:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logger device user-file-log disabled
SCE8000(config)#
```

Related Commands

Command	Description
logger device user-file-log max-file-size	Sets the maximum size of the log file.
logger get user-log file-name	Outputs the current user log to a target file.
clear logger	Clears the Cisco SCE platform logger (user log files).

logger device user-file-log max-file-size

Sets the maximum size of the log file.

logger device user-file-log max-file-size [*size]*

Syntax Description

size	Maximum size for the user log (in bytes).

Command Default

The default log size is 1,000,000 bytes.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the maximum size of the user-file-log device to 65000 bytes:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logger device user-file-log max-file-size 65000
SCE8000(config)#
```

Related Commands

Command	Description
logger device	Disables or enables the specified logger device.
show logger device	Displays the configuration of the specified SCE platform logger file.

logger get support-file

Generates a log file for technical support through FTP. Note that this operation may take some time.

logger get support-file *filename*

Syntax Description

filename	Name of the generated log file. The specified file must be located on an FTP site, not on the local file system.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to generate a technical support log file (via FTP) named *support.zip:*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#logger get support-file ftp://user:1234@10.10.10.10/c:/support.zip
SCE8000#
```

logger get user-log file-name

Outputs the current user log to a target file.

logger get user-log file-name *target-file*

Syntax Description

target-file	Name of the output file to which the system will write the log file information. This file can be a local path, full path, or full FTP path filename.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to retrieve the current user log files:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#logger get user-log file-name ftp://myname:mypw@10.1.1.205/d:/log.txt
SCE8000#
```

Related Commands

Command	Description
logger get support-file	Generates a log file for technical support through FTP.

logging facility

Assigns the syslog messages to the specified facility.

To reset the facility to the default (local7), use the **no** form of this command.

logging facility ***facility-type***

Syntax Description

facility-type	Syslog facility. See the "Usage Guidelines" section of this command entry for descriptions of acceptable keywords.

Command Default

local7

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Table 2-6 describes the acceptable keywords for the facility-type argument.

Table 2-6 logging facility facility-type Argument

Facility-type keyword	Description
auth	Authorization system
cron	Cron facility
daemon	System daemon
kern	Kernel
local0-local7	Reserved for locally defined messages
lpr	Line printer system
mail	Mail system
news	USENET news
sys9	System use
sys10	System use
sys11	System use
sys12	System use
sys13	System use
sys14	System use
syslog	System log

Table 2-6 logging facility facility-type Argument

Facility-type keyword	Description
user	User process
uucp	UNIX-to-UNIX copy system

Authorization: admin

Examples

The following example shows how to configure a the logging facility to syslog.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logging facility syslog
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Enables logging to a syslog server.
show logging	Displays the syslog server configuration.

logging host

Configures a remote host to receive syslog messages.

To remove a specified logging host from the configuration, use the **no** form of this command.

logging host (*hostname* | *ip-address*) [transport udp [port *port-number*]]

no logging host (*hostname* | *ip-address*)

Syntax Description

hostname	Logical name of the host that will receive the syslog messages
ip-address	IP address of the host that will receive the syslog messages.
transport udp	(Optional) Method of transport to be used. Since only UDP is supported, this option is only used when you want to configure a port number.
port-number	(Optional) Integer from 1 through 65535 that defines the port. If a port number is not specified, the standard Cisco default port number for UDP is 514.

Command Default

port number = 514

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Standard system logging to syslog is disabled by default. If logging to syslog is not enabled on your system, you must enter the **logging on** command to enable logging before you can use the **logging host** command.

The **logging host** command identifies a remote host (a device serving as a syslog server) to receive logging messages. By issuing this command more than once, you can build a list of hosts that receive logging messages.

To specify the severity level for logging to all hosts, use the **logging trap** command.

Authorization: admin

Examples

The following example shows how to configure a remote logging host.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logging host 10.10.10.30 transport udp port 100
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Enables logging to a syslog server.
logging trap	Configures the severity level of the messages to log.
show logging	Displays the syslog server configuration.

logging on

Sends SCE platform user log messages to the syslog server.

To disable sending log messages to the syslog server, use the **no** form of this command.

logging on

no logging on

Syntax Description

This command has no arguments or keywords.

Command Default

Logging to syslog is disabled by default.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

System messages generated by the Cisco SCE platform are available from the following sources:

- SCE user logs (managed using **logger** commands)
- SNMP traps (displayed using the **show snmp mib** command)
- syslog server (managed using **logging** commands)

If logging to the syslog server is disabled, system messages are available only from the Cisco SCE platform user logs or through SNMP.

Authorization: admin

Examples

The following example shows how enable sending log messages to the syslog server.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logging on
SCE8000(config)#
```

Related Commands

Command	Description
logging host	Configures the syslog host.
logging trap	Configures the severity level of the messages to log.
logging facility	Configures the facility types to log.
logging rate-limit	Configures the logging rate limit
service timestamps log	Configures the timestamp format for syslog messages.
show logging	Displays the syslog server configuration.

logging message-counter

Enables message counter in the syslog message.

To disable the message counter, use the **no** form of this command. When the message counter is disabled, no line count appears in the syslog messages.

logging message-counter

no logging message-counter

Syntax Description

This command has no arguments or keywords.

Command Default

By default, the syslog message counter is enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to disable the syslog message counter.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no logging message-counter
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Enables logging to a syslog server.

logging rate-limit

Configures the maximum number of messages logged per second.

To reset the rate limit to the default level (10), use the **no** form of this command.

logging rate-limit *rate* **[except** *severity-level***]**

no logging rate-limit

Syntax Description

rate	Number of messages to be logged per second. Valid values are 1 to 10000. The default is 10.
except *severity-level*	(Optional) Excludes messages of this severity level and higher. Valid levels are : • **fatal** • **error** • **warning** • **info**

Command Default

10 messages logged per second

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the logging rate limit. In this example, fatal error messages have no rate limit.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logging rate-limit 15 except fatal
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Enables logging to a syslog server.
logging trap	Configures the severity level of the messages to log.
show logging	Displays the syslog server configuration.

logging trap

Specifies the minimum severity level of the messages to be logged to the syslog server. Any messages at the specified security level or above will be sent to the syslog server.

To reset the minimum severity level to be logged to the default level (info), use the **no** form of this command.

logging trap ***severity-level***

no logging trap

Syntax Description

severity-level	The name of the minimum severity level at which messages should be logged. Error messages of lesser severity will not be logged to syslog. Severity levels supported by the Cisco SCE platform are as follows: • **fatal** • **error** • **warning** • **info**

Command Default

info

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

A trap is an unsolicited message sent to a remote network management host. Logging traps should not be confused with SNMP traps (SNMP logging traps require the use of the CISCO -SYSLOG-MIB and are sent using the Simple Network Management Protocol.)

Table 2-7 lists syslog severity levels and the corresponding SCOS severity levels. Not all syslog severity levels are supported on the Cisco SCE platform.

Use the **logging host** and **logging trap** commands to send messages to a remote syslog server.

Table 2-7 Syslog and SCOS Severity Levels

Syslog Severity	Level	SCOS Severity	SCOS Definition
emergency	0	Not defined	SEVERITY_EMERGENCY_LEVEL
alert	1	Not defined	SEVERITY_ALERT_LEVEL

Table 2-7 Syslog and SCOS Severity Levels

Syslog Severity	Level	SCOS Severity	SCOS Definition
critical	2	Fatal	SEVERITY_FATAL_LEVEL
error	3	Error	SEVERITY_ERROR_LEVEL
warning	4	Warning	SEVERITY_WARNING_LEVEL
notice	5	Not defined	SEVERITY_NOTICE_LEVEL
informational	6	Info	SEVERITY_INFORMATIONAL_LEVEL
debug	7	Not defined	SEVERITY_DEBUG_LEVEL

Authorization: admin

Examples

The following example shows how to configure the logging severity level to warning.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#logging trap warning
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Enables logging to a syslog server.
logging host	Configures a remote logging host.
show logging	Displays the syslog server configuration.

logout

Logs out of the command-line interface of the Cisco SCE platform.

logout

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: user

Examples

The following example shows how to log out:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#exit
SCE8000>logout
Connection closed by foreign host.
```

mac-resolver arp

Adds a static IP entry to the MAC resolver database.

To remove the static IP entry from the database, use the **no** form of this command.

mac-resolver arp *ip-address* [vlan *vlan-tag] mac-address*

no mac-resolver arp *ip-address* **[vlan** *vlan-tag] mac-address*

Syntax Description

ip-address	IP address entry to be added to the database.
vlan-tag	VLAN tag that identifies the VLAN that carries this IP address (if applicable).
mac-address	MAC address assigned to the IP address, in *xxxx.xxxx.xxxx* format.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

When adding or removing a static IP entry:

- Adding an entry

  If a client has previously registered a dynamic entry with the same IP address and VLAN tag, the entry receives the MAC address specified in the CLI command, and the entry is changed to static.

- Removing an entry

  If an entry has been added both as a dynamic entry and a static entry, it exists in the database as a static entry only (as explained in the previous paragraph). Removing the static configuration changes the entry from a static entry to a dynamic entry and deletes the corresponding user-configured MAC address.

Authorization: admin

Examples

The following example shows how to assign the MAC address 1111.2222.3333 to the IP address 10.20.30.40:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
```

```
SCE8000(config)#interface linecard 0
SCE8000(config mac-resolver arp 10.20.30.40 1111.2222.3333
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard mac-resolver arp	Displays a listing of all IP addresses and corresponding MAC addresses currently registered in the MAC resolver database.

management-agent sce-api ignore-cascade-violation

Configures the agent to ignore the errors issued when login operations are performed on a standby SCE platform.

To configure the agent to issue an error when a login operation is performed on a standby SCE platform, use the **no** form of this command.

To set the value to the default, use the **default** form of this command. (The default behavior is to issue an error when a login operation is performed on a standby SCE platform.)

management-agent sce-api ignore-cascade-violation

no management-agent sce-api ignore-cascade-violation

default management-agent sce-api ignore-cascade-violation

Syntax Description

This command has no arguments or keywords.

Command Default

An error is issued when a login operation is performed on a standby SCE platform (**no** form of the command).

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Starting in release 3.1.0, the Cisco SCE platform issues an error message when a login operation is performed on the standby SCE platform in a cascaded system. This behavior is not backward compatible for previous versions of the Cisco SCE subscriber API.

Use this command with SCOS release 3.1.0 to provide backward-compatible behavior to earlier releases in which such errors were not issued.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# management-agent sce-api ignore-cascade-violation
SCE8000(config)#
```

Related Commands

Command	Description
management-agent sce-api logging	Enables SCE subscriber API troubleshooting logging
management-agent sce-api timeout	Defines the timeout interval for disconnection of an SCE subscriber API client.

management-agent sce-api logging

Enables SCE subscriber API troubleshooting logging. This information is written to the user log.

To disable SCE subscriber API troubleshooting logging, use the **no** form of this command.

management-agent sce-api logging

no management-agent sce-api logging

Syntax Description

This command has no arguments or keywords.

Command Default

SCE subscriber API troubleshooting logging is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable SCE subscriber API troubleshooting logging:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# management-agent sce-api logging
SCE8000(config)#
```

Related Commands

Command	Description
management-agent sce-api ignore-cascade-violation	Configures the agent to ignore the errors issued when login operations are performed on a standby SCE platform.
management-agent sce-api timeout	Defines the timeout interval for disconnection of an SCE subscriber API client.

management-agent sce-api timeout

Defines the timeout interval for disconnection of an SCE subscriber API client. After the interval is reached, the resources allocated for this client are released.

management-agent sce-api timeout [*timeout-interval]*

Syntax Description

timeout-interval	Time in seconds that the client waits before timing out.

Command Default

The default interval is 300 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure a timeout interval of 10 seconds:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# management-agent sce-api timeout 10
```

Related Commands

Command	Description
management-agent sce-api ignore-cascade-violation	Configures the agent to ignore the errors issued when login operations are performed on a standby SCE platform.
management-agent sce-api logging	Enables SCE subscriber API troubleshooting logging.

management-agent system

Specifies a new package file to install for the management agent. The Cisco SCE platform extracts the actual image files from the specified package file only during the **copy running-config startup-config** command.

When using the **no** form of this command, you do not have to specify the package filename.

management-agent system *package-filename*

no management-agent system

Syntax Description

package-filename	Name of a package file that contains the new management agent software. The name should end with the .pkg file type.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to upgrade the Cisco SCE platform management agent. The package file is verified for the system and checked that it is not corrupted. The actual upgrade takes place only after executing the **copy running-config startup-config** command and rebooting the Cisco SCE platform.

Authorization: admin

Examples

The following example shows how to upgrade the system with the mng45.pkg package:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#management-agent system mng45.pkg
Verifying package file…
Package file verified OK.
SCE8000(config)#do copy running-config startup-config
Backing –up configuration file…
Writing configuration file…
Extracting new management agent…
Extracted OK.
```

Related Commands

Command	Description
copy running-config startup-config	Builds a configuration file with general configuration commands called config.txt, which is used in successive boots.

mkdir

Creates a new directory.

mkdir *directory-name*

Syntax Description

directory-name	Name of the directory to be created.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to create a new directory named *mydir:*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#mkdir mydir
CE#
```

Related Commands

Command	Description
dir	Displays the files in the current directory.

mng-vlan

Creates a new management service VLAN interface and assigns the specified IP address to that VLAN.

Use the **no** form of the command to remove the specified VLAN interface.

Use the **no** form of the command with the **all** keyword to remove the all configured management service VLANs.

mng-vlan *vlan-id* **address** *ip-address* **mask** *mask*

no mng-vlan *vlan-id*

no mng-vlan all

Syntax Description

vlan-id	VLAN tag to be assigned to the interface (1-4094).
ip-address	IP address to assign to the VLAN interface.
mask	IP subnet mask.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You can create separate VLAN interfaces on the management interface in order to differentiate between various management services. There are two steps in this process:

1. Create the VLAN and assign the IP address (**mng-vlan** command).
2. Assign the VLAN to a management service. Use one of the following commands:
   - **ip ssh mng-vlan**
   - **vty mng-vlan**
   - **snmp-server mng-vlan**

Authorization: admin

Examples

The following example shows how to create a management VLAN.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#mng-vlan 100 address 10.10.10.20 mask 255.255.255.0
SCE8000(config)#
```

The following example shows how to delete a management VLAN.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no mng-vlan 100
SCE8000(config)#
```

The following example shows how to delete all existing management VLANs.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no mng-vlan all
SCE8000(config)#
```

Related Commands

Command	Description
ip ssh mng-vlan	Assigns the specified management VLAN to the SSH service.
vty mng-vlan	Assigns the specified management VLAN to the telnet service.
snmp-server mng-vlan	Assigns the specified management VLAN to the SNMP service.

more

Displays the contents of a file.

more {*filename* **| running-config [all-data] | startup-config}**

Syntax Description

filename	Name of the file to be displayed.
running-config	Displays the running configuration file.
all-data	Displays default and nondefault settings (**running-config** keyword only).
startup-config	Displays the startup configuration file.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

You can use the **all-data** keyword with the **running-config** keyword to see sample usage for many CLI configuration commands.

Authorization: admin

Examples

The following sample output displays the contents of the running configuration file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#more running-config
#This is a general configuration file (running-config).
#Created on 16:48:11 UTC WED June 13 2001
cli-type 1
#version 1
service logger
no service password-encryption
enable password level 10 0 "cisco"
enable password level 15 0 "cisco"
service RDR-formatter
no RDR-formatter destination all
RDR-formatter history-size 0
clock timezone UTC 0
ip domain-lookup
no ip domain-name
no ip name-server
service telnetd
```

```
FastEthernet 0/0
ip address 10.1.5.120 255.255.0.0

auto
duplex auto
exit
ip default-gateway 10.1.1.1
no ip route all
line vty 0 4
no access-class in
timeout 30
exit
SCE8000#
```

Related Commands

Command	Description
show running-config	Displays the current configuration.
show startup-config	Displays the startup configuration file.

more running-config-all

To display the contents of all the currently running configuration files, use the **more running-config-all** command in the privileged EXEC mode.

more running-config-all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **more running-config-all** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#more running-config-all
#This is a general configuration file (running-config).
#Created on 16:19:09  UTC  FRI  November  18  2011
#cli-type 1
#version 1
watchdog software-reset disabled
watchdog hardware-reset disabled
hostname "pqemb154SAV"
ip ssh
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
RDR-formatter destination 10.78.242.172 port 33000 category number 1 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 2 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 3 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 4 priority 100
interface LineCard 0
aggregative-global-controllers
aggregative-global-controller-dynamic mode suspend
aggregative-global-controller-dynamic mode active
connection-mode inline on-failure bypass
no watchdog
```

```
no silent
no shutdown
flow-open-mode enhanced UDP min-packets 2
statistics-logging frequency 5
service-bandwidth-prioritization-mode global
no protocol-pack version
no VAS-traffic-forwarding VAS server-id 0 health-check
no VAS-traffic-forwarding VAS server-id 1 health-check
no VAS-traffic-forwarding VAS server-id 2 health-check
no VAS-traffic-forwarding VAS server-id 3 health-check
no VAS-traffic-forwarding VAS server-id 4 health-check
no VAS-traffic-forwarding VAS server-id 5 health-check
no VAS-traffic-forwarding VAS server-id 6 health-check
no VAS-traffic-forwarding VAS server-id 7 health-check
no VAS-traffic-forwarding VAS server-id 8 health-check
no VAS-traffic-forwarding VAS server-id 9 health-check
no VAS-traffic-forwarding VAS server-id 10 health-check
no VAS-traffic-forwarding VAS server-id 11 health-check
no VAS-traffic-forwarding VAS server-id 12 health-check
no VAS-traffic-forwarding VAS server-id 13 health-check
no VAS-traffic-forwarding VAS server-id 14 health-check
no VAS-traffic-forwarding VAS server-id 15 health-check
no VAS-traffic-forwarding VAS server-id 16 health-check
no VAS-traffic-forwarding VAS server-id 17 health-check
no VAS-traffic-forwarding VAS server-id 18 health-check
no VAS-traffic-forwarding VAS server-id 19 health-check
no VAS-traffic-forwarding VAS server-id 20 health-check
no VAS-traffic-forwarding VAS server-id 21 health-check
no VAS-traffic-forwarding VAS server-id 22 health-check
no VAS-traffic-forwarding VAS server-id 23 health-check
no VAS-traffic-forwarding VAS server-id 24 health-check
no VAS-traffic-forwarding VAS server-id 25 health-check
no VAS-traffic-forwarding VAS server-id 26 health-check
no VAS-traffic-forwarding VAS server-id 27 health-check
no VAS-traffic-forwarding VAS server-id 28 health-check
no VAS-traffic-forwarding VAS server-id 29 health-check
no VAS-traffic-forwarding VAS server-id 30 health-check
no VAS-traffic-forwarding VAS server-id 31 health-check
no VAS-traffic-forwarding VAS server-id 32 health-check
no VAS-traffic-forwarding VAS server-id 33 health-check
no VAS-traffic-forwarding VAS server-id 34 health-check
no VAS-traffic-forwarding VAS server-id 35 health-check
no VAS-traffic-forwarding VAS server-id 36 health-check
no VAS-traffic-forwarding VAS server-id 37 health-check
no VAS-traffic-forwarding VAS server-id 38 health-check
no VAS-traffic-forwarding VAS server-id 39 health-check
no VAS-traffic-forwarding VAS server-id 40 health-check
no VAS-traffic-forwarding VAS server-id 41 health-check
no VAS-traffic-forwarding VAS server-id 42 health-check
no VAS-traffic-forwarding VAS server-id 43 health-check
no VAS-traffic-forwarding VAS server-id 44 health-check
no VAS-traffic-forwarding VAS server-id 45 health-check
no VAS-traffic-forwarding VAS server-id 46 health-check
no VAS-traffic-forwarding VAS server-id 47 health-check
no VAS-traffic-forwarding VAS server-id 48 health-check
no VAS-traffic-forwarding VAS server-id 49 health-check
no VAS-traffic-forwarding VAS server-id 50 health-check
no VAS-traffic-forwarding VAS server-id 51 health-check
no VAS-traffic-forwarding VAS server-id 52 health-check
no VAS-traffic-forwarding VAS server-id 53 health-check
no VAS-traffic-forwarding VAS server-id 54 health-check
no VAS-traffic-forwarding VAS server-id 55 health-check
no VAS-traffic-forwarding VAS server-id 56 health-check
no VAS-traffic-forwarding VAS server-id 57 health-check
```

```
no VAS-traffic-forwarding VAS server-id 58 health-check
no VAS-traffic-forwarding VAS server-id 59 health-check
no VAS-traffic-forwarding VAS server-id 60 health-check
no VAS-traffic-forwarding VAS server-id 61 health-check
no VAS-traffic-forwarding VAS server-id 62 health-check
no VAS-traffic-forwarding VAS server-id 63 health-check
no sanity-checks test-packets
no sanity-checks attack-filter
no sanity-checks event-counters Flow-ID-Allocations-Failed
no l7-filter
no attack-filter protocol TCP
no attack-filter protocol UDP
no attack-filter protocol ICMP attack-direction single-side-both
no attack-filter protocol other attack-direction single-side-both
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 1/2
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 3/0/0
auto-negotiate
interface GigabitEthernet 3/1/0
auto-negotiate
interface GigabitEthernet 3/2/0
auto-negotiate
interface GigabitEthernet 3/3/0
auto-negotiate
exit
ip default-gateway 10.78.242.129
line vty 0 4
no timeout
exit
interface Mng 0/1
no auto-fail-over
exit
interface Mng 0/2
active-port
exit
sub-attribute add-attribute Called-Station-ID
sub-attribute add-attribute 3GPP-Charging-Characteristics
sub-attribute add-attribute 3GPP-GPRS-Negotiated-QoS-Profile
sub-attribute add-attribute 3GPP-RAT-Type
sub-attribute add-attribute 3GPP-SGSN-Address-Code-6
sub-attribute add-attribute 3GPP-SGSN-Address
sub-attribute add-attribute 3GPP-SGSN-MCC-MNC
cdp mode bypass
service debug-shell
service debug-telnet
service debug-ssh
debug const-db name lcConstDb.rucSched.shutWaitBeforeShuttingRucs value 1000
debug const-db name lcConstDb.rucSched.shutWaitAfterShuttingRucs value 1000
debug const-db name lcConstDb.traverser.maxClsFcIds value 3312
debug const-db name lcConstDb.traverser.clsFcIdsThreshold value 3248
debug const-db name lcConstDb.sanityChecks.enableTestPackets value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsEF value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsBE value false
debug const-db name lcConstDb.attackFilter.maxTotalPacketsIncrease value 1e+10
debug const-db name commonConstDb.sli.minSupportedObjectFormat value 13
diameter
no subscriber LEG dhcp-lease-query
subscriber LEG dhcp-lease-query servers 127.0.0.1
logger device SCE-agent-Statistics-Log max-file-size 204800
```

```
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.7.0 build 514"
management-agent property "com.pcube.management.framework.install.activation.date" "Wed
Nov 16 11:57:15 UTC 2011"
ip ftp-server
ip http-tech-if
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration

#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 16:19:29  UTC  FRI  November  18  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "party-name"
party mapping ip-address 1.2.3.4 name party-name
party name  party-name hw-bypass
SCE8000#
```

Related Commands

Command	Description
show running-config	Displays the contents of the currently running configuration.
show running-config-all	Displays the contents of all the currently running configuration files.
show running-config-application	Displays the contents of the currently running configuration application on the Cisco SCE platform.
show running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured on the Cisco SCE platform.

more running-config-application

To display the contents of the currently running configuration application on the Cisco SCE platform, use the more running-config-application in the privileged EXEC mode.

more running-config-application

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the the **more running-config-application** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>more running-config-application
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration
#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
SCE8000#>
```

Related Commands

Command	Description
show running-config-application	Displays the contents of the currently running configuration application in the Cisco SCE platform.

more running-config-party-db

To display the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform, use the more running-config-party-db command in the privileged EXEC mode.

more running-config-party-db

Syntax Description

This command has no arguments or keywords.

Command Default

Default Party

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **more running-config-party-db** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>more running-config-party-db
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:02  UTC  TUE  July  12  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
party name *party-name* **hw-bypass**	Sets the hardware bypass state for the specified static party in the hardware bypass mode of the Cisco SCE platform.
show party name *party-name*	Displays the contents of the specified static party in the Cisco SCE platform.
show party name *party-name* **hw-bypass**	To display the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform, use the **show party name hw-bypass** command in the privileged EXEC mode.
show running-config-all	Displays the contents of all the currently running configuration files.
show running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform.

more startup-config-all

To display the contents of all the startup configuration files, use the **more startup-config-all** command in the privileged EXEC mode.

more startup-config-all

Note The configuration file contents will be displayed only if all the startup configuration files are copied from the running configuration.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **more startup-config-all** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#more startup-config-all
#This is a general configuration file (running-config).
#Created on 16:19:09  UTC  FRI  November  18  2011
#cli-type 1
#version 1
watchdog software-reset disabled
watchdog hardware-reset disabled
hostname "pqemb154SAV"
ip ssh
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
RDR-formatter destination 10.78.242.172 port 33000 category number 1 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 2 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 3 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 4 priority 100
interface LineCard 0
```

```
aggregative-global-controllers
aggregative-global-controller-dynamic mode suspend
aggregative-global-controller-dynamic mode active
connection-mode inline on-failure bypass
no watchdog
no silent
no shutdown
flow-open-mode enhanced UDP min-packets 2
statistics-logging frequency 5
service-bandwidth-prioritization-mode global
no protocol-pack version
no VAS-traffic-forwarding VAS server-id 0 health-check
no VAS-traffic-forwarding VAS server-id 1 health-check
no VAS-traffic-forwarding VAS server-id 2 health-check
no VAS-traffic-forwarding VAS server-id 3 health-check
no VAS-traffic-forwarding VAS server-id 4 health-check
no VAS-traffic-forwarding VAS server-id 5 health-check
no VAS-traffic-forwarding VAS server-id 6 health-check
no VAS-traffic-forwarding VAS server-id 7 health-check
no VAS-traffic-forwarding VAS server-id 8 health-check
no VAS-traffic-forwarding VAS server-id 9 health-check
no VAS-traffic-forwarding VAS server-id 10 health-check
no VAS-traffic-forwarding VAS server-id 11 health-check
no VAS-traffic-forwarding VAS server-id 12 health-check
no VAS-traffic-forwarding VAS server-id 13 health-check
no VAS-traffic-forwarding VAS server-id 14 health-check
no VAS-traffic-forwarding VAS server-id 15 health-check
no VAS-traffic-forwarding VAS server-id 16 health-check
no VAS-traffic-forwarding VAS server-id 17 health-check
no VAS-traffic-forwarding VAS server-id 18 health-check
no VAS-traffic-forwarding VAS server-id 19 health-check
no VAS-traffic-forwarding VAS server-id 20 health-check
no VAS-traffic-forwarding VAS server-id 21 health-check
no VAS-traffic-forwarding VAS server-id 22 health-check
no VAS-traffic-forwarding VAS server-id 23 health-check
no VAS-traffic-forwarding VAS server-id 24 health-check
no VAS-traffic-forwarding VAS server-id 25 health-check
no VAS-traffic-forwarding VAS server-id 26 health-check
no VAS-traffic-forwarding VAS server-id 27 health-check
no VAS-traffic-forwarding VAS server-id 28 health-check
no VAS-traffic-forwarding VAS server-id 29 health-check
no VAS-traffic-forwarding VAS server-id 30 health-check
no VAS-traffic-forwarding VAS server-id 31 health-check
no VAS-traffic-forwarding VAS server-id 32 health-check
no VAS-traffic-forwarding VAS server-id 33 health-check
no VAS-traffic-forwarding VAS server-id 34 health-check
no VAS-traffic-forwarding VAS server-id 35 health-check
no VAS-traffic-forwarding VAS server-id 36 health-check
no VAS-traffic-forwarding VAS server-id 37 health-check
no VAS-traffic-forwarding VAS server-id 38 health-check
no VAS-traffic-forwarding VAS server-id 39 health-check
no VAS-traffic-forwarding VAS server-id 40 health-check
no VAS-traffic-forwarding VAS server-id 41 health-check
no VAS-traffic-forwarding VAS server-id 42 health-check
no VAS-traffic-forwarding VAS server-id 43 health-check
no VAS-traffic-forwarding VAS server-id 44 health-check
no VAS-traffic-forwarding VAS server-id 45 health-check
no VAS-traffic-forwarding VAS server-id 46 health-check
no VAS-traffic-forwarding VAS server-id 47 health-check
no VAS-traffic-forwarding VAS server-id 48 health-check
no VAS-traffic-forwarding VAS server-id 49 health-check
no VAS-traffic-forwarding VAS server-id 50 health-check
no VAS-traffic-forwarding VAS server-id 51 health-check
no VAS-traffic-forwarding VAS server-id 52 health-check
```

```
no VAS-traffic-forwarding VAS server-id 53 health-check
no VAS-traffic-forwarding VAS server-id 54 health-check
no VAS-traffic-forwarding VAS server-id 55 health-check
no VAS-traffic-forwarding VAS server-id 56 health-check
no VAS-traffic-forwarding VAS server-id 57 health-check
no VAS-traffic-forwarding VAS server-id 58 health-check
no VAS-traffic-forwarding VAS server-id 59 health-check
no VAS-traffic-forwarding VAS server-id 60 health-check
no VAS-traffic-forwarding VAS server-id 61 health-check
no VAS-traffic-forwarding VAS server-id 62 health-check
no VAS-traffic-forwarding VAS server-id 63 health-check
no sanity-checks test-packets
no sanity-checks attack-filter
no sanity-checks event-counters Flow-ID-Allocations-Failed
no l7-filter
no attack-filter protocol TCP
no attack-filter protocol UDP
no attack-filter protocol ICMP attack-direction single-side-both
no attack-filter protocol other attack-direction single-side-both
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 1/2
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 3/0/0
auto-negotiate
interface GigabitEthernet 3/1/0
auto-negotiate
interface GigabitEthernet 3/2/0
auto-negotiate
interface GigabitEthernet 3/3/0
auto-negotiate
exit
ip default-gateway 10.78.242.129
line vty 0 4
no timeout
exit
interface Mng 0/1
no auto-fail-over
exit
interface Mng 0/2
active-port
exit
sub-attribute add-attribute Called-Station-ID
sub-attribute add-attribute 3GPP-Charging-Characteristics
sub-attribute add-attribute 3GPP-GPRS-Negotiated-QoS-Profile
sub-attribute add-attribute 3GPP-RAT-Type
sub-attribute add-attribute 3GPP-SGSN-Address-Code-6
sub-attribute add-attribute 3GPP-SGSN-Address
sub-attribute add-attribute 3GPP-SGSN-MCC-MNC
cdp mode bypass
service debug-shell
service debug-telnet
service debug-ssh
debug const-db name lcConstDb.rucSched.shutWaitBeforeShuttingRucs value 1000
debug const-db name lcConstDb.rucSched.shutWaitAfterShuttingRucs value 1000
debug const-db name lcConstDb.traverser.maxClsFcIds value 3312
debug const-db name lcConstDb.traverser.clsFcIdsThreshold value 3248
debug const-db name lcConstDb.sanityChecks.enableTestPackets value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsEF value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsBE value false
debug const-db name lcConstDb.attackFilter.maxTotalPacketsIncrease value 1e+10
debug const-db name commonConstDb.sli.minSupportedObjectFormat value 13
```

```
diameter
no subscriber LEG dhcp-lease-query
subscriber LEG dhcp-lease-query servers 127.0.0.1
logger device SCE-agent-Statistics-Log max-file-size 204800
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.7.0 build 514"
management-agent property "com.pcube.management.framework.install.activation.date" "Wed
Nov 16 11:57:15 UTC 2011"
ip ftp-server
ip http-tech-if
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration

#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 16:19:29  UTC  FRI  November  18  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "party-name"
party mapping ip-address 1.2.3.4 name party-name
party name  party-name hw-bypass
SCE8000#
```

Related Commands

Command	Description
more startup-config-all	Displays all the contents of the startup configuration files.
show startup-config-all	Displays all the contents of the startup configuration files.
show startup-config-application	Displays the contents of the startup configuration application files in the Cisco SCE platform.
show startup-config-party-db	Displays the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform.

more startup-config-application

To display the contents of the startup configuration application files in the Cisco SCE platform, use the **more startup-config-application** command in the Privileged EXEC mode.

more startup-config-application

Note The configuration file contents will be displayed only if the corresponding startup configuration application is copied from the running configuration application.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **more startup-config-application** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>more startup-config-application
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration
#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
SCE8000#>
```

Related Commands

Command	Description
show startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-application	Displays the contents of all the startup configuration application files in the Cisco SCE platform.

more startup-config-party-db

To display the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform, use the **more startup-config-party-db** command in the privileged EXEC mode.

more startup-config-party-db

Note The contents of the startup configuration party database will be displayed only if the startup configuration party database is copied from the running configuration party database.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **more startup-config-party-db** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>more startup-config-party-db
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:02  UTC  TUE  July  12  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
copy startup-config-party-db *backupfile*	Enables the task of copying the startup configuration party database and create a backup file of the configured static parties in the Cisco SCE platform.
more running-config-all	Displays the contents of all the currently running configuration files.
more running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform.
more startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-all	Displays the contents of all the startup configuration files.
show startup-config-party-db	Displays the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform.

more user-log

Displays the user log on the CLI console screen.

more user-log

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the user log on the CLI console screen:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#more user-log
<INFO>| 01/28/97 22:29:22 | CPU #000 | Logger: Task Initialized successfully
```

Related Commands

Command	Description
logger get user-log file-name	Outputs the current user log to a target file.
show log	Displays the contents of the user log file.

mpls

Configures the MPLS environment. Up to a maximum of 15 MPLS labels per packet are supported.

When all IP addresses are unique and MPLS labels are not mandatory (a non-MPLS/VPN environment), use the **traffic-engineering skip** form of this command.

To set the MPLS configuration to the default value, use the **default** form of this command.

mpls traffic-engineering skip

mpls vpn skip

default mpls

Syntax Description

See **Usage Guidelines**.

Command Default

traffic-engineering skip is enabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command as follows:

- **traffic-engineering skip**

  Any packets that are injected by the Cisco SCE into the MPLS labeled traffic (block or redirect) are sent with no MPLS labels. Use this mode when the MPLS labels in the traffic are used only for traffic engineering, such as QOS, and not for routing.

  This mode is the default, and it should be changed only if MPLS is used for routing in the network and block or redirect is being employed. However, first verify that no private IP conflicts exist in the network.

- **vpn skip**

  Use this command when all IP addresses are unique, MPLS labels are used, and the labels used for injection are the correct ones, as seen on the flow. This mode can be used when the MPLS labels are used for routing or for VPNs (assuming no private IP addresses are being used).

  The **vpn skip** mode is an asymmetric Layer 2 mode. You should expect reduced performance and capacity, because the system must follow the flow and keep the Layer 2 information.

Authorization: admin

Examples

The following example shows the use of this command in a non-MPLS/VPN environment:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#mpls traffic-engineering skip
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard mpls	Displays the current MPLS configuration.

no subscriber

To remove a specificsubscriber from the system, use the **no subscriber** command in interface linecard configuration mode.

no subscriber name *subscriber-name*

no subscriber scmp name *scmp-name* **all**

no subscriber sm all

no subscriber all [with-vpn-mappings]

Syntax Description

subscriber-name	Specific subscriber name to be removed from the system.
scmp name all	Removes all subscribers managed by the specified SCMP peer device.
scmp-name	Name of an SCMP peer device.
sm all	Removes all subscribers managed by the SM.
all	Removes all introduced subscribers.
with-vpn-mappings	Removes all VPN-based subscribers. This option allows you to switch out of VPN mode when the SM is down

Command Default

None

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

This command may affect the performance of the party db because the command triggers sequential processes that affect the flows and may result in removing the party context. We recommend that you do not run this command in an active network which contains large number of subscribers.

Caution Use the **with-vpn-mappings** option *only* when the Cisco SCE platform is disconnected from the Subscriber Manager.

Authorization: admin

Examples

The following example shows how to remove all subscribers:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# no subscriber all
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard subscriber	Displays subscribers that meet specified criteria.

no subscriber mappings included-in

Removes all existing subscriber mappings from a specified IP range.

no subscriber mappings included-in ip-range *ip-range*

Syntax Description

ip-range	Removes all existing subscriber mappings from the specified IP range.
ip-range	IP address and mask length defining the IP range.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to remove any existing subscriber mappings from the specified IP range:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# no subscriber mappings included-in ip-range 10.10.10.10/0
```

Related Commands

Command	Description
show interface linecard subscriber mapping	Displays subscribers whose mapping meets the specified criteria.

os-fingerprinting

Enables OS fingerprinting and loads the *default.fp* signature file.

To disable OS fingerprinting, use the **no** form of this command.

os-fingerprinting

no os-fingerprinting

Syntax Description

This command has no arguments or keywords.

Command Default

By default, OS fingerprinting is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

When OS fingerprinting is enabled, you can also configure the following OS fingerprinting parameters:

- Sampling window—How long flows from a subscriber are fingerprinted
- Interval—Interval between OS fingerprinting sampling periods
- NAT detection window—Time period within which detecting multiple operating systems for the same subscriber or IP address triggers NAT identification
- OS flush time–Time interval after which OS information is flushed from the system
- Signature file—Name of OS fingerprint signature file
- Scan port—Port used for opening OS fingerprinting flows.
- GX reporting—Enable sending subscriber OS information in Gx messages

Authorization: admin

Examples

The following example shows how to enable OS fingerprinting.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)#
```

Related Commands

Command	Description
os-fingerprinting sampling	Configures the OS fingerprinting sampling period and interval.
os-fingerprinting NAT-detection-window	Configures the OS fingerprinting NAT detection window.
os-fingerprinting os-flush-time	Configures the OS fingerprinting OS flush time.
os-fingerprinting scan-port	Configures the port used for opening OS fingerprinting flows.
os-fingerprinting signature-file	Specifies the OS fingerprinting file.
os-fingerprinting gx-report	Enables sending subscriber OS information in Gx messages.
show os-fingerprinting config	Displays the current OS fingerprinting configuration.

os-fingerprinting gx-report

Enables sending subscriber OS information in Gx messages.

To disable sending subscriber OS information in Gx messages, use the **no** form of this command.

os-fingerprinting gx-report

no os-fingerprinting gx-report

Syntax Description

This command has no arguments or keywords.

Command Default

Disabled

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

If sending subscriber OS information in Gx messages is enabled, the OS information will be included in the following Gx messages:

- OS type will be sent as a VSA in CCR-U each time a new OS type is detected for that subscriber.

Authorization: admin

Examples

The following example shows how to enable sending subscriber OS information in Gx messages.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)#os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)# os-fingerprinting gx-report
SCE8000(config)#
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.

os-fingerprinting NAT-detection-window

Enables NAT detection and configures the time period within which detecting multiple operating systems for one subscriber will trigger NAT identification.

To disable NAT detection, use the **no** form of this command.

os-fingerprinting NAT-detection-window ***time***

no os-fingerprinting NAT-detection-window

Syntax Description

time	Time period within which detecting multiple operating systems will trigger NAT identification, in seconds (10-300)

Command Default

By default, NAT detection is disabled.

Time = 10 second

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

If multiple operating systems are detected for the same subscriber or IP address within the configured time period, they will be identified as part of NAT environment. Multiple operating systems detected for the same IP address over a longer time period will not be identified as part of NAT.

You must first enable OS fingerprinting (see **os-fingerprinting**).

Authorization: admin

Examples

The following example shows how to enable NAT detection and set the NAT detection window to 200 seconds.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)# os-fingerprinting NAT-detection-window 200
SCE8000(config if)#
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.
show os-fingerprinting config	Displays the current OS fingerprinting configuration.

os-fingerprinting os-flush-time

Enables flushing OS fingerprinting information and configures the time interval after which OS fingerprinting information is flushed from the system.

To disable OS flush, use the **no** form of this command.

os-fingerprinting os-flush-time ***time***

no os-fingerprinting os-flush-time

Syntax Description

time	Time period, in days (1-5)

Command Default

By default, flushing OS fingerprinting information is disabled.

Time = 1 day

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

If the OS fingerprinting information for a subscriber is not updated for the configured time interval, the OS information for the subscriber is flushed from the system. So, for example, if the OS flush time is set to one day, the OS information for a subscriber that has not been updated is flushed after one day when new traffic is detected for the subscriber.

You must first enable OS fingerprinting (see **os-fingerprinting**).

Authorization: admin

Examples

The following example shows how to enable flushing the OS fingerprinting information and set the OS flush time to three days.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)# os-fingerprinting os-flush-time 3
SCE8000(config if)#
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.
show os-fingerprinting config	Displays the current OS fingerprinting configuration.

os-fingerprinting sampling

Configures the sampling window and the sampling interval for OS fingerprinting.

To reset the OS fingerprinting sampling window and interval to their default values, use the **no** form of this command.

os-fingerprinting sampling

no os-fingerprinting sampling

Syntax Description

window	How long flows from a subscriber are fingerprinted, in seconds (10-300)
interval	Interval between fingerprinting periods, in minutes (10-1440)

Command Default

Window = 10 seconds

Interval = 10 minutes

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You must first enable OS fingerprinting (see **os-fingerprinting**).

Authorization: admin

Examples

The following example shows how to sample OS fingerprinting for 50 seconds (window) every 60 minutes (interval).

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.
show os-fingerprinting config	Displays the current OS fingerprinting configuration.

os-fingerprinting scan-port

Configures the port used for opening OS fingerprinting flows.

To reset the OS scan port to the default value, use the **no** form of this command.

os-fingerprinting scan-port ***port#***

no os-fingerprinting scan-port

Syntax Description

port#	Number of the port to be used for OS fingerprinting.

Command Default

port# = 80

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The port numbers can be in the range of 0 - 65535. However, the following ports are blocked:

20 FTP—data transfer

21 FTP—control (command)

554 Real Time Streaming Protocol (RTSP)

651 IEEE-MMS

654 Media Management System (MMS) Media Management Protocol (MMP)[23

1755 Microsoft Media Services (MMS, ms-streaming)

2948 WAP-push Multimedia Messaging Service (MMS)

2949 WAP-pushsecure Multimedia Messaging Service (MMS)

194 Internet Relay Chat (IRC)

4374 PSI Push-to-Talk Protocol

1720 H.323 Call signalling

2000 Cisco SCCP (Skinny)

5060 Session Initiation Protocol (SIP)

5061 Session Initiation Protocol (SIP) over TLS

Authorization: admin

Examples

The following example shows how to set the OS fingerprinting to use port 100.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)# os-fingerprinting scan-port 100
SCE8000(config if)#
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.
show os-fingerprinting config	Displays the current OS fingerprinting configuration.

os-fingerprinting signature-file

Specifies the signature file used for OS fingerprinting.

os-fingerprinting signature-file *filename*

Syntax Description

filename	Name of the signature file used for OS fingerprinting.

Command Default

Filename = default.f0p (signature file packaged with the SCOS release)

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

An encrypted signature file for OS fingerprinting is packaged with each SCOS release; this file is the default signature file. Use this command to change the signature file used for OS fingerprinting. The signature file to be updated must be placed in the path /apps/data/scos in order for the signature file update to be successful.

Authorization: admin

Examples

The following example shows how to change the OS fingerprinting signature file.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000#config)# interface linecard 0
SCE8000(config if)# os-fingerprinting
OsFingerPrint enable success
SCE8000(config if)# os-fingerprinting signature-file os-signs.fp
SCE8000(config if)#
```

Related Commands

Command	Description
show os-fingerprinting signature-file *filename*	Displays the unencrypted contents of the specified signature file.

party default-type

To configure the default subscription ID type to be sent in the CCR messages to PCRF, use the **party default-type** command.

party default-type {nai | imsi | e164 | sip-uri | private }

Syntax Description

nai	Sets the default subscription ID type as END_USER_NAI.
imsi	Sets the default subscription ID type as END_USER_IMSI.
e164	Sets the default subscription ID type as END_USER_E164.
sip-uri	Sets the default subscription ID type as END_USER_SIP-URI.
private	Sets the default subscription ID type as END_USER_PRIVATE

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Valid subscription ID types are:

- END_USER_E164
- END_USER_IMSI
- END_USER_NAI
- END_USER_SIP-URI
- END_USER_PRIVATE

Examples

The following example shows how to set the party default type for END_USER_IMSI subscription ID type:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000#config)# party default-type imsi
```

party mapping ip-address name

To set the IP address for a specified static party in the Cisco SCE platform, use the **party mapping ip-address name** command in the global configuration mode.

Use the **no** form of the command to remove the mapping of an IP address.

party mapping {ip-address *ip-address* **| ipv6-address** *ipv6-address***} name** *party-name*

no party mapping {ip-address *ip-address* **| ipv6-address** *ipv6-address***} name** *party-name*

Syntax Description

ip-address	Sets the IPv4 address of the static party.
ip-address	IP address of the static party that is created.
ipv6-address	Sets the IPv6 address of the static party.
ipv6-address	IPv6 address of the static party that is created.
party-name	Name of the configured static party.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.
3.8.0	Support for IPv6 addresses added.

Usage Guidelines

The authorization used is root.

Examples

The following example shows how to set the IPv6 address for the specified static party test:

```
SCE8000> enable 15
Password: <cisco>
SCE8000# config
SCE8000(config)#> mapping ipv6-address 24:11:52:128::0 name test
SCE8000(config)# exit
```

The following example shows how to set the IPv4 address for the specified static party test:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#>party mapping ip-address 24.11.52.128 name test
SCE8000(config)#exit
```

Related Commands

Command	Description
party mapping ip-range *ip-address/mask-value* **name** *party-name*	Sets the IP range for a specified static party in the Cisco SCE platform.
party name *party-name*	Allows the creation of a specified static party in the Cisco SCE platform.
show party name *party-name*	Displays the contents of a specified static party in the Cisco SCE platform.

party mapping ip-range

To set the IP range for a specified static party in the Cisco SCE platform, use the **party mapping ip-range** command in the global configuration mode.

Use the **no** form of the command to remove the mapping of an IPv6 range.

party mapping ip-range {*ip-address/mask-value* | *ipv6-address/prefix-length***} name** *party-name*

no party mapping ip-range {*ip-address/mask-value* | *ipv6-address/prefix-length***} name** *party-name*

Note If the mask value is not provided for the corresponding IP address, the complete mask value of 32 is considered for the specified IP address.

Syntax Description

ip-address	IP address of the static party which is created.
mask-value	Mask value that is to be set for the specified IP address.
ipv6-address	IPv6 address of the static party which is created.
prefix-length	Prefix length that is to be set for the specified IP address.
party-name	Name of the configured static party.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.
3.8.0	IPv6 address support was added.

Usage Guidelines

The authorization used is root.

Examples

The following example shows how to set the IP range for the specified static party test:

```
SCE8000> enable 15
Password: <cisco>
SCE8000# configure
SCE8000(config)#> party mapping IPv6-range 1:2:3:4::0/64 name test
SCE8000(config)# exit
```

The following example shows how to set the IP range for the specified static party test:

```
SCE8000> enable 15
Password:<cisco>
SCE8000# configure
SCE8000(config)#> party mapping ip-range 1.2.3.0/31 name [party-name]
SCE8000(config)# exit
```

Related Commands

Command	Description
party mapping ip-address *ip-address* **name** *party-name*	Sets the IP address for a specified static party in the Cisco SCE platform.
party name *party-name*	Allows the creation of a specified static party in the Cisco SCE platform.
show party name *party-name*	Displays the contents of a specified static party in the Cisco SCE platform.

party name

To enable the task of creating a static party in the Cisco SCE platform, use the **party name** command in the global configuration mode. To delete the static party that is created, use the **no form** of this command.

party name *party-name*

no party name *party-name*

*party-nam***e**	Name of the static party that is to be created.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following example shows how to create a static party:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#> party name [party-name]
SCE8000(config)#
```

Related Commands

Command	Description
party name *party-name* **hw-bypass**	Sets the hardware bypass state for a specified static party in the hardware bypass mode of the Cisco SCE platform.
party mapping ip-address *ip-address* **name** *party-name*	Sets the IP address for a specified static party in the Cisco SCE platform.
party mapping ip-range *ip-range/mask-value* **name** *party-name*	Sets the IP range for a specified static party in the Cisco SCE platform.
show party name *party-name*	Displays the contents of a specified static party in the Cisco SCE platform.
show party name *party-name* **hw-bypass**	To display the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform.

party name hw-bypass

To set the hardware bypass state for a specified static party in the hardware bypass mode of the Cisco SCE platform, use the **party name hw-bypass** command in the global configuration mode. To reset the hardware bypass state for the static party in the hardware bypass mode, use the **no form** of this command.

party name *party-name* **hw-bypass**

no party name *party-name* **hw-bypass**

Note The static parties created only in hw-bypass mode are hardware bypassed.

Syntax Description

party-name	Name of the static party for which to set or reset the hardware bypass state.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Note This command is not applicable to IPv6 static subscribers.

Examples

The following example shows how to set the hardware bypass state for a static party:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#> party name [party-name] hw-bypass
SCE8000(config)#exit
```

The following example shows how to reset the hardware bypass state for a static party:

```
SCE8000> enable 15
Password:<cisco>
SCE8000#config
SCE8000(config)#> no party name [party-name] hw-bypass
SCE8000(config)#exit
```

Related Commands

Command	Description
show party name *party-name*	Displays the contents of a specified static party in the Cisco SCE platform.
show party name *party-name* **hw-bypass**	Displays the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform.

party template index

To configure the values of tunables, such as Package ID and Monitor, for a particular subscriber (with the template index) in the Cisco SCE platform, use the **party template index** command in the global configuration mode.

party template index <*template-value***> tunables name <***tunable***> PackageId value**

template-value	The decimal value that is associated iwth the anonymous subscriber.
tunable	The name of the party tunable.

Command Default

None**.**

Command Modes

Global configuration (config)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following example shows how to set the tunables (packageId) value for the template index 1:

```
SCE8000> enable 15
Password: <cisco>
SCE8000# config
SCE8000(config)# party template index 1 tunables name packageId value 5
```

The following example shows the output of the **show party template** command after configuring the Cisco SCE device using the party template index:

```
SCE8000#> show party template index 5

Template 1
Template 1 has 5 tunables:
downVlinkId=0
monitor=0
new_classification_policy=0
packageId=5
upVlinkId=0
Template 5 has no meters
```

periodic-records aggregate-by-cpu

Enables RDR aggregation for the specified RDRs. By default, RDR aggregation is enabled.

Use the **no** form of the command to disable record aggregation.

The Cisco SCE platform aggregates certain RDRs, thus reducing the load on the CM without affecting the usability of the information provided. The RDR aggregation feature is relevant only to global records. More specifically, only periodic records are aggregated, because other records relate to events like a single transaction or flow, and cannot be aggregated across processors – if they are aggregated, they loose the required granularity.

Currently the following RDRs are aggregated:

- Virtual Link Usage RDRs (VLURs)
- Link Usage RDRs (LURs)
- Package Usage RDRs (PURs)

periodic-records aggregate-by-cpu [all | LUR | PUR | VLUR]

no periodic-records aggregate-by-cpu [all | LUR | PUR | VLUR]

Syntax Description

all	Enables or disables aggregation of all relevant types of RDRs.
LUR | PUR | VLUR	Enables or disables aggregation of the specified type of RDR only.

Command Default

By default, all record types are aggregated.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example illustrates how to disable RDR aggregation for PURs.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no periodic-records aggregate-by-cpu PUR
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard periodic-records aggregation	Displays the current RDR aggregation configuration.

ping

Pings a host to test for connectivity. The ping program sends a test message (packet) to an address and then awaits a reply. Ping output can help you evaluate path-to-host reliability, delays over the path, and whether the host can be reached or is functioning.

ping *hostname*

Syntax Description

hostname	Hostname or IP address of a remote station to ping.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to ping host 10.1.1.201:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#ping 10.1.1.201
pinging 10.1.1.201...
PING 10.1.1.201: 56 data bytes
64 bytes from host (10.1.1.201): icmp_seq=0. time=0. ms
64 bytes from host (10.1.1.201): icmp_seq=1. time=0. ms
64 bytes from host (10.1.1.201): icmp_seq=2. time=0. ms
64 bytes from host (10.1.1.201): icmp_seq=3. time=0. ms
----10.1.1.201 PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/0/0
SCE8000#
```

pir-deviation-percentage

Configures the accepted deviation in percentage of the current bandwidth in comparison to the configured PIR.

pir-deviation-percentage *percentage*

Syntax Description

percentage	Percentage value for PIR crossed count to report in VLUR RDR. The range is from 1 to 100.

Command Default

By default, the PIR deviation percentage is 5.

Command Modes

Global configuration (config)

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization: admin

This command controls the PIR crossed count in VLUR RDR.

The value should be within the range 1 to 100 percentage.

PIR_CROSSED_COUNT will start to be accounted when the current bandwidth crosses the sum of VLINK PIR and the pir-deviation-percentage of VLINK PIR.

Examples

The following example shows how to configure the accepted percentage deviation of the current bandwidth in comparison to the configured PIR:

```
SCE8000#>configure
SCE8000(config)#>?
pir-deviation-percentage Accepted deviation in percentage of the current BW in comparison
to the configured PIR
SCE8000(config)#>pir-deviation-percentage ?
DECIMAL Percentage (value 1 to 100) for PIR crossed count, to report in VLUR RDR
SCE8000(config)#>pir-deviation-percentage 10
SCE8000(config)#>pir-deviation-percentage 0
Error - Percentage above PIR is 0, which is not in Rage 1 to 100
SCE8000(config)#>pir-deviation-percentage 101
Error - Percentage above PIR is 101, which is not in Rage 1 to 100
SCE8000(config)#>
```

pqi install file

Installs the specified *pqi* file using the installation options specified (if any). This procedure may take up to 5 minutes.

pqi install file *filename* **[options** *options***]**

Syntax Description

filename	Filename of the pqi application file to be installed.
options	Installation options. Use the **show pqi file** command to display the available options.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Always run the **pqi uninstall file** command before installing a new pqi file to prevent the accumulation of old files on the disk.

Authorization: admin

Examples

The following example shows how to install the Subscriber Manager anr10015.pqi file. No options are specified.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#pqi install file anr10015.pqi
SCE8000(config if)#
```

Related Commands

Command	Description
show pqi file	Displays information about the specified application file.
pqi uninstall file	Uninstalls the specified pqi file.

pqi rollback file

Reverses an upgrade of the specified pqi file. This procedure may take up to 5 minutes.

pqi rollback file *filename*

Syntax Description

filename	Filename of the *pqi* application file to be rolled back. The file must be the *pqi* file that was last upgraded.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Always specify the last pqi file that was upgraded. To find the name of this file, use the **show pqi last-installed** command.

Authorization: admin

Examples

The following example shows how to reverse the upgrade for the Subscriber Manager using the anr100155.pqi file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#pqi rollback file anr100155.pqi
SCE8000(config if)#
```

Related Commands

Command	Description
show pqi last-installed	Displays the name of the last pqi file that was installed.

pqi uninstall file

Uninstalls the specified pqi file. This procedure may take up to 5 minutes.

pqi uninstall file *filename*

Syntax Description

filename	Filename of the *pqi* application file to be uninstalled. The file must be the *pqi* file that was installed last.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Always specify the last *pqi* file that was installed. To find the name of this file, use the **show pqi last-installed** command.

Always run the **pqi uninstall** command before installing a new pqi file to prevent the accumulation of old files on the disk.

Authorization: admin

Examples

The following example shows how to uninstall the Subscriber Manager anr10015.pqi file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#pqi uninstall file anr10015.pqi
SCE8000(config if)#
```

Related Commands

Command	Description
show pqi last-installed	Displays the name of the last pqi file that was installed.
pqi install file	Installs the specified pqi file using any specified installation options.

pqi upgrade file

Upgrades the application using the specified pqi file and any specified upgrade options. This procedure may take up to 5 minutes.

pqi upgrade file *filename* **[options** *options***]**

Syntax Description

filename	Filename of the *pqi* application file to be used for the upgrade.
options	Upgrade options. Use the **show pqi file** command to display the available options.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

A *pqi* upgrade file is suitable for upgrading only from specific previously installed *pqi* files. The upgrade procedure checks that an upgrade is possible from the currently installed *pqi* file. The upgrade procedure will be stopped with an error message if the upgrade is not possible.

When upgrading the application in a cascaded system, use the **force failure-condition** command to force failure in the active SCE 8000 platform. (See *System Upgrades* in the *Cisco SCE8000 10GBE Software Configuration Guide* or *System Upgrades* in the *Cisco SCE8000 GBE Software Configuration Guide*.)

Authorization: admin

Examples

The following example shows how to upgrade using the anr100155.pqi file. No options are specified.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#pqi upgrade file anr100155.pqi
SCE8000(config if)#
```

Related Commands

Command	Description
show pqi file	Displays information about the specified application file.
force failure-condition	Forces a virtual failure condition, and exits from the failure condition, when performing an application upgrade.

pwd

Displays the current working directory.

pwd

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the current working directory *(system):*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#pwd
system:
SCE8000#
```

Related Commands

Command	Description
cd	Changes the path of the current working directory.

queue

Sets the queue shaping.

queue *queue-number* **bandwidth** *bandwidth* **burst-size** *burstsize*

Syntax Description

queue-number	Queue number from 1 to 4, where 4 is the highest priority (fastest). • 1—BE. The best effort queue, that is, the lowest priority. • 2, 3—AF. The assured forwarding queues are middle priority, with 3 being a higher priority queue. That is, packets from queue 3 are transferred faster than those in queue 2. • 4—EF. The expedited forwarding queue, that is, the highest priority forwarding.
bandwidth	Bandwidth measured in kbps. The maximum bandwidth is determined by the line rate. 0 disables packet transmission from the queue. Bandwidth is set in resolutions of approximately140 kbps, that is, rounded to the nearest multiple of 140 kbps.
burstsize	Burst size in bytes, ranging from 0 to 16000000.

Command Default

The default bandwidth is 100000K (100 Mbps).

The default burst size is 8000 (8K bytes).

Command Modes

TenGigabitEthernet Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

This command is valid for a specified TenGigabitEthernet line interface only. It must be executed explicitly for each interface.

Use the **interface tengigabitethernet** command to access the configuration mode for the desired interface.

Authorization: admin

Examples

The following example shows how to configure queue shaping for queue 1 for the 10GBE interface in bay 3:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface TenGigabitEthernet 3/3/0
SCE8000(config if)#queue 1 bandwidth 20000 burstsize 1000
```

Related CommandsE

Command	Description
bandwidth	Sets Ethernet shaping for the TenGigabitEthernet line interfaces.
interface tengigabitethernet	Enters TenGigabitEthernet Interface Configuration mode to the 10GBE line interfaces.

rdr-formatter category number buffer-size

Sets the buffer size for the specified RDR category.

rdr-formatter category number *number* **buffer-size** *size*

default rdr-formatter category number *number* **buffer-size**

default rdr-formatter buffer-size all

Syntax Description

number	Number of the category. Range is from1 to 4.
size	Size of the buffer allocated to the specified category in bytes.

Command Default

Default buffer size varies by category (see **Usage Guidelines**).

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

The buffer size can be configured only when the RDR-formatter service is disabled. (Use the **no service rdr-formatter command.**)

Use the **default** option to set the buffer size for the specified category to the default value.

Use the **all** keyword with the **default** option to set the buffer size for the all categories to the default value.

Total memory assigned to all RDR categories is 80 MB.

The total memory available for the RDR formatter cannot be changed. This command specifies how much of the total available memory is allocated to each RDR category.

Default memory allocations to each RDR category, assuming the following standard categories:

- Category 1—40 MB
- Category 2—24 MB
- Category 3—8 MB
- Category 4—8 MB

Authorization: admin

Examples

The following example shows how to configure the buffer size for Category 1. The RDR formatter must be disabled before the command is executed and the re-enabled.

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# no service rdr-formatter
SCE8000(config)# rdr-formatter category number 1 buffer-size 50000000
SCE8000(config)# service rdr-formatter
SCE8000(config)#
```

Related Commands

Command	Description
rdr-formatter history-size	Configures the size of the history buffer.
service rdr-formatter	Enables or disables the RDR formatter.
show rdr-formatter	Displays the RDR formatter configuration.

rdr-formatter category number name

Assigns a meaningful name to a category. This category name can then be used in any **rdr-formatter** command in place of the category number.

To disassociate the name from the category, use the **no** form of this command. The name will not be recognized by any CLI commands.

rdr-formatter category number *number* **name** *category-name*

no rdr-formatter category number *number* **name** *category-name*

Syntax Description

number	Number of the category. Can be 1 to 4.
category-name	User-defined name to be assigned to the category.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

The following four categories are predefined in the system:

- **Category 1—**Usage RDRs to the Collection Manager or mediation system
- **Category 2—**Quota RDRs to Pre-Paid Server or Subscriber Controller OSS
- **Category 3—**External events RDR or RT Signaling to various systems, such as a packet cable multi-media policy server
- **Category 4—**URL Query RDR to URL Filtering database (for example, surfControl)

Authorization: admin

Examples

The following example shows how to assign a name (prepaid) to Category 1:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter category number 1 name prepaid
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
service rdr-formatter	Enables or disables the RDR formatter.
rdr-formatter history-size	Configures the size of the history buffer.

rdr-formatter destination

Configures an RDRv1 or NetFlow destination. The RDR formatter sends the records (RDRs or export packets) it produces to this destination.

To remove the mappings of a destination to categories, use the **no** form of this command. When all categories for a destination are removed, the entire destination is removed.

rdr-formatter destination ***ip****-address* **port** *port-number* **[category {name** *category-name***}| {number** ***number*****}] [priority** *priority-value* **] [category …] protocol {rrdrv1 | netflowv9} [transport {udp | tcp}]**

no rdr-formatter destination *ip-address* **port** *port-number* **[category {name** *category-name* **}| {number** ***number*****}]**

no rdr-formatter destination all

Syntax Description

ip-address	Destination IP address.
port-number	Destination port number.
category	(Optional) Assigns a priority to a particular category for this destination.
category-name	(Optional) User-defined name that identifies the category.
number	(Optional) Identifies the category by number (1 to 4).
priority-value	(Optional) Priority of the destination. The priority value may be any number from 1 (lowest) to 100 (highest).
protocol	Protocol configured for this destination. Choose **rdrv1 or netflowv9.**
transport	(Optional) Transport type configured for this destination. Choose: • **UDP** when the protocol is NetFlow. • **TCP** when the protocol is RDRv1.

Command Default

The default protocol is RDRv1.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Up to eight destinations can be configured. Multiple destinations over the same category must have distinct priorities. In redundancy mode, the entry with the highest priority is used by the RDR formatter; in multicast mode or load-balancing mode, priorities have no meaning.

In its simplest form, this command specifies only the IP address and port number of the destination and the protocol being used. In addition, a global priority may be assigned to the destination. Or, a specific priority may be assigned to any or all of the four categories for the specified destination. If a global priority is not explicitly configured, the highest priority is assigned automatically.

Categories may be identified by either name or number.

A specific destination may be configured to one or more categories at the same time. A maximum of three destinations may be assigned to a specific category.

Note RDRv1 may be configured only with the transport type of TCP. NetFlowV9 may be configured only with the transport type of UDP.

Priorities

The following guidelines apply to configuring priorities for report destinations:

- In redundancy mode, the entry with the highest priority is used by the RDR formatter, provided that a connection with this destination can be established.
- Priority configuration is not relevant in multicast mode, because all reports are sent to all destinations.
- Priority configuration is not relevant in load-balancing mode, because all destinations are used for load balancing.
- For the first destination defined, if no priority is set, the highest priority is automatically assigned.
- For all subsequently defined destinations, the priority must be explicitly defined; otherwise, it will collide with the first destination priority.
- You can also assign a different priority to each category for each destination. If no category is specified, the same priority is assigned to all categories for that destination.
- The same priority cannot be assigned to the same category for two different destinations.

Authorization: admin

Examples

The following example shows how to configure a NetFlow destination with the default priority (highest) to be used by all categories:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter destination 10.1.1.205 port 33000 protocol netflowv9
transport udp
SCE8000(config)#
```

The following example shows how to configure an RDR formatter destination for two categories with a different priority for each category. This configuration sends RDRs from category 2 to this destination, but usually not RDRs from category 1.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter destination 10.1.1.206 port 34000 category number 1 priority
10 category number 2 priority 90 protocol rrdrv1
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
service rdr-formatter	Enables or disables the RDR formatter.
rdr-formatter protocol netflowv9 dscp	Defines the DSCP value to be assigned to the NetFlow packets.
rdr-formatter destination protocol netflowv9 template data timeout	Configures the interval after which all Net Flow templates must be exported to the specified destination (refreshed).

rdr-formatter destination protocol netflowv9 template data timeout

Configures the interval after which all NetFlow templates must be exported to the specified destination (refreshed).

To disable the template refresh mechanism, use the **no form** or the **default** form of this command.

rdr-formatter destination *ip-address* **port** *port-number* **protocol netflowv9 template data timeout** *timeout-value*

no rdr-formatter destination *ip-address* **port** *port-number* **protocol netflowv9 template data**

default rdr-formatter destination *ip-address* **port** *port-number* **protocol netflowv9 template data**

Syntax Description

ip-address	Destination IP address.
port-number	Destination port number.
timeout-value	Time interval between exporting the NetFlow templates to the specified destination. Valid range is 1 to 86400 seconds.

Command Default

The refresh mechanism is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.0	This command was introduced.

Usage Guidelines

A template record defines the structure of each NetFlow data record. The RDR formatter transmits only the templates along with their matching data records. The RDR formatter refreshes the templates on the collector by resending them at configured intervals.

The **no** form of the command disables the refresh mechanism.

The **default** form of the command also disables the refresh mechanism, because the default state is disabled.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter destination 10.1.1.205 port 33000 protocol netflowv9
template data timeout 240
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
rdr-formatter destination	Configures an RDRv1 or NetFlow destination.

rdr-formatter forwarding-mode

Defines the mode in which the RDR formatter sends RDRs to the destinations.

rdr-formatter forwarding-mode [*mode]*

Syntax Description

mode	Choose **redundancy, multicast, or simple-load-balancing,** as described in Table 2-5 in Usage Guidelines.

Command Default

The default mode is redundancy.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Table 2-8 lists the valid mode settings.

Table 2-8 Valid Mode Settings

redundancy	All RDRs are sent only to the primary (active) connection.
multicast	All RDRs are sent to all destinations.
simple-load-balancing	Each successive record is sent to a different destination, one destination after the other, in a round robin manner.

Authorization: admin

Examples

The following example shows how to set the RDR formatter mode to redundancy:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter forwarding-mode redundancy
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.

rdr-formatter history-size

Configures the size of the history buffer.

rdr-formatter history-size [*size]*

Syntax Description

size	Size of the history buffer in bytes. Maximum size is 64 KB.

Command Default

The default size is 0.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

When a connection fails, a certain amount of data is considered 'sent' by the RDR formatter (since it was passed to the TCP stack), but is not received at the collector. This ‘missing’ data can be stored in the history buffer. Then, when the RDR formatter switches to a secondary destination, or reconnects with the original collector, the RDRs from the history buffer are sent before any new RDRs are sent.

The amount of ‘missing’ data is limited by the size of the TCP buffers in the RDR formatter and the collector platform, and the TCP window size of the connection. The history buffer should be configured to a size larger than the sum of the these TCP buffer and window sizes.

Authorization: admin

Examples

The following example shows how to configure the history buffer size:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# rdr-formatter history-size 25000
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.

rdr-formatter protocol

Configures the RDR formatter protocol.

rdr-formatter protocol rdrv1 | NetflowV9

Syntax Description

rdrv1 | NetflowV9	Name of the RDR formatter protocol.

Command Default

The default is **rdrv1**.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The RDR formatter protocol can be configured only when the RDR-formatter service is disabled (Use the **no service rdr-formatter** command).

This command configures the protocol to be used globally by the RDR formatter. A protocol can also be assigned specifically to each RDR formatter destination (see the **rdr-formatter destination** command).

Authorization: admin

Examples

The following example illustrates how to reset the RDR formatter.

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> configure
SCE8000(config)# no service rdr-formatter
SCE8000(config)# rdr-formatter protocol rdrv1
SCE8000(config)# service rdr-formatter
SCE8000(config)#>
```

Related Commands

Command	Description
show rdr-formatter protocol	Displays the RDR-formatter protocol used.

rdr-formatter protocol netflowv9 dscp

Defines the DSCP value to be assigned to the NetFlow packets.

rdr-formatter protocol netflowv9 dscp *dscp-value*

Syntax Description

dscp-value	DSCP value to be assigned to the NetFlow packets, in hexadecimal format. Valid range is 0 to 63.

Command Default

The default DSCP value is 0.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.0	This command was introduced.

Usage Guidelines

You can assign a DSCP value to specify the diffserv value of the NetFlow traffic exported from your SCE platform.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter protocol netflowv9 dscp 0x20
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter protocol netflowv9 dscp	Displays the DSCP value assigned by NetFlowV9.

rdr-formatter rdr-mapping

Adds a dynamic RDR mapping to a category or removes one from a category.

To remove an existing mapping, use the **no** form of this command.

rdr-formatter rdr-mapping [tag-id *tag-number* **category-number** *category-number***]**

no rdr-formatter rdr-mapping [tag-id *tag-number* **category-number** *category-number***]**

Syntax Description

tag-number	Complete 32-bit value given as an hexadecimal number. The RDR tag must be already configured in the formatter by the application.
category-number	Number of the category (1 to 4) to which to map the RDR tag.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The configuration of categories to RDR tags is done by adding and removing mappings. You can add a mapping of RDR tag to a category and remove a mapping, including the default mapping. If the table already contains a mapping with the same tag and category number, an error is issued and nothing is done.

If all categories are removed from a tag, the tag is ignored and is not formatted and sent. This process is ‘ignore mapping'.

Authorization: admin

Examples

The following example shows how to add a mapping to a category:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#rdr-formatter rdr-mapping tag-id 0xf0f0f000 category-number 1
SCE8000(config)#
```

The following example shows how to restore the default mapping for a specified RDR tag:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#default rdr-formatter rdr-mapping tag-id 0xf0f0f000
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter rdr-mapping	Displays the RDR formatter category that a specified RDR tag is mapped to.

reload

Note To not lose the current configuration, use the **copy running-config-all startup-config-all** command before using the **reload** command.

Reboots the Cisco SCE platform.

reload

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to back up the configuration and perform a system reboot:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#copy running-config-all startup-config-all
SCE8000#reload
Are you sure? Y
The system is about to reboot, this will end your CLI session
```

Related Commands

Command	Description
copy running-config startup-config	Builds a configuration file with general configuration commands called config.txt, which is used in successive boots.
reload shutdown	Shuts down the Cisco SCE platform, preparing it to be turned off.

reload shutdown

Shuts down the Cisco SCE platform, preparing it to be turned off.

reload shutdown

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to shut down the Cisco SCE platform in an orderly manner before turning it off. After issuing this command, the only way to revive the Cisco SCE platform from its power-down state is to turn it off, then back on.

This command can only be issued from the serial CLI console port. When issued during a Telnet CLI session, an error message is returned and the command is ignored. This response prevents the possibility of shutting the platform down from a remote location, from which it is not possible to power back up.

Authorization: admin

Examples

The following example shows how to shut down the Cisco SCE platform:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#reload shutdown
You are about to shut down the system.
The only way to resume system operation after this
is to cycle the power off, and then back on.
Continue? Y
IT IS NOW SAFE TO TURN THE POWER OFF.
```

Related Commands

Command	Description
reload	Reboots the Cisco SCE platform.

rename

Changes the filename to the specified name.

rename ***existing****-filename new-filename*

Syntax Description

existing-filename	Original name of the file.
new-filename	New name of the file.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to change the name of file test1.pkg to test3.pkg:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#rename test1.pkg test3.pkg
SCE8000#
```

rmdir

Removes an empty directory.

To remove a directory that is not empty, use the **delete** command with the **/recursive** switch.

rmdir *directory-name*

Syntax Description

directory-name	Name of the directory to be removed.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

You can only remove an empty directory. Use the **dir** command to verify that no files are listed in this directory.

Authorization: admin

Examples

The following example shows how to delete the directory named code:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#rmdir code
SCE8000#
```

Related Commands

Command	Description
dir	Displays the files in the current directory.
delete	Deletes a file from the local flash file system.

salt

Configures the value of the salt to be applied to the Personally Identifying Field of Extended Transaction Usage RDRs before hashing it.

To reset the salt to the default value, use the **default** form of this command.

salt *salt-value1 salt-value2 salt-value3 salt-value4*

default salt

Syntax Description

salt-value1 ... salt-value4	Four 4-byte salt values in hexadecimal format.

Command Default

The default salt value is 0x12345678 0x12345678 0x12345678 0x12345678.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

When generating Extended Transaction Usage RDRs for analyzing subscriber browsing patterns, you must hash the Personally Identifying Field to protect the identity of the subscriber. This command configures the salt to be applied to the field before hashing.

Always save the running configuration using the **copy running-config startup-config** command.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#salt 0xfafafafa 0xfafafafa 0xfafafafa 0xfafafafa
SCE8000(config if)#
```

sce-url-database add-entry

Adds a single entry to the protected URL database.

sce-url-database add-entry url-wildcard *url-wildcard-format* **flavor-id** *flavor-id*

Syntax Description

url-wildcard-format	(* | [*] [*host-suffix*] | [*] [*host-suffix*] / [*url-prefix* [*]] [*url-suffix*] [? *params-prefix*]) See Table 2-9 for examples of how to define the URL.
flavor-id	ID of the flavor to be applied to the entry. The specified flavor must be the one that was designated for the blacklist in the pqb file that was applied; otherwise, the operation will fail.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Use this command to add only a few new entries to the database. Add a large number of new URLs by importing an updated protected URL database file.

Table 2-6 includes URL examples.

Table 2-9 Examples for Defining URLs

URL Input	LUT Key Output	Result
*	*:*:*:*	Blocks all URLs.
*.com	*.com:*:*:*	Blocks all URLs in which the host ends with .com.
*/media	*:/media:*:*	Blocks all URLs in which the path contains only media.
*/media*mp3	*:/media*:*mp3:*	Blocks all URLs in which the path starts with media and ends with mp3.
/?key	*:/*:*:key*	Blocks all URLs in which the parameters start with key.
*.com/media*mp4?download	*.com:/media*:*mp4:download*	Blocks all URLs in which: • The host ends with .com. • The path starts with media and ends with mp4. • The parameters start with download.

The user executing the command must have write permission for the protected URL database.

Authorization: admin

Examples

The following example shows how to add an entry to the database. Because the flavor ID is included in the command, it is not present in the import file.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#sce-url-database add-entry url-wildcard *.com/media*mp4?download
flavor-id 50
SCE8000(config if)#
```

Related Commands

Command	Description
sce-url-database protection	Configures user authorization for the protected URL database.
sce-url-database import	Imports entries from an encrypted or clear-text file into the protected URL database.
show interface linecard sce-url-database	Displays the contents of the protected URL database.

sce-url-database import

Imports entries from an encrypted or clear-text file into the protected URL database.

sce-url-database import {cleartext-file | encrypted-file *filename}* **[flavor-id** *flavor-id]*

Syntax Description

x-file	Specifies the type of file from which entries are being imported. Choose either **cleartext-file** or **encrypted-file**.
filename	Path and filename of the protected URL database import file.
flavor-id	ID of the flavor to be applied to all entries in the file. The specified flavor must be the one that was designated for the blacklist in the pqb file that was applied; otherwise, the operation will fail. • If the import file does *not* contain the flavor for the entries, you must specify the flavor with this command. • If the import file *does* contain the flavor for the entries, you may not specify the flavor with this command.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

An encrypted file can be imported only if a matching encryption key has been configured. (See **sce-url-database protection.**)

Guidelines for Managing the Protected URL Database

- The user executing the command must have write permission for the protected URL database.
- When a new file is imported, the existing database is cleared before the import. Incremental updating is not supported, so the import file must contain all the relevant URLs, not just new ones to be added to the database.
- Add a large number of new URLs by importing an updated protected URL database file. Typically, if the database is protected, this process is done with an encrypted file.
- Add a few new URLs by adding them with the **sce-url-database add-entry** command.

Protected URL Database Import File

A maximum of 500,000 entries is permitted in the import file.

The database import file may either contain clear text or be encrypted. If the file is encrypted, the matching encryption key must be configured by the database owner.

If the file is encrypted, it must be prefixed with a clear-text header. The encrypted file header format must be exactly as follows:

Encrypted file version: 0x01

Block cipher index: 0x01

Mode of operation index: 0x02

Padder index: 0x02

IV length: 0x10

IV: *<16 unformatted bytes that form the 128 bits IV of the encrypted data>*

After the header, the following data should appear in AES 128, CFB mode, encrypted format:

A random number (in the range 16 to 31) of random bytes, followed by the word "Signed" and then another 32 random bytes

Each subsequent line represents a single URL.

Protected URL Database Import File Format

[*flavor* **Tab**] *url*

where:

- *flavor*—The flavor ID must either be included for every line in the file or for none of the lines. The flavor must be separated from the URL by a tab.
- *url*—(* | [*] [*host-suffix*] | [*] [*host-suffix*] / [*url-prefix* [*]] [*url-suffix*] [? *params-prefix*])

  See Table 2-9 for examples of how to define the URL.

Results

- The Cisco SCE URL database is first cleared.
- The entries from the file are written to the database.
- Duplicate keys in the file are overwritten with no warning.
- In case of a failure, writing continues to the next entry.

  The total number of failures and a listing of the failed file line numbers are reported when the import is finished.

Authorization: admin

Examples

The following example shows how to import the protected URL database from an encrypted file. Because the flavor ID is included in the command, it is not present in the import file.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#sce-url-database import encrypted-file blacklist-file flavor-id 50
SCE8000(config if)#
```

Related Commands

Command	Description
sce-url-database protection	Configures user authorization for the protected URL database.
sce-url-database add-entry	Adds a single entry to the protected URL database.
show interface linecard sce-url-database	Displays the contents of the protected URL database.

sce-url-database protection

Configures user authorization for the protected URL database.

To remove either all protection settings or only the encryption key, use the **no** form of this command.

sce-url-database protection owner {myself | name *username***}**

sce-url-database protection allow-write {all-users | owner-only}

sce-url-database protection allow-lookup {owner-only | no-user}

sce-url-database protection encryption-key *encryption-key*

no sce-url-database protection

no sce-url-database protection encryption-key

Syntax Description

owner	Owner of the protected URL database. Choose either **myself** or *username*.
username	Owner of the database. This name cannot be the default username.
allow-write, allow-lookup	Configures an allowed action for the database.
all-users	All users can perform the specified action.
owner-only	Only the owner of the protected URL database can perform the specified action.
no-user	No user can perform the specified action.
encryption-key	AES encryption key that is either 128, 192, or 256 bits long. The key is supplied in hexadecimal format and is 32, 48, or 64 hexadecimal digits, respectively.

Command Default

- The database does not have a designated owner.
- Read permission—**no-user**. This setting is not configurable.
- Write permission:
  - If no owner has been assigned, the default is **all-users.**
  - If an owner has been assigned, the default is **owner-only.**
- Lookup permission:
  - If no owner has been assigned, the default is **all-users**.
  - If an owner has been assigned, the default is **no-user**.
- Encryption key—No key.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

When the protected URL database is protected, one user is designated as the owner of the database and only that user can execute the protection CLI commands on the database. The database manipulation commands are restricted according to the owner configuration. This restriction requires defining the AAA authorization method (either based on local users or based on a TACACS+ server, and so on) and defining at least one user who should be assigned as the owner of the database.

If the database is defined to be protected, none of the database information (including the owner, the database entries, and the authorization information itself) is accessible to any users, including the relevant saved configuration in the log files and in the relevant SCA BB reports. The database-owner user may change the authorizations using the CLI; however, when any of the protections are relaxed (or all of the protections are relaxed by removing the protections entirely) the database is reset.

To ensure the secrecy of the database information, the database entries may be imported to the Cisco SCE (using the CLI) in an encrypted form using 128-, 192-, or 256-bit key length AES. The key may be set or updated using the appropriate CLI command; typically, this command should be run over a secure Telnet session.

User Authorization Guidelines

- The default user cannot be the owner.
- When no owner is designated, the Cisco SCE URL database is unprotected, and the contents can be read and modified by any user.
- Only the owner can configure the protection settings. If no owner is designated, the database is unprotected, and any user has read and write permissions. A user may be configured to be the owner of the database only while no owner user is designated for the database.
- When any protection setting is relaxed, the database is reset. Protection is relaxed in the following cases:
  - Protection is removed completely using the **no sce-url-database protection** command.
  - Write permission is changed from **owner-only** to **all-users**.
  - Lookup permission is changed from **no-user** to **owner-only**.
- The Cisco SCE URL database configuration information is not accessible as part of the running config and startup config files.
  - Protected information is not displayed when a **show** or **more** command is executed on the config files.
  - Protected information is included when a **copy** command is executed on the config files.

Authorization: admin

Examples

The following example shows how to configure protected URL database protection:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#sce-url-database protection owner myself
```

```
SCE8000(config if)#sce-url-database protection allow-write all-users
SCE8000(config if)#sce-url-database protection allow-lookup no-user
SCE8000(config if)#sce-url-database protection encryption-key
AABBCCDDEEFF11223344556677889900
SCE8000(config if)#
```

Related Commands

Command	Description
sce-url-database import	Imports entries from an encrypted or clear-text file into the protected URL database.
show interface linecard sce-url-database protection	Displays the current protected URL database protection settings.
sce-url-database remove-all	Clears the protected URL database.
sce-url-database add-entry	Adds a single entry to the protected URL database.

sce-url-database remove-all

Clears the protected URL database.

sce-url-database remove-all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

To execute this command, you must have write permission for the protected URL database.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#sce-url-database remove-all
SCE8000(config if)#
```

Related Commands

Command	Description
sce-url-database protection	Configures user authorization for the protected URL database.
sce-url-database import	Imports entries from an encrypted or clear-text file into the protected URL database.
show interface linecard sce-url-database	Displays the contents of the protected URL database.

scmp

Enables the Service Control Management Protocol functionality.

To disable SCMP, use the **no** form of this command.

scmp

no scmp

Syntax Description

This command has no arguments or keywords.

Command Default

SCMP is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

SCMP is a protocol by which an SCE platform communicates with peers such as Cisco routers running ISG to manage subscriber sessions.

SCMP performs the following functions:

- Manages the connection status to all SCMP peer devices
- Encodes and decodes the SCMP messages
- Orders northbound messages for each subscriber

When the SCMP is disabled, all subscribers provisioned through this interface are removed.

Authorization: admin

Examples

The following example shows how to disable SCMP:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no scmp
SCE8000(config)#
```

Related Commands

Command	Description
scmp keepalive-interval	Defines the interval between keepalive messages to the SCMP peer device.
scmp loss-of-sync-timeout	Defines the loss of sync timeout interval.
scmp name	Adds an SCMP peer device.
scmp reconnect-interval	Defines the SCMP reconnect interval.
scmp subscriber force-single-sce	Configures SCMP to make the SCMP peer device verify that each subscriber is provisioned for only one SCE platform.
scmp subscriber id append-to-guid	Defines the subscriber ID structure for subscribers provisioned through the SCMP interface.
scmp subscriber send-session-start	Configures SCMP to make the SCMP peer device push sessions to the Cisco SCE platform immediately when the session is created on the peer device.
no subscriber	Removes a specified subscriber from the system.
show scmp	Displays the SCMP (ISG) general configuration and status.

scmp keepalive-interval

Defines the interval between keepalive messages to the SCMP peer device.

scmp keepalive-interval [*interval]*

Syntax Description

interval	Interval between keepalive messages from the Cisco SCE platform to the SCMP peer device.

Command Default

The default interval is 5 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

The Cisco SCE platform sends keepalive messages to all connected SCMP peer devices at the defined interval.

- If a response is received within the defined interval, the keepalive time stamp is updated.
- If a response is not received within the defined interval, the connection is assumed to be down. The connection state is changed to not-connected, and the SCMP begins attempts to reconnect.

Authorization: admin

Examples

The following example shows how to define the SCMP keepalive message interval:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#scmp keepalive-interval 10
SCE8000(config)#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.

scmp loss-of-sync-timeout

Defines the loss-of-sync timeout interval, which is the amount of time between loss of connection between the Cisco SCE platform and an SCMP peer device and the loss-of-sync event.

scmp loss-of-sync-timeout [*interval]*

Syntax Description

interval	Loss-of-sync timeout interval in seconds.

Command Default

The default interval is 90 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

If the connection between an SCE platform and an SCMP peer device fails, a timer starts. If the connection exceeds the configured loss-of-sync timeout interval, the connection is assumed to be not-in-sync. In this case, a loss-of-sync event occurs, and the system performs the following actions:

- Sets the connection status to not-in-sync
- Removes all messages from the SCMP buffers
- Removes all subscribers associated with the SCMP peer device

Authorization: admin

Examples

The following example shows how to define the loss-of-sync timeout interval:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# scmp loss-of-sync-timeout 120
SCE8000(config)#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.
scmp reconnect-interval	Defines the SCMP reconnect interval.

scmp name

Adds an SCMP peer device.

To delete the specified SCMP peer device, use the **no** form of this command.

scmp name *name* **radius** *hostname* **secret** *secret* **[auth-port [***auth-port]] [***acct-port* **[***acct-port***]]**

no scmp name *name*

Syntax Description

name	Name of the SCMP peer device.
hostname	IP address or name of the RADIUS host.
secret	RADIUS shared secret.
auth-port	Authentication port number.
acct-port	Accounting port number.

Command Default

The default port configuration is as specified in RFC 2865 and RFC 2866.

The default authentication port is 1812.

The default accounting port is 1813.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

After defining an SCMP peer device, you must associate it with one or more unmapped anonymous groups (see **subscriber anonymous-group name scmp name**). This association provides the ability to query the SCMP peer regarding unmapped IP addresses if the Cisco SCE platform is not updated when the subscriber session has started (see **scmp subscriber send-session-start**) or in recovery scenarios.

You cannot delete an SCMP device that has anonymous groups assigned to it. Use the **no subscriber anonymous-group name scmp name** command to remove all associated anonymous groups before deleting the device.

Authorization: admin

Examples

The following example shows how to define an SCMP peer device:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# scmp name peer_device1 radius radius1 secret abcdef
SCE8000(config)#
```

Related Commands

Command	Description
subscriber anonymous-group name ip-range scmp name	Assigns an anonymous group to a specified range of IP addresses and to an SCMP device.
no subscriber	Removes a specified subscriber from the system.
ip radius-client retry limit	Configures the parameters for retransmitting unacknowledged RADIUS client messages.
show scmp	Displays the SCMP (ISG) general configuration and status.

scmp reconnect-interval

Defines the SCMP reconnect interval, which is the amount of time between attempts by the Cisco SCE platform to reconnect with an SCMP peer.

scmp reconnect-interval *[interval]*

Syntax Description

interval	Interval between attempts by the Cisco SCE platform to reconnect with an SCMP peer, in seconds.

Command Default

The default interval is 30 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

The Cisco SCE platform attempts to reconnect to the SCMP peer device at the defined intervals by sending an establish-peering-request message. If a valid reply is received, the SCMP connection state for the SCMP peer is changed, and the SCMP performs the required reconnection operations. These operations include:

- Requerying the peer regarding all subscribers provisioned by this device
- Querying the peer regarding all anonymous subscribers created using the anonymous group assigned to this peer

Authorization: admin

Examples

The following example shows how to define the SCMP reconnect interval:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#scmp reconnect-interval 60
SCE8000(config)#>
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.
scmp loss-of-sync-timeout	Defines the loss of sync timeout interval.

scmp subscriber force-single-sce

Configures SCMP to make the SCMP peer device verify that each subscriber is provisioned for only one SCE platform. This configuration must be enabled in MGSCP deployments.

To disable verifying that each subscriber is provisioned for only one SCE platform, use the **no** form of this command.

scmp subscriber force-single-sce

no scmp subscriber force-single-sce

Syntax Description

This command has no arguments or keywords.

Command Default

Subscriber verification is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

This command takes effect only if it is set before the connection with the SCMP peers is established. If active connections exist, use the **no scmp** and **scmp** commands to stop and then restart SCMP.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#scmp subscriber force-single-sce
SCE8000(config)#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.
scmp	Enables the Service Control Management Protocol functionality.

scmp subscriber id append-to-guid

Defines the subscriber ID structure for subscribers provisioned through the SCMP interface.

To clear the subscriber ID structure setting, use the **no** form of this command.

scmp subscriber id append-to-guid radius-attributes {calling-station-id | nas-port-id | user-name} [calling-station-id | nas-port-id | user-name] [calling-station-id | nas-port-id | user-name]

no scmp subscriber id append-to-guid

Syntax Description

radius-attributes	Sets the subscriber ID structure. Choose one or more of the following options: **calling-station-id**, **nas-port-id**, or **user-name**.

Command Default

All settings are cleared.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

The GUID is a global unique ID assigned to each subscriber session by the SCMP peer device.

You can define the structure of the subscriber ID with this command by specifying which of the following RADIUS attributes to include and in which order:

- Calling station ID
- NAS port
- Username

The GUID is always appended at the end of the subscriber ID as defined by this command.

The **no** form of the command clears the subscriber ID structure setting, resulting in no other elements being used with the GUID to form the subscriber ID.

You must disable the SCMP interface before executing this command. (Use the **no scmp** command.)

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no scmp
```

```
SCE8000(config)#scmp subscriber id append-to-guid radius-attributes user-name
calling-station-id nas-port-id
SCE8000(config)#scmp
SCE8000(config)#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.
scmp	Enables the Service Control Management Protocol functionality.

scmp subscriber send-session-start

Configures SCMP to make the SCMP peer device push sessions to the Cisco SCE platform immediately when the session is created on the peer device. This feature must be disabled in MGSCP deployments.

To disable pushing of sessions from the SCMP peer device to the Cisco SCE platform, use the **no** form of this command.

scmp subscriber send-session-start

no scmp subscriber send-session-start

Syntax Description

This command has no arguments or keywords.

Command Default

Session pushing is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

This command takes effect only if it is set before the connection with the SCMP peers is established. If active connections exist, use the **no scmp** and **scmp** commands to stop and then restart SCMP.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#scmp subscriber send-session-start
SCE8000(config)#
```

Related Commands

Command	Description
show scmp	Displays the SCMP (ISG) general configuration and status.

script capture

Begins the recording of a script. The command tracks all commands entered until the **script stop** command is used.

script capture *script-filename*

Syntax Description

script-filename	Name of the output file where the script is stored.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to capture a sequence of repeated commands into a file for the purpose of executing the commands again.

Use the **script stop** command to stop capturing the script.

Authorization: admin

Examples

The following example shows the script capture for script1.txt:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#script capture script1.txt
SCE8000#cd log
SCE8000#cd..
SCE8000#pwd
SCE8000#script stop
```

Related Commands

Command	Description
script stop	Stops script capture.

script print

Displays a script file.

script print *script-filename*

Syntax Description

script-filename	Name of the file containing the script.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to print the commands captured in *script1.txt:*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#script print script1.txt cd log
cd..
pwd
script stop
SCE8000#
```

Related Commands

Command	Description
script capture	Begins the recording of a script.
script run	Runs a script.

script run

Runs a script. The script may be created using the **script capture** command or it may be created as a text file containing the appropriate commands.

script run *script-filename* **[halt]**

Syntax Description

script-filename	Name of the file containing the script.
halt	Breaks the script on errors.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to run a script that you have previously created using the **script capture** command.

Authorization: admin

Examples

The following example shows how to run the script named monitor.txt, which contains commands to enable the generation of the real-time subscriber usage RDRs for the specified subscribers.

The file contains the following command lines:

```
configure
interface linecard 0
subscriber name Leonardo property name monitor value 1
subscriber name Raphael property name monitor value 1
subscriber name Donatello property name monitor value 1
subscriber name Michelangelo property name monitor value 1
```

The following example shows how to run the script:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#script run monitor.txt
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#subscriber name Leonardo property name monitor value 1
SCE8000(config if)#subscriber name Raphael property name monitor value 1
SCE8000(config if)#subscriber name Donatello property name monitor value 1
SCE8000(config if)#subscriber name Michelangelo property name monitor value 1
SCE8000(config if)#
```

Related Commands

Command	Description
script capture	Begins the recording of a script.
script print	Displays a script file.

script stop

Stops script capture. Used with the **script capture** command, it marks the end of a script being recorded.

script stop

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to stop capturing a script:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#script capture script1.txt
SCE8000#cd log
SCE8000#cd..
SCE8000#pwd
SCE8000#script stop
SCE8000#
```

Related Commands

Command	Description
script capture	Begins the recording of a script.

service-bandwidth-prioritization-mode

Defines the service bandwidth prioritization mode.

service-bandwidth-prioritization-mode [*mode*]

Syntax Description

mode	Choose **global** or **subscriber-internal**. See Usage Guidelines for more information.

Command Default

The default mode is **subscriber-internal**.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.5	This command was introduced.

Usage Guidelines

This command configures how bandwidth controllers compete for bandwidth by specifying which assurance level (AL) value is used when allocating bandwidth between bandwidth controllers. The global controller AL can be taken from either of the following modes:

- **global** prioritization mode—Taken from current bandwidth controller Assurance Level.
- **subscriber-internal** prioritization mode—For each bandwidth controller, taken from the Primary BWC Relative Priority (the party or "total" bandwidth-controller Relative-Priority value).

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#service-bandwidth-prioritization-mode global
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard service-bandwidth-prioritization-mode	Displays the currently configured service bandwidth prioritzation mode.

service password-encryption

Enables password encryption so that the password remains secret when the configuration file is displayed.

To disable password encryption, use the **no** form of this command.

service password-encryption

no service password-encryption

Syntax Description

This command has no arguments or keywords.

Command Default

Password encryption is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Passwords that were configured in an encrypted format are not deciphered when password encryption is disabled.

Authorization: admin

Examples

The following example shows the effect of enabling password encryption:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#enable password abcd
SCE8000(config)#do more running-config
#This is a general configuration file (running-config).
#Created on 10:20:57 ISR TUE July 3 2001
…
enable password level 10 0 “abcd”
…
SCE8000(config)#service password-encryption
SCE8000(config)#do more running-config
#This is a general configuration file (running-config).
#Created on 10:21:12 ISR TUE July 3 2001
…
service password-encryption
enable password level 10 0 “e2fc714c4727ee9395f324cd2e7f331f”
…
SCE8000(config)#
```

Related Commands

Command	Description
enable password	Configures a password for the specified authorization level.

service rdr-formatter

Enables or disables the RDR formatter. The RDR formatter is the element that formats the event reports produced by the line card and sends them to an external data collector.

To disable the RDR formatter, use the **no** form of this command.

service rdr-formatter

no service rdr-formatter

Syntax Description

This command has no arguments or keywords.

Command Default

The RDR formatter is enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable the RDR formatter:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#service rdr-formatter
SCE8000(config)#
```

The following example shows how to disable the RDR formatter:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no service rdr-formatter
SCE8000(config)#
```

Related Commands

Command	Description
show rdr-formatter enabled	Displays the RDR formatter status (enabled or disabled).
rdr-formatter category-number	Assigns a meaningful name to a category.
rdr-formatter destination	Configures an RDRv1 or NetFlow destination.

service telnetd

Enables the Telnet daemon.

To disable the daemon, which prevents new users from accessing the Cisco SCE platform through Telnet, use the **no** form of this command.

service telnetd

no service telnetd

Syntax Description

This command has no arguments or keywords.

Command Default

The Telnet daemon is enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable the Telnet daemon:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#service telnetd
SCE8000(config)#
```

The following example shows how to disable the Telnet daemon:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no service telnetd
SCE8000(config)#
```

Related Commands

Command	Description
show telnet status	Displays the status of the Telnet server domain.
telnet	Starts a Telnet session.

service timestamps

Configures the time stamp on the messages on the syslog server.

To reset the timestamp format to the default (uptime), use the **no** form of this command.

service timestamps log (uptime | (datetime [msec] [localtime] [show-timezone] [year]))

no service timestamps log

Syntax Description

uptime	Time stamp shows the time since the system was last rebooted. For example "4w6d" (time since last reboot is 4 weeks and 6 days). This is the default time-stamp format. The format for uptime varies depending on how much time has elapsed: • *HHHH:MM:SS* (*HHHH* hours: *MM* minutes: *SS* seconds) for the first 24 hours. • *D*d*HH*h (*D* days *HH* hours) after the first day. • *W*w*D*d (*W* weeks *D* days) after the first week.
datetime	Time stamp shows the date and time. • The time-stamp format for **datetime** is MMM DD HH:MM:SS, where MMM is the month, DD is the date, HH is the hour (in 24-hour notation), MM is the minute, and SS is the second. • If the **datetime** keyword is specified, you can optionally add the **msec**, **localtime**, **show-timezone**, or **year** keywords. **Note** The optional **msec**, **localtime**, **show-timezone**, and **year** keywords, if present, must be in the order shown in the command syntax. All keywords up to the last specified keyword must be present. – Incorrect: **service timestamps log datetime msec year** – Correct: **service timestamps log datetime msec localtime show-timezone year** • If the **service timestamps datetime** command is used without additional keywords, time stamps will be shown using UTC, without the year, without milliseconds, and without a time zone name.
msec	(Optional) Include milliseconds in the date-time format, in the format *HH:DD:MM:SS.mmm*, where *.mmm* is milliseconds
localtime	(Optional) Time stamp relative to the local time zone. **Note** If the **localtime** keyword option is not used (or if the local time zone has not been configured), time will be displayed in Coordinated Universal Time (UTC).
show-timezone	(Optional) Include the time zone name in the date-time format.
year	(Optional) Include the year in the date-time format.

Command Default

Default time stamp format is **uptime**.

Command Modes Global configuration

Command History This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines If the service timestamps command is specified with no arguments or keywords, the default is **service timestamps log uptime**.

- The **uptime** form of the command adds time stamps (such as "2w3d") that indicate the time since the system was rebooted.
- The **datetime** form of the command adds time stamps (such as "Sep 5 2002 07:28:20") that indicate the date and time according to the system clock.
- The year and the timezone can be displayed only for the **localtime** option.

The time stamp will be preceded by an asterisk or period if the time is potentially inaccurate.

Authorization: admin

Examples The following example shows how to configure datetime time stamps with msec and the year.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#service timestamps log datetime msec localtime show-timezone year
SCE8000(config)#
```

Related Commands

Command	Description
logging on	Configures the syslog host.

show access-lists

Displays all access lists or a specific access list.

show access-lists [*number***]**

Syntax Description

number	Number of the access list to show

Command Default

The default access list number is 1.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the configuration of access list 5:

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show access-lists 5
Standard IP access list 5
Permit 10.1.1.0, wildcard bits 0.0.0.255
deny any
SCE8000#
```

Related Commands

Command	Description
access-list	Adds an entry to the bottom of the specified access list.

show applications slot lookup Double-Wildcard

To display the all double star entry in the LUT, use the **show applications slot lookup Double-Wildcard** command in global configuration mode.

show applications slot *slot-number* **lookup** *lookup-name* **Double-Wildcard**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
lookup-name	Defines the name of the lookup.
Double-Wildcard	Displays the all Double star entry in the LUT.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Usage Guidelines

Authorization:

Examples

The following example shows how to display the status of all the configured tunables:

```
SCE8000#>show applications slot 0 lookup GT_LUT_HTTP_URLs Double-Wildcard
Table keys and values:
key = *.rapidshare.*:/cgi-bin/upload*:*:*
value = 2
key = *facebook.*:*:*:*
value = 24
key = *.rapidshare.com:*files:*:*
value = 2
key = *.divshare.com:*cgi-bin/upload.cgi:*:sid=*
value = 57
MaxKeyLength   = 42
AvgKeyLength   = 28
Number of Keys = 3
```

show applications slot tunable

To display the status of a tunable in the Cisco SCE platform, use the **show applications slot tunable** command in global configuration mode.

show applications slot *slot-number* **{tunable** *tunable-name* **| all-tunables}**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
tunable-name	Defines the name of the tunable.
all-tunables	Displays the status of all the tunables.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following example shows how to display the status of all the configured tunables:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show applications  slot 0 all-tunables
GT_COOKIE_EMPTY_VALUE=""
GT_HTTP_FLAVOR_COOKIE_PRESENTED=FALSE
GT_Redirect_enablePackageID=TRUE
GT_MAX_COOKIE_LENGTH=100
SCE8000#>
```

The following example shows how to display the status of a specific tunable:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show applications  slot 0 tunable tunable-name
tunable-name=TRUE
SCE8000#>
```

Related Commands

Command	Description
tunable *tunable-name* **value** *value*	To enable and disable a tunable and set a value for a tunable in the Cisco SCE platform.

show blink

Displays the blinking status of a slot. A slot blinks after it receives a **blink** command.

show blink slot *slot-number*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the blink status of slot 0:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show blink slot 0
Slot 0 blink status: off
SCE8000>
```

Related Commands

Command	Description
blink	Blinks a slot LED for visual identification.

show calendar

Displays the time maintained by the real-time system calendar clock.

show calendar

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current system calendar:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show calendar
12:50:03 GMT MON November 13 2005
SCE8000>
```

Related Commands

Command	Description
calendar set	Sets the system calendar.

show cdp

Displays the following Cisco Discovery Protocol (CDP) information:

- interval between transmissions of CDP advertisements (transmission timer)
- the number of seconds the CDP advertisement is valid for a given port (hold time)
- the version of the advertisement
- CDP mode

show cdp

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example illustrates sample output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp
Global CDP information:
        Sending CDP packets every 60 seconds
        Sending a holdtime value of 180 seconds
        Sending CDPv2 advertisements is enabled
        standard mode - CDP packets are received and processed. CDP packets are generated.
SCE8000>
```

Related Commands

Command	Description
show cdp entry	Displays information about a specific neighboring device discovered using CDP.
show cdp neighbors	Displays information that was discovered regarding the neighboring devices.
show cdp traffic	Displays information about traffic between devices gathered using CDP

show cdp entry

Displays information about a specific neighboring device discovered using Cisco Discovery Protocol (CDP).

show cdp entry {* | *device-name[*]* [protocol | version]}

Syntax Description

*	Displays all of the CDP neighbors.
device-name	Name of the neighbor about which you want information.
*device-name**	You can enter an asterisk (*) at the end of an *device-name* as a wildcard. For example, entering **show cdp entry dev*** will match all entries which begin with **dev**.
protocol	(Optional) Limits the display to information about the protocols enabled on a router.
version	(Optional) Limits the display to information about the version of software running on the router.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Table 2-10 show cdp entry Field Description

Field	Definition
Device ID	The name of the neighbor device and either the MAC address or the serial number of this device.
Entry address(es)	A list of network addresses of neighbor devices.
[Network protocol] address	The IP v4 address of the neighbor device.
Platform	The product number of the device.

Table 2-10 show cdp entry Field Description

Field	Definition
Capability (Capability Codes) **Note** The capability of the Cisco SCE 8000 is 'r' (Repeater), since it is installed as a bump-in-the-wire device.	Capability (type of routing device) of the neighboring device. The capability types that can be discovered are: R—Router T—Transparent bridge B—Source-routing bridge S—Switch H—Host I— Device is using IGMP r—Repeater
Interface	The protocol being used by the connectivity media.
Port ID	The protocol and port number of the device.
Holdtime	The remaining amount of time (in seconds) the current device will hold the CDP advertisement from a sending router before discarding it.
Version	The software version running on the neighbor device.

Authorization: viewer

Examples

The following examples illustrate how to use this command.

Example 1

The following is sample output from the **show cdp entry** command with no limits. Information about the neighbor device.cisco.com is displayed, including device ID, address and protocol, platform, interface, hold time, and version.

```
SCE8000> enable 5
Password:<cisco>
SCE8000> show cdp entry device.cisco.com

-------------------------
Device ID: device.cisco.com
Entry address(es):
IP address: 192.168.68.18
Platform: cisco 4500,  Capabilities: Router
Interface: Ethernet0/1,  Port ID (outgoing port): Ethernet0
Holdtime : 125 sec
Version :
Cisco IOS Software
Cisco IOS (tm) 4500 Software (C4500-J-M), Version 12.1(2)
Copyright (c) 1986-2000 by cisco Systems, Inc.
Compiled Mon 07-Apr-00 19:51 by joeuser
```

Example 2

The following is sample output from the **show cdp entry protocol** command. Only information about the protocols enabled on device.cisco.com is displayed.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp entry device.cisco.com protocol
Protocol information for device.cisco.com:
IP address: 192.168.68.18
```

Example 3

The following is sample output from the **show cdp entry version** command. Only information about the version of software running on device.cisco.com is displayed.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp entry device.cisco.com version
Version information for device.cisco.com:
Cisco IOS Software
Cisco IOS (tm) 4500 Software (C4500-J-M), Version 12.1(2)
Copyright (c) 1986-2000 by cisco Systems, Inc.
Compiled Mon 07-Apr-00 19:51 by joeuser
```

Related Commands

Command	Description
show cdp	Displays the current CDP configuration.
show cdp neighbors	Displays information that was discovered regarding the neighboring devices.
show cdp traffic	Displays information about traffic between devices gathered using CDP

show cdp neighbors

Displays information that was discovered regarding the neighboring devices.

show cdp neighbors [*type number*] [**detail**]

Syntax Description

type	(Optional) Type of the interface connected to the neighbors about which you want information.
number	(Optional) Number of the interface connected to the neighbors about which you want information.
detail	(Optional) Displays detailed information about a neighbor (or neighbors). See the **Additional Fields** described in Table 2-11.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Displays the following information:

- type of device that was discovered
- the name of the device
- the number and type of the local interface (port)
- the number of seconds the CDP advertisement is valid for the port
- the device type
- the device product number
- the port ID

If you use the **detail** keyword, the following additional information is displayed for each device:

- entry address(es)
- version
- native VLAN ID
- the duplex mode
- the VTP domain name associated with neighbor devices.

Table 2-11 show cdp neighbors Field Description

Field	Definition
Device ID	The name of the neighbor device and either the MAC address or the serial number of this device.
Local Intrfce	The protocol being used by the connectivity media.
Holdtme	The remaining amount of time (in seconds) the current device will hold the CDP advertisement from a sending router before discarding it.
Capability (Capability Codes)	Capability (type of routing device) of the listed neighboring device. The capability types that can be discovered are: R—Router T—Transparent bridge B—Source-routing bridge S—Switch H—Host I— device is using IGMP r—Repeater **Note** The capability of the Cisco SCE 8000 is 'r' (Repeater), since it is installed as a bump-in-the-wire device.
Platform	The product number of the device.
Port ID	The protocol and port number of the device.
Additional Fields Displayed by the Detail Option	
Entry address(es)	A list of network addresses of neighbor devices.
[Network protocol] address	The IP v4 address of the neighbor device.
Version	The software version running on the neighbor device.
Advertisement version	The version of CDP being used for CDP advertisements.
Duplex	The duplex state of connection between the current device and the neighbor device
Native VLAN	The ID number of the VLAN on the neighbor device
VTP Management Domain	A string that is the name of the collective group of VLANs associated with the neighbor device.

Authorization: viewer

Examples

Example 1

The following example shows how to display information about the neighboring devices.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp neighbors
```

```
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone

Device ID        Local Intrfce     Holdtme    Capability  Platform  Port ID
Lab-Router       Gig 3/0/0          169         R S I     ME-C6524GSGig 1/5
Lab-Router       Gig 3/0/1          169         R S I     ME-C6524GSGig 1/6
Lab-Router       Gig 3/0/2          169         R S I     ME-C6524GSGig 1/7
Lab-Router       Gig 3/0/3          169         R S I     ME-C6524GSGig 1/8
SCE8000>
```

Example 2

The following example shows how to display detailed information about the neighboring devices.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp neighbors detail
-------------------------
Device ID: Router
Entry address(es):
IP address: 1.1.1.10
Platform: cisco ME-C6524GS-8S, Capabilities: Router Switch IGMP
Interface: GigabitEthernet3/0/0, Port ID (outgoing port): GigabitEthernet1/5
Holdtime : 178 sec
Version :
Cisco Internetwork Operating System Software
IOS (tm) s6523_rp Software (s6523_rp-IPBASE-M), Version 12.2(18)ZU2, RELEASE SOFTWARE
(fc2)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2007 by cisco Systems, Inc.
Compiled Tue 30-Jan-07 03:59 by alnguyen
advertisement version: 2
VTP Management Domain: demo
Duplex : full
```

Related Commands

Command	Description
show cdp	Displays the current CDP configuration.
show cdp entry	Displays information about a specific neighboring device discovered using CDP.
show cdp traffic	Displays information about traffic between devices gathered using CDP.

show cdp traffic

Displays information about traffic between devices gathered using Cisco Discovery Protocol (CDP).

show cdp traffic

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Table 2-12 show cdp traffic Field Description

Field	Description
Total packets output	Number of CDP advertisements sent by the local device. Note that this value is the sum of the CDP Version 1 advertisements output and CDP Version 2 advertisements output fields.
Input	Number of CDP advertisements received by the local device. This value is the sum of the CDP Version 1 advertisements input and CDP Version 2 advertisements input fields.
Hdr syntax	Number of CDP advertisements with bad headers received by the local device.
Chksum error	Number of times the checksum (verifying) operation failed on incoming CDP advertisements.
Encaps failed	Number of times CDP failed to send advertisements on an interface due to a failure caused by the bridge port of the local device.
No memory	Number of times the local device did not have enough memory to store the CDP advertisements in the advertisement cache table when the device was attempting to assemble advertisement packets for transmission and parse them when receiving them.
Invalid	Number of invalid CDP advertisements received and sent by the local device.
Fragmented	Number of times fragments or portions of a single CDP advertisement were received by the local device instead of the complete advertisement.

Table 2-12 show cdp traffic Field Description

Field	Description
CDP version 1 advertisements output	Number of CDP Version 1 advertisements sent by the local device.
Input	Number of CDP Version 1 advertisements received by the local device.
CDP version 2 advertisements output	Number of CDP Version 2 advertisements sent by the local device.
Input	Number of CDP Version 2 advertisements received by the local device.

Authorization: viewer

Examples

The following is sample output from the **show cdp traffic** command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show cdp traffic
CDP counters:
        Total packets output: 543, Input: 333
        Hdr syntax: 0, Chksum error: 0, Encaps failed: 0
        No memory: 0, Invalid: 0, Fragmented: 0
        CDP version 1 advertisements output: 191, Input: 187
        CDP version 2 advertisements output: 352, Input: 146
SCE8000>
```

Related Commands

Command	Description
show cdp	Displays the current CDP configuration.
show cdp entry	Displays information about a specific neighboring device discovered using CDP.
show cdp neighbors	Displays information that was discovered regarding the neighboring devices.

show clock

Displays the time maintained by the system clock.

show clock

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current system clock:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show clock
12:50:03 GMT MON November 13 2005
SCE8000>
```

Related Commands

Command	Description
clock set	Manually sets the system clock.

show diameter

Displays the current diameter stack state. Use the **counters** option to display message statistics.

show diameter [counters]

Syntax Description

counters	Displays stack message statistics.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

Example 1

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter
Stack State : Down
Host       : 10.10.10.10
Realm      : sce.cisco.com
Tx-Timer   : 30
Log Level  : OFF
SCE8000>
```

Example 2

The following example shows output from this command with the **counters** option.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter counters

WDR Sent     : 150
WDR Received : 182
WDA Sent     : 182
WDA Received : 150
CER Sent     : 3
CER Received : 0
CEA Sent     : 0
CEA Received : 3
```

```
DPR Sent      : 0
DPA Sent      : 1
SCE8000>
```

Related Commands

Command	Description
diameter	Starts and stops the diameter stack.

show diameter forwarding-mode

Displays the forwarding mode table.

show diameter forwarding-mode

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter forwarding-mode
-----------------------------------------------
| Realm        | Application  | Scheme         |
-----------------------------------------------
| scos.com     | Gx           | Load-Balancing |
 -----------------------------------------------
SCE8000>
```

Related Commands

Command	Description
show diameter realm	Displays all routing table entries for the specified realm.

show diameter Gx

Displays the current Gx application state and connected peers. Use the **counters** option to display message statistics.

show diameter Gx [counters]

Syntax Description

counters	Displays Gx message statistics.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.
4.0.0	Command output updated with new fields.

Usage Guidelines

Authorization: viewer

Examples

Example 1

The following example shows output from this command.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter Gx
Gx Application Status                          : Up
Gx Realm                                       : scos.com
Gx tx-timer                                    : 5
Gx PCRF-connection-failure-grace-time          : 150
Gx fatal-grace-time                            : 300
Connected
SCE8000>
```

Example 2

The following example shows output from this command with the **counters** option.

```
SCE8000>enable 5
Password:<cisco>
SCE8000> show diameter Gx counters

CCR Initial Messages                             : 8294
CCR Initial Messages Sent Failed                 : 0
CCR Initial Messages Timed Out                   : 0
CCR Update Messages                              : 0
CCR Update Messages Timed Out                    : 0
```

```
CCR Update Messages Sent Failed                  : 0
CCR Terminate Messages                           : 0
CCR Terminate Messages Timed Out                 : 0
CCR Terminate Messages Sent Failed               : 0
CCA Initial Messages                             : 8293
CCA Initial Messages Error                       : 0
CCA Update Messages                              : 0
CCA Terminate Messages                           : 0
CCA Terminate Messages Error                     : 0
RAR Received Messages                            : 0
RAA Sent Messages                                : 0
RAA Sent Messages Timed Out                      : 0
RAA Sent Messages Sent Failed                    : 0
ASR Received Messages                            : 0
ASA Sent Messages(SUCCESS)                       : 0
ASA Sent Messages(UNKOWN_SESSIOM_ID)             : 0
ASA Sent Messages(UNABLE_TO_COMPLY)              : 0
ASA Sent Messages Timed Out                      : 0
ASA Sent Messages Sent Failed                    : 0
Login Failed (Pull Response tunable)             : 0
Login Failed (Pull Response Failed)              : 0
Tunable Update Failed (No Party Name)            : 0
Tunable Update Failed (Update Failed)            : 0
Radius VSA Update Failed (No Owner)              : 0
Radius VSA Update Failed (No Party Info)         : 0
Radius VSA Update Failed (Update Failed)         : 0
Pull retry ignored       (Wait for CCA)          : 0
Last Send Error Code:                            : 0
Usage Reporting Dumped                           : 0
Usage Reporting Config error                     : 0
Usage Reporting Non Existing Sub                 : 0
Usage Reporting Failed PCIDs                     : 0
Bad Event-Trigger AVP                            : 0
Bad Monitoring-Key AVP value                     : 0
Event-Trigger AVP value not supported            : 0
Bad Granted-Service-Unit AVP                     : 0
Usage-Monitoring-Level AVP value not supported   : 0
Handler call failed                              : 0
Pull Response Rate                               : 246.3
Spawn Login Rate                                 : 246.4
Spawn Logout Rate                                : 0.0
CCR Rate                                         : 246.4
CCA Rate                                         : 246.3
ASR Rate                                         : 0.0
ASA Rate                                         : 0.0
MSG Rate                                         : 493.2
Total Opened Sessions                            : 9642
Total Closed Sessions                            : 0
Currently Active Sessions                        : 9642
Sessions Waiting for Retry                       : 0
SCE8000>
```

Related Commands

Command	Description
diameter Gx	Starts and stops the Gx application.

show diameter Gx send-attributes

Displays the current Gx VSA attributes in **send** mode.

show diameter Gx send-attributes

Syntax Description

This command has no arguments or keywords.

Command Default

None.

Command Modes

User EXEC.

Usage Guidelines

Authorization: Admin

Command History

This table includes the following release-specific history entries:

Release	Modification
4.2.0	This command was introduced.

Examples

The following example shows output from this command:

```
SCE8000#enable 10
password: <cisco>

SCE8000#show diameter gx send-attributes
Diameter Gx send attributes: DONT_SEND
```

show diameter Gx MIP-support

Shows the status of multiple IP mappings configuration for a Gx subscriber.

show diameter Gx MIP-support

Syntax Description

This command has no arguments or keywords.

Command Default

None.

Command Modes

User EXEC.

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Examples

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)#> diameter Gx MIP-support
SCE8000(config)#> end
SCE8000#> show diameter Gx MIP-support

MIP SUPPORT IS ENABLED
SCE8000#>
```

show diameter gx virtual-gi

Displays the specified VLAN ID to virtual Gi ID mapping.

show diameter gx virtual-gi {vlan-id *value* **| all}**

Syntax Description

vlan-id *value*	VLAN ID to be displayed.
all	Displays all the configured VLAN ID to virtual Gi ID mappings.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display information for all the existing VLAN ID to virtual Gi ID mappings:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter gx virtual-gi all

Virtual Gi Mapping Table:
---------------------
| VLAN   |  Mapping  |
---------------------
|    2   | 3         |
|    5   | 6         |
---------------------
SCE8000>
```

The following example shows how to display information of VLAN ID 2 mapping to virtual Gi ID:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter gx virtual-gi vlan-id 2

virtual Gi Mapping for vlanId 2   =   3
SCE8000>
```

Related Commands

Command	Description
subscriber virtual-gi-mode	Enables the virtual Gi mode.
diameter gx virtual-gi vlan-id	Configures the maping of VLAN ID and virtual Gi ID.

show diameter Gx virtual-gi multi-mapping

Shows whether the virtual Gi multi-mapping is enabled on the device.

show diameter Gx virtual-gi multi-mapping

Syntax Description

This command has no arguments or keywords.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

```
SCE8000# configure
SCE8000(config)#> diameter gx virtual-gi multi-mapping enable
SCE8000(config)#> end
SCE8000#> show diameter gx virtual-gi multi-mapping

Multiple VLAN ID to single VGi ID mapping supported

SCE8000#> configure
SCE8000(config)#> diameter Gx virtual-gi multi-mapping disable
SCE8000(config)#> end
SCE8000#> show diameter gx virtual-gi multi-mapping

Multiple VLAN ID to single VGi ID mapping NOT supported

SCE8000(config)#>
```

show diameter Gx login-rate

Displays the maximum Gx login-rate.

show diameter Gx login-rate

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
4.0.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

Example 1

The following example shows output from this command.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter Gx login-rate

Gx Max Login Rate : 400
SCE8000>
```

Example 2

The following example shows output from this command when the Gy is enabled.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter Gy

Gy Client Status : Enabled
Gy tx-timer : 5

SCE8000> show diameter Gx login-rate

Gx Max Login Rate(Gy Enabled) : 200

SCE8000> SCE8000(config)#> diameter Gx login-rate 450

Error - Can't set Gx max login rate when Gy is UP

SCE8000>
```

Related Commands

Command	Description
diameter Gx login-rate	Sets the maximum Gx login rate when only Gx is configured.

show diameter Gy

Displays the current Gy application state and connected peers.

- Use the **counters** option to display message statistics.

show diameter Gy [counters]

Syntax Description

counters	Displays Gy message statistics.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.
4.0.0	Command output updated with CCR-I,CCR-T, CCA-I, and CCA-T fields.

Usage Guidelines

Authorization: viewer

Examples

Example 1

The following example shows output from this command.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter Gy

Gy Client Status     : Enabled
Gy tx-timer          : 5
SCE8000>
```

Example 2

The following example shows output from this command with the **counters** option.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show diameter Gy counters

Gy Client Counters:
-------------------
CCR Initial Sent Messages                : 11497
CCR Update Sent Messages                 : 0
CCR Terminate Sent Messages              : 0
CCR Intial Messages (Package Switch)     : 0
CCR Terminate Messages (Package Switch)  : 0
```

```
CCR Messages Timed Out                    : 0
CCR Initial Messages Timed Out            : 0
CCR Update Messages Timed Out             : 0
CCR Terminate Messages Timed Out          : 0
CCR Retransmitted Messages                : 0
CCR Initial Retransmitted Messages        : 0
CCR Update Retransmitted Messages         : 0
CCR Terminate Retransmitted Messages      : 0
CCR Aborted Retransmission Messages       : 0
CCR Messages Sent To Alt Server           : 0
CCR Initial Messages Sent To Alt Server   : 0
CCR Update Messages Sent To Alt Server    : 0
CCR Terminate Messages Sent To Alt Server: 0
CCR Message Failed on Creation            : 0
CCR Message Failed on Send                : 0
CCR Initial Message Failed on Send        : 0
CCR Update Message Failed on Send         : 0
CCR Terminate Message Failed on Send      : 0

CCA Messages Received                     : 12704
CCA Messages Received on Initial          : 12704
CCA Messages Received on Update           : 0
CCA Messages Received on Terminate        : 0
CCA Messages No MSCC Handled              : 0
Error CCA Messages Received               : 0
Error CCA Messages Received on Initial    : 0
Error CCA Messages Received on Update     : 0
Error CCA Messages Received on Terminate : 0

RAR Messages Received                     : 0
RAA Sent Messages                         : 0
RAA Messages Failed on Send               : 0

Gy Failure Messages                       : 0
Severe Failures                           : 0

CCR Rate                                  :244.8
CCR-I Rate                                  :244.8
CCR-T Rate                                  :0.0
CCA Rate                                  :244.6
CCA-I Rate                                  :245.2
CCA-T Rate                                  :0.0

Current Opened Sessions                   : 13355
Max Opened Sessions                       : 13355
Number of Active->Standby events          : 0
SCE8000>
```

Related Commands

Command	Description
diameter Gy	Starts and stops the Gy application.

show diameter peer

Displays the specified peer table entry.

show diameter peer *name*

Syntax Description

name	Name of peer to display.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter peer A
Peer Table:
-------------------------------------------------------------------------
| Name                      | Host               | Port      | State |
-------------------------------------------------------------------------
| A                         | 64.103.125.22      | 3868      | Down  |
SCE8000>
```

Related Commands

Command	Description
diameter peer	Adds an entry to the peer table.
show diameter peer-table	Displays the peer table.

show diameter peer-table

Displays the peer table.

show diameter peer-table

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter peer-table

Peer Table:
-------------------------------------------------------------
| Name            | Host               | Port      | State |
-------------------------------------------------------------
| SER_GX          | 10.121.64.38       | 3869      | Up    |
| SER_GY          | 10.121.64.46       | 3870      | Up    |
-------------------------------------------------------------
SCE8000>
```

Related Commands

Command	Description
show diameter peer	Displays the specified peer table entry.

show diameter realm

Displays all routing table entries for the specified realm.

show diameter realm ***name***

Syntax Description

name	Name of the realm to display.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter realm scos.com
Realm: scos.com
Application: Gx
Servers:
  A
  B

Scheme Type : Load Balancing
----------------------------
Session Sharing: Off
Stickiness     : Off
   Server: A            Status : Not Connected

   Server: B            Status : Not Connected
SCE8000>
```

Related Commands

Command	Description
diameter realm	Adds an entry to the routing table.
show diameter routing table	Displays the routing table.

show diameter routing table

Displays the routing table.

show diameter routing table

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show diameter routing table
-----------------------------------------------------------
| Name        | Realm            | Application | Priority |
 -----------------------------------------------------------
| SER_GY      | cisco.com        | Gy          | 0        |
| SER_GX      | cisco.com        | Gx          | 0        |
 -----------------------------------------------------------
SCE8000>
```

Related Commands

Command	Description
show diameter realm	Displays all routing table entries for the specified realm.

show environment all

Displays information about the Cisco SCE platform environment. The information includes cooling, power supply units, temperature, and voltage.

show environment all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show environment all
Environment information:

---------------------
Slot 1: SCE8000-SCM-E
---------------------

scm[0].smc[0].max1668[0] - temperature device
.
.
TEMPERATURE status:
=============================================================================================
=======================================================
    PCB_Upper    local1      29C  29     29.0   29     0.0     -18    -8     60     75
OK          0000:00:00:54  ----------- ----:--:--:--  0
.
.
.
VOLTAGE status:
.
.
.
FAN status:
    CurrStatus : OK fan tray is in non-manual mode (0000:00:00:50)
```

```
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=2, fail=0)
.
.
.
PSU status:
    CurrStatus : OK (0000:00:00:50)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=1, fail=0)
.
.
.
Message summary:
  INTERNAL status is: {OK}
  VOLTAGE status is: {OK, <DISABLED>}
  TEMPERATURE status is: {OK}
  FAN status is: {OK}
  PSU status is: {OK}
SCE8000>
```

show environment cooling

Displays information about the Cisco SCE platform cooling.

show environment cooling

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show environment cooling
Environment Cooling information:

-----------
SCE8000-FAN
-----------

fan-tray[0] - cooling device
INTERNAL status:
    CurrStatus : OK (0000:00:01:43)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=7, fail=0)
FAN status:
    CurrStatus : OK fan tray is in non-manual mode (0000:00:01:43)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=4, fail=0)
    Status Register   : 0xa4
    Control Mode      : HP (High Power)
    Test Enable State : Disabled
    Led Status        : Green
    Fan Status        : OK
    Thermistor Status : OK
    Speed Level (1-4) : 1
    Thermistor Value  : 24 Celsius
    Sw Version        : 0x10000
```

```
Message summary:
  INTERNAL status is: {OK}
  VOLTAGE status is: {OK, <DISABLED>}
  TEMPERATURE status is: {OK}
  FAN status is: {OK}
  PSU status is: {OK}
SCE8000>
```

show environment power

Displays information about the Cisco SCE platform PSUs (power supply units).

show environment power

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show environment power
Environment Power information:

-------------
PWR-2700-AC/4
-------------

psu[0] - power supply device
INTERNAL status:
    CurrStatus : OK (0000:00:01:59)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=4, fail=0)
PSU status:
    CurrStatus : OK (0000:00:01:59)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=4, fail=0)

Message summary:
  INTERNAL status is: {OK}
  VOLTAGE status is: {OK, <DISABLED>}
  TEMPERATURE status is: {OK}
  FAN status is: {OK}
  PSU status is: {OK}
SCE8000>
```

show environment temperature

Displays information about the temperature of the Cisco SCE platform.

show environment temperature

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show environment temperature
Environment Temperature information:

---------------------
Slot 1: SCE8000-SCM-E
---------------------

scm[0].smc[0].max1668[0] - temperature device
INTERNAL status:
    CurrStatus : OK (0000:00:02:15)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=35, fail=0)
TEMPERATURE status:
    Name         General  CurrVal MinVal AvgVal MaxVal DevVal  ErrL   WrnL   WrnH   ErrH
CurrStatus  dddd:hh:mm:ss  PrevStatus  dddd:hh:mm:ss  Sts#
================================================================================================
=====================================================
    PCB_Upper    local1      29C  29     29.0   29     0.0     -18    -8     60     75
OK          0000:00:02:15  ----------- ----:--:--:--  0
    DPT          sd_1        39C  38     38.7   39     0.5     -8     2      74     89
OK          0000:00:02:15  ----------- ----:--:--:--  0
    CLS          sd_2        33C  32     32.8   33     0.4     -8     2      63     78
OK          0000:00:02:15  ----------- ----:--:--:--  0
SCE8000>
```

show environment voltage

Displays information about the Cisco SCE platform voltage.

show environment voltage

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show environment voltage
Environment Voltage information:
---------------------
Slot 1: SCE8000-SCM-E
---------------------

scm[0].smc[0].summit766[0] - voltage device
INTERNAL status:
    CurrStatus : OK (0000:00:01:28)
    PrevStatus : <none> (----:--:--:--)
    Sts#       : 0 (access=23, fail=0)
VOLTAGE status:
    Name         General  CurrVal MinVal AvgVal MaxVal DevVal  ErrL   WrnL   WrnH   ErrH
CurrStatus  dddd:hh:mm:ss  PrevStatus  dddd:hh:mm:ss  Sts#

================================================================================================
=======================================================
    Main_3_3     CH_A      3286mV 3286   3286.0 3286   0.0     3168   3234   3366   3432
OK          0000:00:01:28  ----------- ----:--:--:--  0
    Main_2_5     CH_B      2490mV 2490   2490.0 2490   0.0     2400   2450   2550   2600
OK          0000:00:01:28  ----------- ----:--:--:--  0

SCE8000>
```

show failure-recovery operation-mode

Displays the operation mode to apply after booting resulted from a failure.

show failure-recovery operation-mode

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the failure recovery operation mode:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show failure-recovery operation-mode
System Operation mode on failure recovery is: operational
SCE8000>
```

Related Commands

Command	Description
failure-recovery operation-mode	Specifies the operation mode to be applied when the system reboots after a system failure.

show hostname

Displays the currently configured hostname.

show hostname

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current hostname:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show hostname
SCE8000
SCE8000>
```

Related Commands

Command	Description
hostname	Modifies the name of the Cisco SCE platform.

show hosts

Displays the default domain name, the address of the name server, and the contents of the host table.

show hosts

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the configured domain and hosts:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show hosts
Default domain is cisco.com
Name/address lookup uses domain service
Name servers are 10.1.1.60, 10.1.1.61
Host   Address
----   -------
PC85   10.1.1.61
SCE8000>
```

Related Commands

Command	Description
hostname	Modifies the name of the Cisco SCE platform.
ip domain-name	Defines a default domain name.
ip name-server	Specifies the address of one or more servers to use for name and address resolution.

show hw-bypass mode

To displays the harware bypass mode status of the Cisco SCE platform, use the **show hw-bypass mode** command in the privileged EXEC mode.

show hw-bypass mode

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Privileged EXEC

Command History This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines The authorization used is root.

Examples The following is the sample output for the **show hw-bypass mode** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show hw-bypass mode
hw-bypass mode is enabled
SCE8000(config)#>
```

Related Commands

Command	Description
hw-bypass mode	Enables the hardware bypass mode of the Cisco SCE platform. It also allows you to set the hardware bypass state for the specified static parties when configured in this mode.

show interface gigabitethernet

Displays the details of the GigabitEthernet management interface.

show interface gigabitethernet *slot-number/interface-number* **[counters [***direction***]]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 1.
interface-number	GigabitEthernet management interface number. Enter a value of 1.
counters	Displays the values of counters of the GigabitEthernet management interface.
direction	(Optional) Displays only those counters of a specific direction. Choose **in** or **out.**

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the GigabitEthernet details:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface gigabitethernet 1/1
SCE8000>
```

Related Commands

Command	Description
interface gigabitethernet	Enters GigabitEthernet Interface Configuration mode.

show interface linecard

Displays information for a specific line card interface.

show interface linecard *slot-number*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0
The application assigned to slot 0 is /system/app/eng30102.sli
Silent is off
Configured shutdown is off
Shutdown due to sm-connection-failure is off
Resulting current shutdown state is off
WAP handling is disabled
SCE8000>
```

Related Commands

Command	Description
interface linecard	Enters Interface Linecard Configuration mode.

show interface linecard accelerate-packet-drops

Displays the currently configured hardware packet drop mode.

show interface linecard *slot-number* **accelerate-packet-drops**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current drop mode:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 accelerate-packet-drops
Accelerated packet drops mode is enabled
SCE8000>
```

Related Commands

Command	Description
accelerate-packet-drops	Enables drop-wred-packets-by-hardware mode.

show interface linecard application

Displays the name of the application loaded on the line card interface.

show interface linecard *slot-number* **application**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the currently loaded application:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 application
/system/app/eng30102.sli
SCE8000>
```

show interface linecard asymmetric-l2-support

Displays the current asymmetric Layer 2 support configuration.

show interface linecard *slot-number* **asymmetric-l2-support**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 asymmetric-l2-support
Asymmetric layer 2 support is disabled
SCE8000>
```

Related Commands

Command	Description
asymmetric-l2-support	Configures the system to treat flows as having asymmetric Layer 2 characteristics for the purpose of packet injection.

show interface linecard asymmetric-routing-topology

Displays information relating to asymmetric routing topology.

show interface linecard *slot-number* **asymmetric-routing-topology**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.0	This command was introduced.

Usage Guidelines

This command displays the following information:

- Current asymmetric routing topology status.
- The ratio of TCP unidirectional flows to total TCP flows per traffic processor (*TCP unidirectional flows ratio*).

  The unidirectional flow ratio is displayed only for TCP flows, and reflects the way the flows were opened. It is calculated over the period of time since the Cisco SCE platform was last reloaded or since the counters were last reset.

  To reset the asymmetric routing mode counters, use the **clear interface linecard asymmetric-routing-topology counters command.**

Note The Cisco SCE platform identifies unidirectional flows by default and regardless of the asymmetric routing mode.

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 asymmetric-routing-topology
Asymmetric Routing Topology mode is disabled

TCP Unidirectional flows ratio statistics:
==========================================
Traffic Processor 1   :   0%
Traffic Processor 2   :   0%
```

```
Traffic Processor 3   :   0%
Traffic Processor 4   :   0%
Traffic Processor 5   :   0%
Traffic Processor 6   :   0%
Traffic Processor 7   :   0%
Traffic Processor 8   :   0%
Traffic Processor 9   :   0%
Traffic Processor 10   :   0%
Traffic Processor 11   :   0%
Traffic Processor 12   :   0%

Note that the statistics are updated only if the system is configured to work in Enhanced
Open Flow (i.e. following settings are disabled:
Classical Open Flow mode, VAS, TCP no bypass est, etc.).
The statistics are updated once every two minutes
SCE8000>
```

show interface linecard attack-detector

Displays the configuration of the specified attack detector.

show interface linecard *slot-number* **attack-detector [default | all]**

show interface linecard *slot-number* **attack-detector** *attack-detector*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
default	Displays the default attack detector configuration.
all	Displays the configuration of all existing attack detectors.
attack-detector	Number of the specific attack detector to be displayed.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

When you specify the **all** or **default** keyword, the following information is displayed:

- Protocol side—Whether the attack detector applies to attacks originating at the subscriber or network side.
- Direction—Whether the attack detector applies to single-sided or dual-sided attacks.
- Action to take if an attack is detected.
- Thresholds:
  - open-flows-rate—Default threshold for the rate of open flows (new open flows per second).
  - suspected-flows-rate—Default threshold for the rate of suspected DDoS flows (new suspected flows per second).
  - suspected-flows-ratio—Default threshold for the ratio of suspected flow rate to open flow rate.
- Subscriber notification—Enabled or disabled.
- Alarm—Sending an SNMP trap is enabled or disabled.

Authorization: viewer

Examples

The following examples show the use of the **show interface linecard attack-detector** command.

Example 1

The following example shows how to display the configuration of attack detector number 3:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 attack-detector 3
Detector #3:
Comment: 'Sample'
Access-list: 1
Effective only for TCP port(s) 21,23,80
Effective for all UDP ports
Protocol|Side|Direction ||Action| Thresholds  |Sub- |Alarm
| |  || |Open flows|Ddos-Suspected flows|notif|
| |  || |rate |rate |ratio | |
--------|----|-----------||------|----------|------------|-------|-----|-----
TCP |net.|source-only|| |  |  | | |
TCP |net.|dest-only || |  |  | | |
TCP |sub.|source-only|| |  |  | | |
TCP |sub.|dest-only || |  |  | | |
TCP |net.|source+dest|| |  |  | | |
TCP |sub.|source+dest|| |  |  | | |
TCP+port|net.|source-only||Block |  |  | | |Yes
TCP+port|net.|dest-only || |  |  | | |
TCP+port|sub.|source-only||Block |  |  | | |Yes
TCP+port|sub.|dest-only || |  |  | | |
TCP+port|net.|source+dest|| |  |  | | |
TCP+port|sub.|source+dest|| |  |  | | |
UDP |net.|source-only|| |  |  | | |
UDP |net.|dest-only || |  |  | | |
UDP |sub.|source-only|| |  |  | | |
UDP |sub.|dest-only || |  |  | | |
UDP |net.|source+dest|| |  |  | | |
UDP |sub.|source+dest|| |  |  | | |
UDP+port|net.|source-only|| |  |  | | |
UDP+port|net.|dest-only || |  |  | | |
UDP+port|sub.|source-only|| |  |  | | |
UDP+port|sub.|dest-only || |  |  | | |
UDP+port|net.|source+dest|| |  |  | | |
UDP+port|sub.|source+dest|| |  |  | | |
ICMP |net.|source-only|| |  |  | | |
ICMP |net.|dest-only || |  |  | | |
ICMP |sub.|source-only|| |  |  | |Yes |
ICMP |sub.|dest-only || |  |  | | |
other |net.|source-only|| |  |  | | |
other |net.|dest-only || |  |  | | |
other |sub.|source-only|| |  |  | | |
other |sub.|dest-only || |  |  | | |
Empty fields indicate that no value is set and configuration from
the default attack detector is used.
SCE8000>
```

Example 2

The following example shows how to display the configuration of the default attack detector:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 attack-detector default
Protocol|Side|Direction ||Action| Thresholds  |Sub- |Alarm
| |  || |Open flows|Ddos-Suspected Flows|notif|
| |  || |rate |rate |ratio | |
```

```
--------|----|-----------||------|----------|------------|-------|-----|-----
TCP |net.|source-only||Report| 1000|  500|50 |No |No
TCP |net.|dest.-only ||Report| 1000|  500|50 |No |No
TCP |sub.|source-only||Report| 1000|  500|50 |No |No
TCP |sub.|dest.-only ||Report| 1000|  500|50 |No |No
TCP |net.|source+dest||Report| 100|  50|50 |No |No
TCP |sub.|source+dest||Report| 100|  50|50 |No |No
TCP+port|net.|source-only||Report| 1000|  500|50 |No |No
TCP+port|net.|dest.-only ||Report| 1000|  500|50 |No |No
TCP+port|sub.|source-only||Report| 1000|  500|50 |No |No
TCP+port|sub.|dest.-only ||Report| 1000|  500|50 |No |No
TCP+port|net.|source+dest||Report| 100|  50|50 |No |No
TCP+port|sub.|source+dest||Report| 100|  50|50 |No |No
UDP |net.|source-only||Report| 1000|  500|50 |No |No
UDP |net.|dest.-only ||Report| 1000|  500|50 |No |No
UDP |sub.|source-only||Report| 1000|  500|50 |No |No
UDP |sub.|dest.-only ||Report| 1000|  500|50 |No |No
UDP |net.|source+dest||Report| 100|  50|50 |No |No
UDP |sub.|source+dest||Report| 100|  50|50 |No |No
UDP+port|net.|source-only||Report| 1000|  500|50 |No |No
UDP+port|net.|dest.-only ||Report| 1000|  500|50 |No |No
UDP+port|sub.|source-only||Report| 1000|  500|50 |No |No
UDP+port|sub.|dest.-only ||Report| 1000|  500|50 |No |No
UDP+port|net.|source+dest||Report| 100|  50|50 |No |No
UDP+port|sub.|source+dest||Report| 100|  50|50 |No |No
ICMP |net.|source-only||Report| 500|  250|50 |No |No
ICMP |net.|dest.-only ||Report| 500|  250|50 |No |No
ICMP |sub.|source-only||Report| 500|  250|50 |No |No
ICMP |sub.|dest.-only ||Report| 500|  250|50 |No |No
other |net.|source-only||Report| 500|  250|50 |No |No
other |net.|dest.-only ||Report| 500|  250|50 |No |No
other |sub.|source-only||Report| 500|  250|50 |No |No
other |sub.|dest.-only ||Report| 500|  250|50 |No |No
SCE8000>
```

Related Commands

Command	Description
attack-detector	Enables the specified attack detector and assigns an ACL to it.
attack-detector default	Defines default thresholds and attack-handling action.
attack-detector *number*	Configures a specifc attack detector for a particular attack type with the assigned number.

show interface linecard attack-filter

Displays the attack-filtering configuration.

show interface linecard *slot-number* **attack-filter** [*option*]

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
option	See Usage Guidelines for the list of options.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The following options may be displayed:

- **query IP configured—D**isplays the configured threshold values and action as follows:
  - **query single-sided IP** *ip-address* **configured—D**isplays the configured threshold values and action for attack detection for a specified IP address (single-sided detection).
  - **query single-sided-v6** *ip-address* **configured—D**isplays the configured threshold values and action for v6 attack detection for a specified IP address (single-sided detection).
  - **query dual-sided source-IP** *ip-address1* **dest** *ip-address2* **configured—D**isplays the configured threshold values and action for attack detection between two specified IP addresses (dual-sided detection).
  - **query dual-sided-v6 source-IP** *ip-address1* **dest** *ip-address2* **configured—D**isplays the configured threshold values and action for v6 attack detection between two specified IP addresses (dual-sided detection).
  - **dest-port** *port-number—D*isplays the configured threshold values and action for the specified port. You can include this argument with both single-sided and dual-sided queries.
- **query IP current—**Displays the current counters for a specified attack detector for all protocols and attack directions as follows:
  - **query single-sided IP** *ip-address* **current—D**isplays the current counters for attack detection for a specified IP address (single-sided detection).
  - **query single-sided IP-v6** *ip-address* **current—D**isplays the current counters for v6 attack detection for a specified IP address (single-sided detection).
  - **query dual-sided source-IP** *ip-address1* **dest** *ip-address2* **current—D**isplays the current counters for attack detection between two specified IP addresses (dual-sided detection).

  - **query dual-sided-v6 source-IP** *ip-address1* **dest** *ip-address2* **current—D**isplays the current counters for v6 attack detection between two specified IP addresses (dual-sided detection).
  - **dest-port** *port-number—D*isplays the configured threshold values and action for the specified port. You can include this argument with both single-sided and dual-sided queries.
- **current-attacks—D**isplays all currently handled attacks.
- **current-attacks-ipv6—D**isplays all currently handled attacks for ipv6.
- **counters—D**isplays all attack detection counters.
- **dont-filter—D**isplays all existing stopped attack filters.
- **dont-filter-ipv6—D**isplays all existing stopped attack filters for ipv6.
- **force-filter—D**isplays all existing forced attack filters.
- **force-filter-ipv6—D**isplays all existing forced attack filters for ipv6.
- **subscriber-notification ports—D**isplays the list of subscriber-notification ports.
- **subscriber-notification redirect—D**isplays the configuration of subscriber-notification redirection, such as the configured destination and dismissal URLs, and allowed hosts.

Authorization: viewer

Examples

The following example shows how to display the configuration of attack detection between two specified IP addresses (dual-sided) for destination port 101:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 attack-filter
query dual-sided source-IP 10.10.10.10 dest 10.10.10.145 dest-port 101 configured
SCE8000>
```

The following example shows how to display all existing forced attack filters:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 attack-filter
force-filter No force-filter commands are set for slot 0
SCE8000>
```

The following example shows how to display the subscriber notification ports:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 attack-filter
subscriber-notification ports
Configured Subscriber notification ports: 100
SCE8000>
```

Related Commands

Command	Description
attack-filter	Enables specific attack detection for a specified protocol and attack direction.
attack-filter dont-filter | force-filter	Prevents attack filtering for a specified IP address or protocol.

show interface linecard cascade connection-status

Displays information about the connection between two cascaded SCE 8000 platforms. This information can help assist in the installation of a cascaded system and to prevent incorrect cabling.

show interface linecard *slot-number* **cascade connection-status**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the output from this command when the cascade interfaces of two cascaded Cisco SCE 8000 10GBE platforms have not been connected correctly:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 cascade connection-status
SCE is improperly connected to peer
Please verify that each cascade port is connected to the correct port of the peer SCE.
Note that in the current topology, the SCE must be connected to its peer as follows:
Port 3/2/0 must be connected to port 3/2/0 at peer
Port 3/3/0 must be connected to port 3/3/0 at peer
SCE8000>
```

The following example shows the output from this command when the cascade interfaces of two cascaded Cisco SCE platforms have been connected correctly:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 cascade connection-status
SCE is connected to peer
SCE8000>
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard cascade peer-sce-information

Displays information about the peer SCE platform. The data is available even when the two platforms are no longer in cascade connection mode.

show interface linecard *slot-number* **cascade peer-sce-information**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows typical output from this command when the two SCE platforms are connected correctly:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 cascade peer-sce-information
Peer SCE's IP address is 10.10.10.10
SCE8000>
```

The following example shows typical output from this command when the two SCE platforms are not connected correctly:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 cascade peer-sce-information
SCE is improperly connected to peer.
For further information, please consult cli show "cascade connection-status" command
Last known peer SCE's IP address was 10.10.10.10
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard cascade redundancy-status

Displays the current redundancy status of the Cisco SCE platform.

show interface linecard *slot-number* **cascade redundancy-status**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows typical output from this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 cascade redundancy-status
Redundancy status is active
SCE8000>
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard connection-mode

Displays the current configuration of the Cisco SCE platform traffic link connection.

show interface linecard *slot-number* **connection-mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows typical output from this command for a single SCE 8000 platform:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 connection-mode
slot 0 connection mode
Connection mode is inline
slot failure mode is external-bypass
Redundancy status is active
SCE8000>
```

The following example shows typical output from this command for a cascaded SCE 8000 platform:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 connection-mode
slot 0 connection mode
Connection mode is inline-cascade
slot 0 sce-id is 1
slot 0 is secondary
slot 0 is connected to peer
slot failure mode is bypass
Redundancy status is standalone
SCE8000>
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard counters

Displays the hardware counters for the line card interface.

show interface linecard *slot-number* **counters [bandwidth] [cpu-utilization]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
bandwidth	Displays only the bandwidth counters.
cpu-utilization	Displays only the CPU-utilization counters.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the hardware counters for the line card interface:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 counters
DP packets in: 340
DP packets out: 340
DP IP packets in: 340
DP Non-IP packets: 0
DP IP packets checksum err: 0
DP IP packets length err: 0
DP IP broadcast packets: 0
DP IP fragmented packets: 0
DP IP packets with TTL=0 err: 0
DP Non TCP/UDP packets: 0
DP TCP/UDP packets checksum err: 0
DP ARP packets: 0
DP PPP compressed packets: 0
DP packets dropped: 0
DP tuples to FF: 340
DP tuples from CLS: 340
DP L7 Filter congested packets: 0
DP VLAN packets: 0
DP MPLS packets: 0
DP parse errors: 0
DP IPinIP skipped packets: 0
```

```
DP no payload packets: 53
DP self-IP packets: 0
DP tunneled packets: 0
DP L2TP control packets: 0
DP L2TP packets with offset: 0

traffic-counters information:
-----------------------------
Counter 'myCounter' value: 0 L3 bytes. Rules using it: None.
1 counters listed out of 36 available
...
SCE8000>
```

Related Commands

Command	Description
clear interface linecard counters	Clears the counters for the line card interface.

show interface linecard cpa-client

Displays configuration and statistics for the CPA client.

show interface linecard *slot-number* **cpa-client**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display configuration and statistics for the CPA client.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show interface linecard 0 cpa-client
CPA client: Enabled
CPA Server Address: none
Number of categorization retries to make: 3
CPA Socket timeout(in millisec): 10
--------------------------------
CPA client status: Ok
Last error:
Successful queries: 0
Failed queries: 0
Pending queries: 0
Current rate (query/sec): 0.0
Last successful query round trip time (millisec): 0
--------------------------------
CPA client started at: Wed, 15 Sep 2010, 11:04:12.731
Last query at:
Last response at:
SCE8000#
```

Related Commands

Command	Description
cpa-client destination	Configures the destination CPA server.
cpa-client retries	Configures the number of retries to make if a request to the CPA server times out.

show interface linecard duplicate-packets-mode

Displays the currently configured duplicate packets mode.

show interface linecard *slot-number* **duplicate-packets-mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 duplicate-packets-mode
Packet duplication of flows due to Delay Sensitive <bundles>is enabled
Packet duplication of flows due to No-Online-Control <set-flow>is enabled
Packet duplication of flows due to No-Online-Control <set-flow>ratio percent is 70
Packet duplication in case of shortage is enabled
SCE8000>
```

show interface linecard external-bypass

Displays the state of the external bypass module.

show interface linecard *slot-number* **external-bypass**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the output from this command when both external bypass modules are functioning properly:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 external-bypass
External bypass current state is 'not activated'.
External bypass failure state is 'activated'.
Amount of expected external bypass devices: 2
(automatically configured)
SCE8000>
```

The following example shows the output from this command when one external bypass module is not detected:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 external-bypass
External bypass current state is 'not activated'.
External bypass failure state is 'activated'.
Amount of expected external bypass devices: 2
(automatically configured)
Warning: External bypass device expected but not detected on link #1
SCE8000>
```

Related Commands

Command	Description
external-bypass	Manually activates the external bypass modules.

show interface linecard flow-capture

Displays the flow capture status.

show interface linecard ***slot-number*** **flow-capture**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.

Command Default

This command has no default settings.

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 flow-capture
Flow Capture Status (module #1):
--------------------------------
Flow capture status:           RECORDING
Capturing type:                ONLINE
Target file name:              ftp://myUser:myPassword@10.10.10.80/./myCap1.cap
Target file size (bytes):      11141528
Time limit  (sec):             3600
Max L4 payload length (bytes): Unlimited
Number of recorded packets:    20687
Number of lost packets:        0
SCE8000>
```

Related Commands

Command	Description
flow-capture controllers	Configures limitations on the flow-capture feature.
traffic-rule ip-addresses	Defines a new traffic rule.
traffic-rule ipv6	Defines a new traffic rule containing IPv6 IP addresses.

show interface linecard flow-open-mode

Displays the currently configured flow open mode.

show interface linecard *slot-number* **flow-open-mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 flow-open-mode
Enhanced flow open mode is disabled
Asymmetric layer 2 support is disabled
Note that other settings may override all/part of the Enhanced Flow Open mode, e.g. VAS,
TCP no bypass est, etc.(in which cases will behave as in the classical mode)
SCE8000>
```

show interface linecard ip-tunnel

Displays the current IP tunnel configuration.

show interface linecard *slot-number* **ip-tunnel**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 ip-tunnel
no IP tunnel
SCE8000>
```

show interface linecard ip-tunnel 6to4

To display the status of the 6to4 configuration, use the **show interface linecard ip-tunnel 6to4** command in user EXEC mode.

show interface linecard *slot-number* **ip-tunnel 6to4**

Syntax Description

slot-number	Number of the identified slot.

Command Default

None

Command Modes

User EXEC (>)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 ip-tunnel 6to4

6to4 mode is enabled
SCE8000>
```

Related Commands

Command	Description
ip-tunnel 6to4	Enables 6to4 tunneling when the IPv6 environment is configured on the Cisco SCE device.

show interface linecard ip-tunnel DS-Lite

To display the status of the DS-Lite configuration, use the **show interface linecard ip-tunnel DS-Lite** command in user EXEC mode.

show interface linecard *slot-number* **ip-tunnel DS-Lite**

Syntax Description

slot-number	Number of the identified slot.

Command Default

None

Command Modes

User EXEC (>)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 ip-tunnel DS-Lite

DS-Lite mode is enabled
DS-Lite Extention-Header-Support is enabled
SCE8000>
```

Related Commands

Command	Description
ip-tunnel DS-Lite	Enables DS-Lite tunneling when the IPv6 environment is configured on the Cisco SCE devices.

show interface linecard ip-tunnel ipinip

Displays the current IPinIP configuration.

show interface linecard *slot-number* **ip-tunnel ipinip**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 ip-tunnel ipinip
IPinIP skip mode is enabled
IPinIP DSCP skip mode is disabled
SCE8000>
```

Related Commands

Command	Description
ip-tunnel ipinip skip	Enables the recognition of IPinIP tunnels and skipping into the internal IP packet.
ip-tunnel ipinip dscp-marking-skip	Configures the Cisco SCE platform to perform DSCP marking on the internal IP header of IPinIp traffic.

show interface linecard ipv6

Displays the current IPv6 state.

show interface linecard *slot-number* **ipv6**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows typical output from this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 ipv6
IPv6 counting mode is enabled
SCE8000>
```

show interface linecard l2tp

Displays the currently configured L2TP support parameters.

show interface linecard *slot-numbe***r l2tp**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use the **show interface linecard l2tp** command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 l2tp
L2TP identify-by port-number 1701
SCE8000>
```

Related Commands

Command	Description
l2tp identify-by	Configures the port number that the LNS and LAC use for L2TP tunnels.

show interface linecard link mode

Displays the configured Linecard Interface link mode.

show interface linecard *slot-number* **link mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the configured link mode for the line card interface:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 link mode
Link mode on port1-port2
Current link mode is  :forwarding
Actual link mode on active is :forwarding
Actual link mode on failure is :monopath-bypass
SCE8000>
```

Related Commands

Command	Description
link mode	Configures the link mode.

show interface linecard link-to-port-mapping

Displays the mapping of links and ports resulting from the **connection-mode** command.

show interface linecard *slot-number* **link-to-port-mapping**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the link-to-port mapping:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 link-to-port-mapping
Link Id    |   Upstream Port (Subscribers) |  Downstream Port (Network)
-------------------------------------------------------------------------
 0           |            0/3/0/0           |           0/3/0/1
 1           |            0/3/0/2           |           0/3/0/3
 2           |            0/3/0/4           |           0/3/0/5
 3           |            0/3/0/6           |           0/3/0/7
 4           |            0/3/1/0           |           0/3/1/1
 5           |            0/3/1/2           |           0/3/1/3
 6           |            0/3/1/4           |           0/3/1/5
 7           |            0/3/1/6           |           0/3/1/7
 8 (cascade) |            1/3/0/0           |           1/3/0/1
 9 (cascade) |            1/3/0/2           |           1/3/0/3
10 (cascade) |            1/3/0/4           |           1/3/0/5
11 (cascade) |            1/3/0/6           |           1/3/0/7
12 (cascade) |            1/3/1/0           |           1/3/1/1
13 (cascade) |            1/3/1/2           |           1/3/1/3
14 (cascade) |            1/3/1/4           |           1/3/1/5
15 (cascade) |            1/3/1/6           |           1/3/1/7
SCE8000>
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard mac-mapping

Displays the line card MAC mapping information.

show interface linecard *slot-number* **mac-mapping**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the MAC mapping information:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 mac-mapping
MAC mapping status is: disabled
MAC mapping default mapping is: none set
MAC mapping dynamic insertion to table is enabled
SCE8000>
```

Related Commands

Command	Description
show interface linecard mac-resolver arp	Displays a listing of all IP addresses and corresponding MAC addresses currently registered in the MAC resolver database.
mac-resolver arp	Adds a static IP entry to the MAC resolver database.

show interface linecard mac-resolver arp

Displays a listing of all IP addresses and corresponding MAC addresses currently registered in the MAC resolver database.

show interface linecard ***slot-number*** **mac-resolver arp**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the entries in the MAC resolver ARP database:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 mac-resolver arp
There are no entries in the mac-resolver arp database
SCE8000>
```

Related Commands

Command	Description
mac-resolver arp	Adds a static IP entry to the MAC resolver database.

show interface linecard mpls

Displays the current MPLS tunnelling configuration.

show interface linecard ***slot-number*** **mpls**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example illustrates the use of this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 mpls
MPLS Traffic-Engineering skip
SCE8000>
```

Related Commands

Command	Description
mpls	Configures the MPLS environment.

show interface linecard periodic-records aggregation

Displays the current RDR aggregation configuration.

show interface linecard *slot-number* **periodic-records aggregation**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following shows sample output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 periodic-records aggregation
VLUR : enabled
LUR : enabled
PUR : enabled
CSCE8000>
```

Related Commands

Command	Description
periodic-records aggregate-by-cpu	Enables RDR aggregation for the specified RDRs.

show interface linecard physically-connected-links

Displays the link mapping for the line card interface.

show interface linecard *slot-number* **physically-connected-links**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the link mapping for the line card interface:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 physically-connected-links
slot 0 is connected to link-0 and link-1
SCE8000>
```

Related Commands

Command	Description
connection-mode	Sets the connection mode parameters.

show interface linecard sce-url-database

Displays the contents of the protected URL database.

You can also use this command to look for a specific URL and display the related flavor ID.

show interface linecard *slot-number* **sce-url-database**

show interface linecard *slot-number* **sce-url-database url** *url*

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
url	Specific URL to look up in the Cisco SCE URL database.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

To display the contents of the protected URL database, it must have all protection removed and no assigned owner. If the database has an assigned owner, it is protected and cannot be displayed.

To display the flavor ID of a specific URL, the user executing the command must have lookup permission for the protected URL database.

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show interface linecard 0 sce-url-database
SCE8000#
```

Related Commands

Command	Description
sce-url-database protection	Configures user authorization for the protected URL database.

show interface linecard sce-url-database protection

Displays the current protected URL database protection settings, including owner username, current protection settings, and whether a key is configured.

show interface linecard *slot-number* **sce-url-database protection**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 sce-url-database protection
Protection Domain BLACK_LIST_DOMAIN Status:
Domain owner:black
Read is allowed to no user
Write is allowed to user black only
Lookup is allowed to no user
Encryption key is not set
SCE8000>
```

Related Commands

Command	Description
show interface linecard sce-url-database	Displays the contents of the protected URL database.

show interface linecard service-bandwidth-prioritization-mode

Displays the currently configured service bandwidth prioritization mode.

show interface linecard *slot-number* **service-bandwidth-prioritization-mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Usage Guidelines

Authorization: viewer

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 service-bandwidth-prioritization-mode
Service bandwidth prioritization mode is: Subscriber Internal
SCE8000>
```

Related Commands

Command	Description
service-bandwidth- prioritization-mode	Defines the service bandwidth prioritization mode.

show interface linecard shutdown

Displays the current shutdown state.

show interface linecard *slot-number* **shutdown**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the linecard shutdown state:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 shutdown
off
SCE8000>
```

show interface linecard silent

Displays the current Linecard Interface silent state. When the silent state is OFF, the line card events reporting function is enabled.

show interface linecard *slot-number* **silent**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the Linecard Interface silent state:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 silent
off
SCE8000>
```

Related Commands

Command	Description
silent	Disables the line card from reporting events.

show interface linecard subscriber

Displays subscribers that meet specified criteria.

show interface linecard *slot-number* **subscriber [amount] [*prefix prefix*] [suffix** *suffix*] **[property** *property-name* **equals | bigger-than | less-than** *property-val*] **[all-names]**

show interface linecard *slot-number* **subscriber name** *subscriber-name*

show interface linecard *slot-number* **subscriber all-names**

show interface linecard *slot-number* **subscriber [amount] {prefix** *prefix* **| suffix** *suffix}*

show interface linecard *slot-number* **subscriber [amount] property** *property-name* **{equals | bigger-than | less-than** *property-val}*

Syntax Description

amount	Displays the number of subscribers meeting the criteria rather than listing actual subscriber names.
slot-number	Number of the identified slot. Enter a value of 0.
prefix	Subscriber name prefix to match.
suffix	Subscriber name suffix to match.
property-name	Name of the subscriber property to match.
property-val	Value of the specified subscriber property. Specify whether to search for values equal to, greater than, or less than this value.
all-names	Displays the names of all subscribers currently in the Cisco SCE platform subscriber database.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	IPv6 support added.

Usage Guidelines

Use this command to display names of subscribers or the number of subscribers meeting one of the following specified criteria:

- Having a value of a subscriber property that is equal to, larger than, or smaller than a specified value
- Having a subscriber name that matches a specific prefix
- Having a subscriber name that matches a specific suffix

Authorization: viewer

Examples

The following example lists the number of subscribers with the prefix “gold” in the subscriber name:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber amount prefix gold
There are 40 subscribers with name prefix 'gold'.
SCE8000>
```

The following example lists all subscribers currently in the Cisco SCE platform subscribers database:

```
SCE8000> enable 5
Password:<cisco>
SCE8000> show interface linecard 0 subscriber all-names
There are 8 subscribers in the database.
john_doe
mary_smith
david_jones
betty_peters
bill_jackson
jane_doe
bob_white
andy_black
SCE8000>
```

Related Commands

Command	Description
subscriber name property name	Assigns a value to the specified property of the specified subscriber.

show interface linecard subscriber aging

Displays the subscriber aging configuration for the specified type of subscriber (anonymous or introduced).

show interface linecard *slot-number* **subscriber aging {anonymous | introduced}**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
anonymous	Displays the subscriber aging configuration for anonymous subscribers.
introduced	Displays the subscriber aging configuration for introduced subscribers.

Command Default

None

Command Modes

User EXEC

Usage Guidelines

Authorization: viewer

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Examples

The following example shows how to display the aging of introduced subscribers:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber aging introduced
Introduced subscriber aging is enabled.
Introduced subscriber aging time is 30 minutes.
SCE8000>
```

Related Commands

Command	Description
subscriber aging	Enables of disables subscriber aging for the specified type of subscribers.

show interface linecard subscriber anonymous

Displays the subscribers in a specified anonymous subscriber group.

show interface linecard *slot-number* **subscriber anonymous**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	IPv6 support added.

Usage Guidelines

Authorization: viewer

Examples

The following example lists the anonymous subscribers currently in the Cisco SCE platform subscribers database:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber anonymous
Anonymous subscribers:
1080:a2b1::0@ipv6a
ff00::0@ipv6a
Total 2 subscribers listed.
```

The following example lists the anonymous subscribers currently in the Cisco SCE platform subscribers database:

```
SCE8000> enable 15
Password: <cisco>
SCE8000> show interface linecard 0 subscriber anonymous-group name ABC
subscriber anonymous-group name "ABC" IP-range 0.0.0.0:0x00000000
```

Related Commands

Command	Description
clear interface linecard subscriber	Clears all anonymous subscribers in the system.

show interface linecard subscriber anonymous-group

Displays the configuration of the specified IPv4 or IPv6 anonymous subscriber group.

show interface linecard *slot-number* **subscriber anonymous-group {name** *group-name* **| all}**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
group-name	Anonymous subscriber group.
all	Displays all existing anonymous subscriber groups.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	IPv6 support added.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the anonymous subscriber groups for IPv4 subscribers:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber anonymous-group all
name   IP range  Template #
----   --------  ----------
Group1  10.10.10.10/99  0
1 anonymous groups are configured
SCE8000>
```

The following example shows how to display the anonymous subscriber groups for IPv6 subscribers:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber anonymous-group all
name                            IP range               Template   Manager #
----                            --------               --------   --------
antest                          fd49:13f5:bef:b2ba::/64   0          SM

Total 1 anonymous groups listed.
```

Related Commands

Command	Description
subscriber anonymous-group name	Assigns the anonymous group to the specified range of IP addresses and optional template or to an SCMP device.

show interface linecard subscriber crypto-params

Displays the encryption parameters of the subscriber ID encryption in redirect URLs.

show interface linecard *slot-number* **subscriber crypto-params**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
4.0.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the output from this command:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber crypto-params
Algorithm used                                  :  AES 128  block cipher algorithm
Mode of operation                               :  Cipher Feedback (CFB) mode
Initialization   Vector (IV)                    :  000102030405060708090A0B0C0D0E0F
Padding                                         :  No padding
Encrypted subscriber ID in redirect URL         :  Encoded as hex string
Keys in redirection sets                        :

        Redirect Set 0    key : 2B7E151628AED2A6ABF7158809CF4F3C

        Redirect Set 1    key : 3B7E151628AED2A6ABF7158809CF4F3C

        Redirect Set 2    key : 4B7E151628AED2A6ABF7158809CF4F3C
```

The following example shows the output from this command if no application is assigned to slot 0:

```
SCE8000#> show interface linecard 0

No application is assigned to slot 0
Silent is off
Configured shutdown is off
Shutdown due to sm-connection-failure is off
Resulting current shutdown state is off
WAP handling is disabled

SCE8000#> show interface linecard 0 crypto-params
```

```
Algorithm used                                  :  AES 128  block cipher algorithm
Mode of operation                               :  Cipher Feedback (CFB) mode
Initialization   Vector (IV)                    :  000102030405060708090A0B0C0D0E0F
Padding                                         :  No padding
Encrypted subscriber ID in redirect URL         :  Encoded as hex string

Keys in redirection sets                        :

        Redirect Set 0    key : Error - No global variables are defined, probabl
y no application is loaded.
Error -
```

Related Commands

Command	Description
show interface linecard 0	Displays the interface linecard details.

show interface linecard subscriber db counters

Displays the subscriber database counters.

show interface linecard *slot-number* **subscriber db counters**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Counter Definitions

The following sections present definitions of the counters displayed in the output of this command.

Current values:

Subscribers: Number of currently existing subscribers (excluding subscribers waiting to be removed).

Introduced subscribers: Number of introduced subscribers.

Anonymous subscribers: Number of anonymous subscribers.

Subscribers with mappings: Number of subscribers with mappings.

Single non-VPN IP mappings: Number of mappings to single IP addresses.

Non-VPN IP Range mappings: Number of mappings to ranges of IP addresses.

VLAN based subscribers (appears only if VLAN-based subscribers are enabled): Number of VLAN based VPNs with subscribers.

Subscribers with open sessions: Number of subscribers with open flows (sessions).

Sessions mapped to the default subscriber: Number of open flows (sessions) related to the default party.

Peak values:

Peak number of subscribers with mappings:

Peak number occurred at:

Peak number cleared at:

Event counters:

Subscriber introduced: Number of login calls resulting in adding a subscriber.

Subscriber pulled: Number of pullResponse calls.

Subscriber aged: Number of aged subscribers.

Pull-request notifications sent: Number of pull-request notifications sent.

State notifications sent: Number of state change notifications sent to peers.

Logout notifications sent: Number of logout events.

Examples

The following example shows the output from this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber db counters
Current values:
===============
Subscribers: 3 used out of 9999 max.
Introduced/Pulled subscribers: 3.
Anonymous subscribers: 0.
Subscribers with mappings: 3 used out of 9999 max.
Single non-VPN IP mappings: 1.
non-VPN IP Range mappings: 1.
Subscribers with open sessions: 0.
Sessions mapped to the default subscriber: 0.
```

Related Commands

Command	Description
clear interface linecard subscriber db counters	Clears the “total” and “maximum” subscribers database counters.

show interface linecard subscriber Gx-pull-request-disable

Displays the status of the Gx pull request.

show interface lineCard subscriber Gx-pull-request-disable

Syntax Description

This command does not have any argument.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the output of the command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard subscriber Gx-pull-request-disable
Gx-pull-request is disabled
```

Related Commands

None

show interface linecard subscriber mapping

Displays subscribers whose mapping meets the specified criteria.

show interface linecard *slot-number* **subscriber mapping [IP** *ip-address/range* **| IPv6** *ipv6-address/prefix-length***] [included-in [IP** *ip-range* **| IPv6** *ipv6-address/prefix-length***] [VPN** ***vpn-name*** **| any-vpn]] [VLAN-id** ***vlan-id*** **] [none]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
ip-range	Specified range of IP addresses.
ipv6-address/prefix-length	Specified IPv6 address and prefix length.
VPN	Specifies the VPN name. This keyword is not available for IPv6 address.
vpn-name	Name of VPN in which to search for the IP address. Displays a subscriber with a private IP mapping.
any-vpn	You can use this keyword instead of specifying a VPN name to match all the mappings within the specified IP ranges, regardless of their VPN, including non-VPN mappings
VLAN-id	The VLAN-id keyword is not available for IPv4 and IPv6.
vlan-id	Specified VLAN tag.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	IPv6 supported added.

Usage Guidelines

Use this command to display subscribers whose mapping meets one of the following specified criteria:

- Matches a specified IP address or range of IP addresses (exact match of the specified range)
- Intersects a specified IP range (not necessarily an exact match of the specified range, but with IP addresses that are within the specified range)
- Matches a specified VLAN tag (This option is provided for backwards compatibility and has certain restrictions. See **Note** below)
- Matches a specified VPN mapping (This option is provided for backwards compatibility and has certain restrictions. See **Note** below)
- Has no mapping

The **any-vpn** keyword is a wildcard that matches all the mappings within the IP ranges, regardless of their VPN, including non-VPN mappings.

Note the specific results of the following options:

- VLAN—if the VLAN tag is configured as a single subscriber (mapped to 0.0.0.0/0 on the VPN that is mapped to the specified VLAN tag) this option displays that subscriber.
- included-in IP (no VPN specified)—matches non-VPN mappings only
- included-in IP VPN—matches private-IP mappings
- IP and VPN- the mapping must match the exact VPN as well as the IP range

Note The VLAN option is provided for backward compatibility. The options require that the entire VLAN or VPN be defined as a single subscriber with an IP address of 0.0.0.0/0@vpn, which corresponds to the VPN and VLAN subscriber definition of pre-3.1.5 versions.

Authorization: viewer

Examples

The following example shows how to list the number of subscribers with no mapping:

```
SCE8000>enable 5
Password:<cisco>
SCE8000> show interface linecard 0 subscriber mapping none
Subscribers with no mappings:
N/A
Total 1 subscribers listed.
SCE8000>
```

The following example shows how to list the number of subscribers with IPv6 mapping:

```
SCE8000>enable 5
Password:<cisco>
SCE8000> show interface linecard 0 subscriber mapping IPv6 1080:a2b1::1e:0 test

Card 0 subscriber mapping included-in IPv6  1080:a2b1::1e:0
Subscribers with IPv6 mappings included in IPv6 range '1080:a2b1::/64':
Subscriber 'test', mapping '1080:a2b1::/64
Total 1 subscribers found, with 1 matching mappings.
```

The following example shows how to list the number of subscribers included-in IPv6 mapping:

```
SCE8000>enable 5
Password:<cisco>
SCE8000> show interface LineCard 0 subscriber mapping included-in IPv6 1080:a2b1::1e:0
There are 1 subscribers with 1 IPv6 mappings included in IPv6 range '1080:a2b1::/64'.
```

show interface linecard subscriber max-subscribers

Displays the maximum number of subscribers. The command also indicates whether the capacity options have been disabled.

show interface linecard *slot-number* **subscriber max-subscribers**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the maximum number of subscribers when the capacity options have not been disabled. (In which case the capacity options determine the maximum number of subscribers.)

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber max-subscribers
Configured actual maximum number of subscribers: 80000.
Note, however, that Subscriber Capacity Options are enabled, and they determine the actual
maximum number of subscribers.
SCE8000>
```

Related Commands

Command	Description
subscriber max-subscribers	Specifies the maximum number of subscribers.
subscriber capacity-options	Overrides the capacity option when loading the SCA BB application.

show interface linecard subscriber name

Displays information about a specified subscriber.

show interface linecard *slot-number* **subscriber name** *name* **[mappings] [counters] [properties] [VAS-servers] [os-info]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Subscriber name.
mappings	Displays subscriber mappings.
counters	Displays OS counters.
properties	Displays values of all subscriber properties.
vas-servers	Display the VAS servers used by the specified subscriber
os-info	Displays the OS detected for the specified subscriber. If the subscriber has multiple IP addresses, OS information is displayed for each IP address.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.0	This command was updated to support IPv6 subscribers.

Usage Guidelines

The following information can be displayed:

- Mappings
- OS counters (bandwidth and current number of flows)
- All values of subscriber properties
- VAS servers used per VAS server group
- OS detected for the subscriber
- All of the above

If no category is specified, a complete listing of property values, mappings, and counters is displayed.

Authorization: viewer

Examples

Example 1

The following example shows how to display subscriber information for the specified subscriber:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber name gold123

Subscriber 'gold123' manager: CLI
Subscriber 'gold123' properties:
downVlinkId=0
monitor=0
new_classification_policy=0
packageId=0
upVlinkId=0
Subscriber 'gold123' read-only properties:
concurrentAttacksNumber=0
PV_internalPackage=0
PV_REP_nonReportedSessionsInTUR=0
P_aggPeriodType=8
P_blockReportCounter=0
P_firstTimeParty=TRUE
P_internalDownVLink=0
P_internalUpVLink=0
P_MibSubCounters16[0..31][0..1]=0*64
P_MibSubCounters32[0..31][0..1]=0*64
P_newParty=TRUE
p_numOfRedirections=0
P_packageCounterIndex=0
P_partyCurrentDownVLink=0
P_partyCurrentPackage=0
P_partyCurrentUpVLink=0
P_serviceReportedBitMap=0
P_spamCounter=0
Subscriber 'gold123' attributes:
Subscriber 'gold123' mappings:
IP 10.0.0.0 - Expiration (sec): Unlimited
IP 20.0.0.0 - Expiration (sec): Unlimited
IP 30.0.0.0 - Expiration (sec): Unlimited
IP 40.0.0.0 - Expiration (sec): Unlimited
IP 50.0.0.0 - Expiration (sec): Unlimited
IP 60.0.0.0 - Expiration (sec): Unlimited
Subscriber 'gold123' has 0 active sessions.
Aging disabled
Subscriber 'gold123' OS-Info:
IP Address:10.0.0.0
OS-INFO:
1. INDEX: 2          OS Name: Linux
2. INDEX: 55        OS Name: SymbianOS
3. INDEX: 65        OS Name: iOS
NAT DETECTED
SCE8000>
```

Example 2

The following example shows how to list the mappings for the specified IPv4 subscriber:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber name gold123 mappings

Subscriber 'gold123' mappings:
IP 10.0.0.0 - Expiration (sec): Unlimited
SCE8000>
```

Example 3

The following example shows how to list the mappings for the specified IPv6 subscriber:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber name test mappings

Subscriber 'test' mappings:
IPv6 1080:a2b1::/64 - Expiration (sec): Unlimited
```

Example 4

The following example shows how to list OS detected for the specified subscriber.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber name gold123 os-info

Subscriber 'gold123' OS-Info:
IP Address:10.0.0.10
OS-INFO:
1. INDEX: 2          OS Name: Linux
2. INDEX: 55        OS Name: SymbianOS
3. INDEX: 65        OS Name: iOS
NAT DETECTED
SCE8000>
```

Related Commands

Command	Description
subscriber name property name	Assigns a value to the specified property of the specified subscriber.
show os-finger-printing subscriber-name	Displays the OS detected for the specified subscriber. If the subscriber has multiple IP addresses, OS information is displayed for each IP address

show interface linecard subscriber name breach-state

Displays all breached buckets for the specified subscriber.

show interface linecard *slot-number* **subscriber name** *name* **breach-state**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the subscriber for which to display the breach-state

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following examples show output from this command.

Example 1

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber name john_doe breach-state
No BREACHED buckets
SCE8000>
```

Example 2

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber name jane_smith breach-state
Bucket 2 is breached.
Bucket 3 is breached.
Bucket 4 is breached.
Bucket 5 is breached
```

Related Commands

Command	Description
show interface linecard subscriber name bucket-state	Displays all buckets used by the specified subscriber

show interface linecard subscriber name bucket-state

Displays all buckets used by the specified subscriber.

show interface linecard *slot-number* **subscriber name** *name* **bucket-state**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the subscriber for which to display the breach-state

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber name john_doe bucket-state
Bucket 1 is used. Status - Not Breached.
Bucket 2 is used. Status - Breached.
Bucket 3 is used. Status - Breached.
Bucket 4 is used. Status - Breached.
Bucket 5 is used. Status - Breached.
Bucket 6 is used. Status - Not Breached.
Bucket 7 is used. Status - Not Breached.
Bucket 8 is used. Status - Not Breached.
Bucket 9 is used. Status - Not Breached.
Bucket 10 is used. Status - Not Breached.
Bucket 11 is used. Status - Not Breached.
Bucket 12 is used. Status - Not Breached.
Bucket 13 is used. Status - Not Breached.
Bucket 14 is used. Status - Not Breached.
Bucket 15 is used. Status - Not Breached.
Bucket 16 is used. Status - Not Breached.
SCE8000>
```

Related Commands

Command	Description
show interface linecard subscriber name breach-state	Displays all breached buckets for the specified subscriber.
show interface linecard subscriber name bucket-state id	Displays specific bucket size, usage and state.

show interface linecard subscriber name bucket-state id

Displays specific bucket size, usage and state.

show interface linecard *slot-number* **subscriber name** *name* **bucket-state id** ***bucket-number***

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the subscriber for which to display the bucket-state
bucket-number	Number of the bucket to display.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.
4.1.0	Updated the Bucket State output field.

Usage Guidelines

If the bucket state is QUOTA_UNLIMITED, the output displays:

```
Bucket state: Unlimited Quota
```

Authorization: viewer

Examples

The following example shows output from this command.

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber name john_doe bucket-state id 3
Bucket type: Sessions
Bucket state: Breached
Bucket size: 2
Bucket usage: 2
SCE8000>
```

Related Commands

Command	Description
show interface linecard subscriber name bucket-state	Displays all buckets used by the specified subscriber.

show interface linecard subscriber properties

Displays all existing subscriber properties.

show interface linecard *slot-number* **subscriber properties**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the subscriber properties:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber properties
Subscriber properties:
"monitor" : int16, minValue=0, maxValue=1.
"new_classification_policy" : Uint16.
"packageId : Uint16, minValue=0, maxValue=4999.
"QpLimit" : int32[18].
"QpSet" : Uint8[18].
Subscriber read-only properties:
"concurrentAttacksNumber" : Uint8.
"PU_QP_QuotaSetCounter" : Uint8[18].
"PU_QP_QuotaUsageCounter" : int32[18].
"PU_REP_nonReportedSessionsInTUR" : int32.
"P_aggPeriodType" :Uint8.
"P_blockReportCounter : int32
"P_endOfAggPeriodTimestamp : Uint32.
"P_firstTimeParty" : bool.
"P_localEndOfAggPeriodTimestamp : Uint32.
"P_mibSubCounters16" : Uint16[36][2].
"P_mibSubCounters32" : Uint32[36][2].
"P_newParty" : bool.
"P_numOfRedirections : Uint8.
"P_partyCurrentPackage : Uint16
"P_partyGoOnlineTime : Uint32
"P_partyMonth : Uint16
SCE8000>
```

show interface linecard subscriber sm-connection-failure

Displays the current state of the SM-SCE platform connection, as well as the configured action to take if that connection fails.

show interface linecard *slot-number* **subscriber sm-connection-failure [timeout]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
timeout	Displays the configured SM-SCE platform link failure timeout value.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the state of the SM-SCE platform connection:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 subscriber subscriber sm-connection-failure
Current SM link state: down.
Please note that this refers to the logical connection,
which means the synchronization with the SM i.e.
There might be cases where the connection at the SM will be up
and down at the SE since synchronization hasn't been completed yet.
Configured action to take when SM link is down: No action
SCE8000>
```

The following example shows how to display the configured timeout value for the SM-SCE platform connection:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 subscriber subscriber sm-connection-failure timeout

SM SCE link failure timeout is: 90
SCE8000>
```

Related Commands

Command	Description
subscriber sm-connection-failure	Configures the behavior of the system if communication fails between the SM and the Cisco SCE platform.

show interface linecard subscriber templates

Displays a specified subscriber template.

show interface linecard *slot-number* **subscriber templates {all | index** *template-number***}**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
template-number	Index number of the template to be displayed.
all	Displays all existing subscriber templates.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display a specified subscriber template:

```
SCE8000> enable 5
SCE8000> show interface linecard 0 subscriber templates index 3

Subscriber template 3 properties
monitor=0
new_classification_policy=0
packageId=0
QpLimit[0..17]=0*17,8
QpSet[0..17]=0*17,1
SCE8000>
Password:<cisco>
```

Related Commands

Command	Description
subscriber template import csv-file	Imports a subscriber template from the specified CSV file, creating a party template.
subscriber template export csv-file	Exports a subscriber template to the specified CSV file, according to the party template.

show interface linecard subscriber TP-IP-range

To view the details of the IPv4 and IPv6 traffic processor IP range configuration, use the **show interface linecard TP-IP-range** command in privileged EXEC mode.

show interface LineCard *slot* **subscriber** {**TP-IP-range [name** *range-name* **| all]**}

Syntax Description

slot	The slot number of the Linecard. Enter 0.
TP-IP-range	Traffic Processor IP range.
range-name	Name of the IP range for which to view the subscriber mapping details.

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the subscriber details in a TP-IP range:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface LineCard 0 subscriber TP-IP-range name test

TP IP range test - IPv6 Range: 1080:a2b1::/48, Target TP: 3.
      Number of Subscribers with mappings in the range: 0.
```

The following example shows how to display the subscriber details in all TP-IP ranges:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface LineCard 0 subscriber TP-IP-range all

Number of TP IP ranges currently configured: 4

TP IP range p2
      IP Range: 0x98144248, Mask: 0x98144258, Target TP: 8.
      Number of Subscribers with mappings in the range: 0.
      Total number of Mappings found in the range: 0.
TP IP range p3
      IP Range: 0x98144248, Mask: 0x98144258, Target TP: 7.
      Number of Subscribers with mappings in the range: 0.
      Total number of Mappings found in the range: 0.
```

```
TP IP range p4
      IPv6 Range: 1080:a2b1::0, Mask: ffff:ffff:ffff::0, Target TP: 3.
      Number of Subscribers with mappings in the range: 0.
      Total number of Mappings found in the range: 0.
TP IP range p1
      IPv6 Range: 1111:a2b1::0, Mask: ffff:ffff:ffff::0, Target TP: 3.
      Number of Subscribers with mappings in the range: 0.
      Total number of Mappings found in the range: 0.

Total number of Subscribers with mappings in all TP IP ranges: 0.
Total number of Mappings in all TP IP ranges: 0.
```

Related Commands

Command	Description
subscriber {TP-IP-range [name range-name | all]}	Provides the details of the TP-IP ranges configured.

show interface linecard subscriber mapping included in TP-IP-range

To view the subscriber mapping details pertaining to a specific IPv4 and IPv6 traffic processor IP range, use the **show interface linecard subscriber mapping included in TP-IP-range** command.

show interface LineCard *slot* **subscriber {mapping included-in TP-IP-range name** *range-name* **| amount mapping included-in TP-IP-range name** *range-name*}

Syntax Description

mapping included-in TP-IP-range	Shows all subscribers with mappings related to a specific IPv4 or IPv6 traffic processor IP range name.
range-name	Name of the IP range for which to view the subscriber mapping details.
amount mapping included-in TP-IP-range	Shows the number of subscribers with mappings related to a specific IPv4 or IPv6 traffic processor IP range name.

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example illustrates how to view the subscriber mapping details pertaining to a specific IP range:

```
SCE8000> enable 15
SCE8000> show interface LineCard 0 subscriber mapping included-in TP-IP-range subu
Subscribers with IP mappings included in TP IP range 'subu' (abcd::/56):
Subscriber 'siva', mapping 'abcd::/56'.
Total 1 subscribers found, with 1 matching mappings.
```

The following example illustrates how to view the subscriber mapping details pertaining to a specific subscriber:

```
SCE8000> enable 15
SCE8000> show interface LineCard 0 subscriber amount mapping included-in TP-IP-range name
siva
Subscriber 'siva', mapping 'abcd::/56'.
Total 1 subscribers found, with 1 matching mappings.
```

show interface linecard subscriber virtual-gi-mode

To display the currently configured status of the virtual Gi mode, use the **show interface linecard subscriber virtual-gi-mode** command in the user EXEC mode.

show interface linecard *slot-number* **subscriber virtual-gi-mode**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.0	This command was introduced.
3.7.2	This command was modified.

Usage Guidelines

Authorization: viewer

Examples

The following is the sample output from the **show interface linecard subscriber virtual-gi-mode** command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface lineCard 0 subscriber virtual-gi-mode

 Virtual Gi Mode is enabled

SCE8000>
```

Related Commands

Command	Description
diameter gx virtual-gi vlan-id	Configures the mapping of VLAN ID and virtual Gi ID.
subscriber virtual-gi-mode	Enables the virtual Gi mode.

show interface linecard tos-marking

Displays the current TOS marking state.

show interface linecard *slot-number* **tos-marking**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Use this command to display the current TOS marking state, including the translation table and the marking mode for each interface (enable or disable).

Authorization: viewer

Examples

The following example shows a sample of the output from this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 tos-marking
ToS Translation Table
=====================
| tos-id | tos-value (DSCP) |
|--------|------------------|
| 1 | 00 (0x00) |
| 2 | 00 (0x00) |
| 3 | 00 (0x00) |
| 4 | 00 (0x00) |
| 5 | 00 (0x00) |
| 6 | 00 (0x00) |
| 7 | 00 (0x00) |
ToS Marking state by egress interface
====================================
| Interface | State |
|-----------|----------|
| 1 | Disabled |
| 2 | Disabled |
| 3 | Disabled |
| 4 | Disabled |
SCE8000>
```

show interface linecard TpReportCounters

To display the following reports, use the **show interface linecard TpReportCounters** command in the user EXEC mode:

- Total Number of Reports generated
- Number of Reports successfully sent to the Control Processor(CP)
- Number of Reports dropped at the corresponding Traffic Processor(TP)

show interface linecard *slot-number* **TpReportCounters**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is admin.

Examples

The following is sample output from the **show interface linecard TpReportCounters** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000>show interface linecard 0 TpReportCounters
--- PPC 0 ------------------------------------------------------------
Total Reports Formed: 0
Reports sent to Control: 0
Reports dropped to Control: 0
--- PPC 1 ------------------------------------------------------------
Total Reports Formed: 424486
Reports sent to Control: 355311
Reports dropped to Control: 69175
--- PPC 2 ------------------------------------------------------------
Total Reports Formed: 477317
Reports sent to Control: 355208
Reports dropped to Control: 122109
--- PPC 3 ------------------------------------------------------------
Total Reports Formed: 371456
Reports sent to Control: 355230
Reports dropped to Control: 16226
--- PPC 4 ------------------------------------------------------------
Total Reports Formed: 424412
```

```
Reports sent to Control: 355235
Reports dropped to Control: 69177
SCE8000>
```

Related Commands

Command	Description
clear interface linecard *slot-number* **TpReportCounters**	Clears the display of total number of RDR reports generated, reports successfully sent to the CP and reports dropped at the corresponding TP.

show interface linecard traffic-counter

Displays the specified traffic counter.

show interface linecard *slot-number* **traffic-counter** {*name* | **all**}

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the traffic counter to be displayed.
all	Displays all traffic counters.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display information for all existing traffic counters:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 traffic-counter all
Counter 'cnt' value: 0 packets. Rules using it: None.
Counter 'cnt2' value: 1284 packets. Rules using it: Rule2.
2 counters listed out of 32 available.
SCE8000>
```

Related Commands

Command	Description
traffic-counter	Defines a new traffic counter.
clear interface linecard traffic-counter	Clears the specified traffic counter.

show interface linecard traffic-rule

To display the specified traffic rule configuration, use the show interface linecard traffic-rule in the user EXEC mode.

show interface linecard *slot-number* **traffic-rule {name** *name* **| tunnel-id-mode | all}**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
name	Name of the traffic rule to be displayed.
tunnel-id-mode	Displays all traffic counter rules.
all	Displays all rules defined in *tunnel-ID mode.*

Command Default

None

Command Modes

User EXEC (>)

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display traffic rule information:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show interface linecard 0 traffic-rule name Rule1

0 rules listed out of 127 available.
SCE8000>
```

Related Commands

Command	Description
traffic-rule ip-addresses	Defines a new traffic rule.
traffic-rule ipv6	Defines a new traffic rule containing IPv6 IP addresses.

show interface linecard vas-traffic-forwarding

Displays information regarding VAS configuration and operational status summary.

show interface linecard *slot-number* vas-traffic-forwarding

show interface linecard *slot-number* vas-traffic-forwarding health-check

show interface linecard *slot-number* vas-traffic-forwarding vas server-group number

show interface linecard *slot-number* vas-traffic-forwarding vas server-group all

show interface linecard *slot-number* vas-traffic-forwarding vas server-id number

show interface linecard *slot-number* vas-traffic-forwarding vas server-id all

show interface linecard *slot-number* vas-traffic-forwarding vas server-id number counters health-check

show interface linecard *slot-number* vas-traffic-forwarding vas server-id all counters health-check

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.
number	ID number of either the specified VAS server or VAS server group for which to display information

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use this command to display the following for VAS traffic-forwarding information:

- Global VAS status summary — VAS mode, the traffic link used
- VAS server groups information summary — operational status, number of configured servers, number of current active servers.

This information may be displayed for a specific server group or all server groups:

- VAS servers information summary — operational status, Health Check operational status, number of subscribers mapped to this server.

This information may be displayed for a specific server or all servers:

- VAS health check counters

Use the basic command with no parameters to display global VAS traffic forwarding information.

Use the **VAS server-group** parameter to display information relating to VAS server groups.

Use the **VAS server-id** parameter to display information relating to individual VAS servers.

Use the **counters health-check** parameter with the **VAS server-id** parameter to display information relating to VAS health check.

Use the **all** keyword with the **VAS server-group** parameter or the **VAS server-id** parameter to display information for all servers or server groups.

Authorization: viewer

Examples

The following examples illustrate how to display VAS traffic forwarding information and provide sample outputs.

EXAMPLE 1

This example shows how to display global VAS status and configuration.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 vas-traffic-forwarding
VAS traffic forwarding is enabled
VAS traffic link configured: Link-1 actual: Link-1
SCE8000>
```

EXAMPLE 2

This example shows how to display operational and configuration information for a specific VAS Server Group.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 vas-traffic-forwarding VAS server-group 0
VAS server group 0:
State: Failure configured servers: 0 active servers: 0
minimum active servers required for Active state: 1 failure action: Pass
SCE8000>
```

EXAMPLE 3

This example shows how to display operational and configuration information for a specific VAS server.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 vas-traffic-forwarding VAS server-id 0
VAS server 0:
configured mode: enable actual mode: enable VLAN: 520 server group: 3
State: UP
Health Check configured mode: enable status: running
Health Check source port: 63140 destination port: 63141
Number of subscribers: 0
SCE8000>
```

EXAMPLE 4

This example shows how to display health check counters for a specific server. (To clear these counters, see **clear interface linecard vas-traffic-forwarding vas counters health-check.**)

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 vas-traffic-forwarding VAS server-id 0 counters
health-check Health Checks statistics for VAS server '0' Upstream Downstream
------------------------------------------------------------------------
Flow Index '0'
-----------------
Total packets sent   : 31028 : 31027 :
Total packets received   : 31028 : 31027 :
Good packets received   : 31028 : 31027 :
Error packets received   :  0 :  0 :
Not handled packets   :  0 :  0 :
Average roundtrip (in millisecond) :  0 :  0 :
Error packets details
--------------------------
Reordered packets    :  0 :  0 :
Bad Length packets   :  0 :  0 :
IP Checksum error packets   :  0 :  0 :
L4 Checksum error packets   :  0 :  0 :
L7 Checksum error packets   :  0 :  0 :
Bad VLAN tag packets   :  0 :  0 :
Bad Device ID packets   :  0 :  0 :
Bad Server ID packets   :  0 :  0 :
SCE8000>
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
clear interface linecard vas-traffic-forwarding vas counters health-check	Clears the VAS health check counters.

show interface linecard virtual-links

Displays the currently configured virtual links.

show interface linecard *slot-number* virtual-links all

show interface linecard *slot-number* virtual-links changed

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.
all	Displays all the currently configured virtual links, with their ID number and direction.
changed	Displays virtual links that have global controllers (GCs) for which the PIR is now different from the values configured for the template GCs through the console.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

You can also use this command to see which virtual links have global controllers whose values have been changed from the original SCA BB configuration.

Authorization: viewer

Examples

The following example shows how to display all existing virtual links:

```
SCE8000>enable 5
password<cisco>
SCE8000>show interface linecard 0 virtual-links all
Virtual Link enabled
Virtual link index 1 direction upstream
Virtual link index 2 direction upstream
Virtual link index 3 direction upstream
Virtual link index 4 direction upstream
Virtual link index 12 direction upstream
Virtual link index 13 direction upstream
Virtual link index 14 direction upstream
Virtual link index 15 direction upstream
```

The following example shows how to display the virtual links that have GCs with values that are different from the original configuration:

```
SCE8000>enable 5
password<cisco>
SCE8000>show interface linecard 0 virtual-links changed
Virtual Link enabled
Virtual link index 3 direction upstream
Global Controller index 0 timebased values = 300,300,300,300
Global Controller index 1 timebased values = 500,500,500,500
Virtual link index 12 direction upstream
Global Controller index 0 timebased values = 700,700,700,700
Virtual link index 14 direction upstream
Global Controller index 0 timebased values = 5500,5500,5500,5500
Global Controller index 1 timebased values = 1500,1500,1500,1500
```

Related Commands

Command	Description
virtual-links index direction	Adds a new virtual link.

show interface linecard vlan

Displays the VLAN tunnel configuration.

show interface linecard *slot-number* **vlan**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the VLAN configuration:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 vlan
VLAN symmetric skip
SCE8000>
```

Related Commands

Command	Description
vlan	Configures the VLAN environment.

show interface linecard vpn

Displays information regarding currently logged-in VPNs.

show interface linecard ***slot-number*** **VPN {name** ***vpn-name*** **| all-names [automatic]}**

Syntax Description

slot-number	The number of the identified slot. Enter a value of 0.
vpn-name	The name of the VPN in which to search for the IP mapping.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Use the **name** option to specify a specific currently logged-in VPN for which to display the details.

Use the **all-names** keyword to display he names of all VPNs that are currently logged into the system.

Use the **automatic** keyword with the **all-names** option to display the names of all VPNs that were created automatically by the Cisco SCE platform.

Authorization: viewer

Examples

The following examples illustrate how to use this command.

EXAMPLE 1

The following example displays names of all currently logged in VPNs.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 VPN all-names
There are 2 VPNs in the data-base:
VPN1
VPN2
```

EXAMPLE 2

The following example illustrates the output of this command for an empty VPN:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 VPN name Vpn2
VPN name: Vpn2
```

```
VPN has no mappings
Number of subscriber mappings: 0
SCE8000>
```

EXAMPLE 3

The following example illustrates the output of this command for a VLAN-based VPN:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 VPN name Vpn3
VPN name: Vpn3
VLAN: 2
Number of subscriber mappings: 0
SCE8000>
```

EXAMPLE 4

The following example illustrates the output of this command for an automatically created VLAN VPN:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 VPN name Vpn2
VPN name: Vpn2
VLAN: 2
Number of subscriber mappings: 1
Automatically created VPN
SCE8000>
```

show interface linecard wap

Displays the current WAP handling state.

show interface linecard *slot-number* **wap**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 0.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface linecard 0 wap
WAP handling is disabled
SCE8000>
```

Related Commands

Command	Description
wap	Enables or disables operating in a WAP environment.

show interface mng

Displays information regarding the specified management interface.

show interface mng {0/1 | 0/2} [auto-fail-over|duplex|ip address|speed]

Syntax Description

This command has no arguments.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Use this command to display the following information for the specified management interface:

- speed
- duplex
- IP address
- auto-fail-over

If no keyword is specified, all information is displayed.

Speed and duplex parameters are specific to the selected interface (port), while other parameters apply to both ports and are displayed by a command to either interface.

Authorization: viewer

Examples

This example shows how to display all information for Management port 1.

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface mng 0/1
ip address: 10.1.6.145
subnet mask: 255.255.0.0
Configured speed: auto, configured duplex: auto
AutoNegotiation is On, link is Up, actual speed: 100, actual duplex: half
SCE8000>
```

Related Commands

Command	Description
interface mng	Enters interface management configuration mode.

show interface tengigabitethernet

Displays the details of a TenGigabitEthernet Interface.

show interface tengigabitethernet *slot-number/bay-number/interface-number* **[counters [***direction***] | queue** *queue-number***]**

Syntax Description

slot-number	Number of the identified slot. Enter a value of 3.
bay-number	Number of the SPA bay or subslot in the Cisco SCE 8000-SIP module. Enter a value ranging from 0 to 3.
interface-number	TenGigabitEthernet interface number. Enter a value of 0.
counters	Displays the values of counters of a TenGigabitEthernet line interface.
direction	(Optional) Displays only those counters of a specific direction. Choose **in** or **out.**
queue	Displays the bandwidth and burst size of a queue in a TenGigabitEthernet line interface.
queue-number	Number of the queue, ranging from 0 to 3.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display information about the TenGigabitEthernet interface:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show interface TenGigabitEthernet 3/2/0
Auto negotiation configured: Disabled
Actual status:
        Link is: ON
        Auto negotiation: Disabled
Bandwidth (L1): 10000000 Kbps, Burst-size: 500000 bytes
Traffic side is "subscriber" (default configuration)
Pseudo IP Address: Not Configured
SCE8000>
```

Related Commands

Command	Description
interface TenGigabitEthernet	Enters interface ten gigabit Ethernet configuration mode.

show inventory

Displays UDI information for the Cisco SCE platform.

show inventory [raw]

Syntax Description

raw	Displays the complete inventory of the Cisco SCE platform. When this keyword is not used, only field replaceable units (FRUs) are displayed.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Use this command to display the following UDI information for the Cisco SCE platform:

- Device name
- Description
- Product identifier
- Version identifier
- Serial number

Authorization: viewer

Examples

The following examples show output from this command.

Example 1

The following example shows how to display the UDI information for the Cisco SCE platform:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show inventory
NAME: "Chassis", DESCR: "Cisco SCE 2020 Service Control Engine, Multi Mode, 4-port GE"
PID: SCE2020-4XGBE-MM , VID: V01, SN: CAT093604K3
SCE8000>
```

Example 2

The following example shows how to display the inventory (UDIs) for the FRUs only:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show inventory
NAME: "SCE8000 Chassis", DESCR: "CISCO7604"
PID: CISCO7604          , VID: V0 , SN: FOX105108X5
NAME: "SCE8000 Service Control Module (SCM) in slot 1", DESCR: "SCE8000-SCM-E"
PID: SCE8000-SCM-E      , VID: V0 , SN: CAT1122584N
NAME: "SCE8000 SPA Interface Processor (SIP) in slot 3", DESCR: "SCE8000-SIP"
PID: SCE8000-SIP        , VID: V0 , SN: CAT1150G07F

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2    , VID: V02, SN: JAE11517RMR

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2    , VID: V02, SN: JAE11496E1P

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2    , VID: V02, SN: JAE11517RIO

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2    , VID: V02, SN: JAE115295HH

NAME: "SCE8000 FAN 1", DESCR: "FAN-MOD-4HS"
PID: FAN-MOD-4HS        , VID: V0 , SN: DCH11013744

NAME: "SCE8000 AC or DC power supply 0", DESCR: "PWR-2700-AC/4"
PID: PWR-2700-AC/4      , VID: V0 , SN: APQ105000MV

NAME: "SCE8000 AC or DC power supply 1", DESCR: "PWR-2700-DC/4"
PID: PWR-2700-AC/4      , VID: V0 , SN: APQ105000MV

NAME: "XFP-10GLR-OC192SR ", DESCR: "XFP-10GLR-OC192SR "
PID: XFP-10GLR-OC192SR , VID: V02, SN: AGA1142N4B7

NAME: "XFP-10GLR-OC192SR ", DESCR: "XFP-10GLR-OC192SR "
PID: XFP-10GLR-OC192SR , VID: V02, SN: AGA1142N4AL

NAME: "XFP-10GLR-OC192SR ", DESCR: "XFP-10GLR-OC192SR "
PID: XFP-10GLR-OC192SR , VID: V02, SN: AGA1141N43R

NAME: "XFP-10GLR-OC192SR ", DESCR: "XFP-10GLR-OC192SR "
PID: XFP-10GLR-OC192SR , VID: V02, SN: AGA1143N4JN
```

Example 3

The following example shows how to display the complete inventory (UDIs) of the Cisco SCE platform:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show inventory raw
PID: CISCO7604          , VID: V0 , SN: FOX105108XB
NAME: "SCE8000 Physical Slot 1", DESCR: "Container SCE8000 Service Control Module (SCM)
slot"
PID: ""                 , VID: "" , SN: ""
NAME: "SCE8000 Physical Slot 2", DESCR: "Container SCE8000 Service Control Module (SCM)
slot"
PID: ""                 , VID: "" , SN: ""

NAME: "SCE8000 Physical Slot 3", DESCR: "Container SCE8000 SPA Interface Processor (SIP)
slot"
PID: ""                 , VID: "" , SN: ""

NAME: "SCE8000 Physical Slot 4", DESCR: "Container SCE8000 Optical Bypass slot"
PID: ""                 , VID: "" , SN: ""
```

```
NAME: "SCE8000 Fan Module", DESCR: "Container SCE8000 Fan Module"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 AC or DC power supply", DESCR: "Container SCE8000 AC or DC power supply"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 Link", DESCR: "Container SCE8000 Link"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 Backplane", DESCR: "Container SCE8000 Backplane "
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 Service Control Module (SCM) in slot 1", DESCR: "SCE8000-SCM-E"
PID: SCE8000-SCM-E     , VID: V0 , SN: CAT1151G00Z

NAME: "SCE8000 SPA Interface Processor (SIP) in slot 3", DESCR: "SCE8000-SIP"
PID: SCE8000-SIP       , VID: V0 , SN: CAT1204G020

NAME: "SCE8000 Link 0", DESCR: "SCE8000 Link"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 Link 1", DESCR: "SCE8000 Link"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 SIP bay 3/0", DESCR: "SCE8000 SIP bay"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 SIP bay 3/1", DESCR: "SCE8000 SIP bay"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 SIP bay 3/2", DESCR: "SCE8000 SIP bay"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 SIP bay 3/3", DESCR: "SCE8000 SIP bay"
PID: ""                , VID: "" , SN: ""

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2   , VID: V02, SN: JAE11485LPJ

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2   , VID: V02, SN: JAE11485L4C

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2   , VID: V02, SN: JAE11485L9V

NAME: "SPA-1X10GE-L-V2", DESCR: "SPA-1X10GE-L-V2"
PID: SPA-1X10GE-L-V2   , VID: V02, SN: JAE11485LAP

NAME: "TenGigabitEthernet3/0/0", DESCR: "SCE8000 SPA port"
PID: ""                , VID: "" , SN: ""

NAME: "TenGigabitEthernet3/1/0", DESCR: "SCE8000 SPA port"
PID: ""                , VID: "" , SN: ""

NAME: "TenGigabitEthernet3/2/0", DESCR: "SCE8000 SPA port"
PID: ""                , VID: "" , SN: ""

NAME: "TenGigabitEthernet3/3/0", DESCR: "SCE8000 SPA port"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 FAN 1", DESCR: "FAN-MOD-4HS"
PID: FAN-MOD-4HS       , VID: V0 , SN: DCH10511402
```

```
NAME: "SCE8000 AC or DC power supply 0", DESCR: "PWR-2700-AC/4"
PID: PWR-2700-AC/4     , VID: V0 , SN: APQ105100F8

NAME: "SCE8000 AC or DC power supply 1", DESCR: "PWR-2700-AC/4"
PID: PWR-2700-AC/4     , VID: V0 , SN: APQ105100F8

NAME: "XFP-10GZR-OC192LR ", DESCR: "XFP-10GZR-OC192LR "
PID: XFP-10GZR-OC192LR , VID: V01, SN: FNS11061SBB

NAME: "XFP-10GZR-OC192LR ", DESCR: "XFP-10GZR-OC192LR "
PID: XFP-10GZR-OC192LR , VID: V01, SN: FNS11021359

NAME: "XFP-10G-MM-SR     ", DESCR: "XFP-10G-MM-SR     "
PID: XFP-10G-MM-SR     , VID: V01, SN: FNS12130MLQ

NAME: "XFP-10G-MM-SR     ", DESCR: "XFP-10G-MM-SR     "
PID: XFP-10G-MM-SR     , VID: V01, SN: FNS12130MHF

NAME: "SCE8000 traffic processor 1", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 2", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 3", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 4", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 5", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 6", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 7", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 8", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 9", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 10", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 11", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""

NAME: "SCE8000 traffic processor 12", DESCR: "SCE8000 traffic processor"
PID: ""                , VID: "" , SN: ""
SCE8000>
```

show ip access-class

Displays the access list defined for global IP access to the Cisco SCE platform. Only IP addresses permitted access according to this access list are allowed access to the system.

show ip access-class

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the IP access class mapping:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip access-class
IP layer is using access-list # 1.
SCE8000>
```

Related Commands

Command	Description
ip access-class	Specifies which access control list (ACL) controls global access to the Cisco SCE platform.

show ip advertising

Displays the status of IP advertising, the configured destination, and the configured interval.

show ip advertising [destination | interval]

Syntax Description

destination	Displays the IP advertising destination.
interval	Displays the interval between **ping** commands.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the IP advertising status and configuration:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip advertising
IP advertising is disabled
IP advertising destination is 10.10.10.10
IP advertising interval is 853 seconds
SCE8000>
```

Related Commands

Command	Description
ip advertising	Enables IP advertising.

show ip default-gateway

Displays the configured default gateway.

show ip default-gateway

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the default gateway:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip default-gateway
Default gateway: 10.1.1.1
SCE8000>
```

Related Commands

Command	Description
ip default-gateway	Configures the default gateway for the Cisco SCE platform.

show ip filter

Displays information about the management interface IP filtering.

show ip filter

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use this command to display the following information for management interface IP filtering.

- IP fragment filter enabled or disabled
- Configured attack threshold (permitted and not-permitted IP addresses)
- Configured end-of-attack threshold (permitted and not-permitted IP addresses)
- Burst size in seconds (permitted and not-permitted IP addresses)

Authorization: viewer

Examples

The following example shows how to display information about management interface IP filtering:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip filter
is fragment filtered : 0
Input Bandwidth  : 0 Kb/sec
Input packets rate : 2 Pkt/sec
Input bandwidth policer : CIR: 20000.00 Kb/sec BTime: 200 msec LP: 100 %
Input packet rate policer : CIR: 5000.00 Pkt/sec BTime: 200 msec LP: 100 %
Permit monitor  :state : no_attack BW: 0
High : CIR: 20000.00 Kb/sec BTime: 10000 msec LP: 100 %
Low : CIR: 20000.00 Kb/sec BTime: 10000 msec LP: 100 %
Denied monitor  :state : no_attack BW: 0
High : CIR: 20000.00 Kb/sec BTime: 10000 msec LP: 100 %
Low : CIR: 20000.00 Kb/sec BTime: 10000 msec LP: 100 %
in_bytes  : 85115466
in_pkt  : 371598
in_pkt_accept : 371598
in_pkt_denied : 0
drop_fragment_cnt : 0
```

```
action_delay_due_bw : 0
action_delay_due_pkt : 0
PERMIT events
meStartAttack : 0
meStopAttack : 0
DENIED events
meStartAttack : 0
SCE8000>
```

show ip radius-client

Displays the RADIUS client general configuration.

show ip radius-client

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show ip radius-client
SCE8000>
```

Related Commands

Command	Description
ip radius-client retry limit	Configures the parameters for retransmitting unacknowledged RADIUS client messages.

show ip route

Displays the entire routing table and the destination of last resort (default gateway). When you use the *prefix* and *mask* arguments, the command displays the routing entries from the subnet specified by the ***prefix*** and ***mask*** **pair**.

show ip route [*prefix mask* **]**

Syntax Description

prefix	Prefix of the routing entries to be included.
mask	Limits the search of routing entries.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the default gateway:

```
SCE8000>enable 5
Password:<cisco>

SCE8000>show ip route gateway of last resort is 10.1.1.1
SCE8000>
```

The following example shows how to retrieve the IP route:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip route 10.1.60.0 255.255.255.0
| prefix        | mask          | next hop     |
|---------------|---------------|--------------|
| 10.1.60.0     | 255.255.255.0 | 10.1.1.5     |
SCE8000>
```

Related Commands

Command	Description
ip route	Adds an IP routing entry to the routing table.

show ip rpc-adapter

Displays the status of the RPC adapter (enabled or disabled) and the configured port.

show ip rpc-adapter [sessions]

Syntax Description

sessions	Displays information about RPC adapter sessions.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the configuration of the RPC adapter:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip rpc-adapter
RPC Server is OFFLINE
RPC Server port is 14374
SCE8000>
```

Related Commands

Command	Description
ip rpc-adapter	Enables the RPC adapter.
ip rpc-adapter port	Defines the RPC adapter port.

show ip ssh

Displays the status of the SSH server, including current SSH sessions.

show ip ssh

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to retrieve the current SSH status:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show ip ssh
SSH server is enabled.
SSHv1 support is enabled
SSH server does not use any access-list.
There are no active SSH sessions.
Management vlan 3 configured for ssh service
SCE8000>
```

Related Commands

Command	Description
ip ssh	Enables the SSH server.

show ip ssh mng-vlan

Displays the management interface VLAN configured for SSH services.

show ip ssh mng-vlan

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display the VLAN configured for SSH services.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show ip ssh mng-vlan
Management vlan 3 assigned to ssh service
SCE8000#
```

Related Commands

Command	Description
ip ssh mng-vlan	Assigns the specified VLAN to SSH services.

show line vty

Displays the Telnet configuration.

show line vty {timeout | access-class in}

Syntax Description

timeout	Displays the timeout configured to the Telnet sessions.
access-class in	Displays the access list configured to the Telnet server that contains the list of addresses that have access to the system.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the access list configured for Telnet lines:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show line vty access-class in
Telnet server is using access-list # 1.
SCE8000>
```

Related Commands

Command	Description
line vty	Enters Line Configuration mode for Telnet lines, which configures all Telnet lines.

show log

Displays the contents of the user log file.

show log

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show log
2006-01-25 00:14:46 | INFO | CPU #000 | User message files were successfully cleared, new
files were opened
2006-01-25 00:23:07 | INFO | CPU #000 | A new password was set for level 10
2006-01-25 00:49:41 | INFO | CPU #000 | System hostname changed to :ecco"
2006-01-25 01:02:41 | INFO | CPU #000 | Time zone set to GMT
2006-01-25 01:06:33 | INFO | CPU #000 | A new password was set for level 15
2006-01-25 01:08:07 | INFO | CPU #000 | A new password was set for level 5
2006-01-25 01:23:07 | INFO | CPU #000 | IP address of slot 0, port 0 set to 10.10.10
2006-01-25 01:56:44 | INFO | CPU #000 | Configuration file '/system/config.txt' was saved
- file size 1200
2006-01-25 05:34:45 | INFO | CPU #000 | A Telnet session from 20.20.20.20 was established
SCE8000>
```

Related Commands

Command	Description
clear logger	Clears the Cisco SCE platform logger (user log files).
logger get user-log file-name	Outputs the current user log to a target file.
more user-log	Displays the user log on the CLI console screen.

show logger device

Displays the configuration of the specified SCE platform logger file. The command also displays the current user log counters.

show logger device {line-attack-file-log | user-file-log [counters | max-file-size | status | nv-counters]}

Syntax Description

logger device	Choose either: • **line-attack-file-log—**Displays status and maximum file size. • **user-file-log—**Displays status and maximum file size. If you specify **user-file-log,** you can also specify one of the following keywords: **counters**, **max-file-size**, **nv-counters**, or **status**.
counters	Displays the user-file-log counters.
max-file-size	Displays the currently configured maximum file size for the user-file-log.
status	Displays the current status of the user-file-log.
nv-counters	Displays the user-file-log nonvolatile counters.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the Cisco SCE platform line-attack-file-log status and configuration:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show logger device Line-Attack-File-Log
Line-Attack-File-Log status: Enabled
Line-Attack-File-Log file size: 1000000
SCE8000>
```

The following example shows the Cisco SCE platform user-file-log counters:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show logger device line-attack-file-log counters
```

```
device User-File-Log counters
Total info messages: 62
Total warning messages: 4
Total error messages: 0
Total fatal messages: 0
Last time these counters were cleared: 02:23:27 GMT TUES January 17 2006
SCE8000>
```

Related Commands

Command	Description
logger device	Disables or enables the specified logger device.
clear logger	Clears the Cisco SCE platform logger (user log files).

show logging

Displays the current configuration of system logging (syslog).

show logging

Syntax Description

This command has no arguments.

Command Default

This command has no default settings.

Command Modes

Privileged Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

This example shows how to display the syslog configuration.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show logging
Syslog logging: enabled (0 messages rate limited)
logging trap severity: level informational
logging rate-limit severity: level warning
logging rate-limit messages: 10 per sec
logging facility: LOCAL7
logging to 10.78.242.134 with port 514
timestamps is uptime
SCE8000#
```

Related Commands

Command	Description
logging on	Enables logging to the syslog server.
logging host	Configures the syslog host.
logging trap	Configures the severity level of the messages to log.
logging facility	Configures the facility types to log.
logging rate-limit	Configures the logging rate limit
show logging counters	Displays the syslog server counters.

show logging counters

Displays the current syslog counters.

show logging counters

Syntax Description

This command has no arguments.

Command Default

This command has no default settings.

Command Modes

Privileged Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

.Authorization: admin

Examples

This example shows how to display the syslog counters.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show logging counters
Logger counters:
Total messages read: 108634
Total messages written: 108634
Total written info messages: 108634
Total written warning messages: 0
Total written error messages: 0
Total written fatal messages: 0
SCE8000#
```

Related Commands

Command	Description
show logging	Displays the syslog server configuration.

show management-agent

Displays information about the management agent.

show management-agent

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to display the following information for the management agent:

- Status (enabled or disabled)
- Access control list number assigned

Authorization: viewer

Examples

The following example shows how to display the information about the management agent:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show management-agent
management agent is enabled.
management agent is active, version: SCE Agent 3.0.3 Build 15
management agent does not use any access-list.
SCE8000>
```

Related Commands

Command	Description
management-agent access-class	Assigns an access class list (ACL) to the management agent, so that access to the management agent is limited to the IP addresses defined in the ACL.
service management-agent	Enables the management agent service.

show management-agent sce-api quota

Displays information about the quota message buffer.

show management-agent sce-api quota

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Use this command to display the following information about the quota message buffer:

- Quota rate control
- Maximum size of the buffer
- Number of messages currently in the buffer that are waiting to be sent to the QM

Authorization: viewer

Examples

The following example shows how to display the information about the quota message buffer:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show management-agent sce-api quota
Quota rate control : 125
Quota max buffer size : 1000
Quota msg in buffer : 0
SCE8000>
```

Related Commands

Command	Description
management-agent sce-api quota-buffer-size	Configures the Cisco SCE to define the size of the message queue that displays the Quota Manager (QM) indication when the QM is down.

show mng-vlan

Displays the IP configuration and configured management service for the specified management VLAN. Use the all keyword to display the IP configuration for all existing management VLANs

show mng-vlan [*vlan-id* **| all]**

Syntax Description

vlan-id	VLAN tag for which to display the IP address configuration (1-4094).
all	Displays configuration for all existing management VLANs.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display the IP address configuration for the specified management VLAN.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show mng-vlan 4
Vlan: 4,           Address: 5.6.7.8,       Mask: 255.255.255.0
services binded: TELNET | SSH | SNMPSCE8000#
SCE8000#
```

This example shows how to display the IP address configuration for all existing management VLANs.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show mng-vlan all
Number of management vlan interfaces configured: 2
Management VLAN Table:
------------------------------------------------------------------------
| VLAN   | Address            | Mask             | Services            |
------------------------------------------------------------------------
|    4   | 5.6.7.8            | 255.255.255.0    | TELNET,SSH,SNMP     |
|    5   | 6.6.7.8            | 255.255.255.0    | -                   |
------------------------------------------------------------------------

SCE8000#
```

Related Commands

Command	Description
mng-vlan	Creates a management VLAN and assigns an IP address.

show mng-vlan service-bind

Displays the management service assigned to the specified management VLAN.

show mng-vlan *vlan-id* **service-bind**

Syntax Description

vlan-id	VLAN tag for which to display the service (1-4094).

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

This example shows how to display the service that the specified management interface VLAN is assigned to.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show mng-vlan 100 service-bind
Vlan: 100,   services binded: TELNET
SCE8000#
```

Related Commandss

Command	Description
show mng-vlan	Displays the IP configuration for the specified management interface VLAN.

show mng-vlan statistics

Displays the traffic statistics for the specified VLAN.

show mng-vlan *vlan-id* **statistics**

Syntax Description

vlan-id	VLAN tag for which to display the statistics (1-4094).

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

This example shows how to display the traffic statistics for the specified management interface VLAN.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show mng-vlan 4 statistics
VLAN Statistics
---------------
VLAN ID 4 :
         total frames received            0
          total bytes received            0
      Broadcast/Multicast Rcvd            0
      total frames transmitted            0
       total bytes transmitted            0
            total headroom inc            0
           total encap on xmit            0
SCE8000#
```

Related Commandss

Command	Description
show mng-vlan	Displays the IP configuration for the specified management interface VLAN.

show os-fingerprinting config

Displays the current OS fingerprinting configuration.

show os-fingerprinting config

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User Admin

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The following information is displayed:

- State of OS fingerprinting (enabled or disabled)
- Sampling period
- Sampling interval
- NAT detection window
- OS flush time
- Signature file
- OS fingerprinting port
- Gx reporting status

Authorization: viewer

Examples

This example shows how to display the current OS fingerprinting configuration.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show os-fingerprinting config

OS Fingerprinting Status: Enabled
Sampling Window: 200 Sec   Interval: 20 mins
NAT Detection Window Status: Disable
OS Flush Time Status: Enable (2 day)
Scan Port Number: 80
Gx Report Status: Disable
Current Signature File: default.fp
SCE8000#
```

Related Commands

Command	Description
os-fingerprinting	Enables OS fingerprinting and loads the *default.fp* signature file.

show os-fingerprinting subscriber-name

Displays the detected operating system for the specified subscriber. If the subscriber includes multiple IP addresses, the operating systems are displayed for all IP addresses.

show os-fingerprinting subscriber-name ***subscriber-name***

Syntax Description

subscriber-name	Name of the subscriber for which to display OS information.

Command Default

This command has no default settings.

Command Modes

User Admin

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display OS information for a specified subscriber.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show os-fingerprinting subscriber-name subscriber1

Subscriber 10.0.0.1@test OS-Info:
IP Address:10.0.0.1
OSINFO - INDEX: 2  OS Name: Linux
OSINFO - INDEX: 65  OS Name: iOS
NAT DETECTED
SCE8000#
```

Related Commands

Command	Description
show interface linecard *slot-number* **subscriber name** *name* **os-info**	Displays the OS detected for the specified subscriber. If the subscriber has multiple IP addresses, OS information is displayed for each IP address.

show os-fingerprinting signature-file

Displays the unencrypted contents of the configured signature file.

show os-fingerprinting signature-file

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User Admin

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display the unencrypted contents of the specified signature file. (Only partial output is displayed.)

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show os-fingerprinting signature-file

OS Fingerprinting Signature File Template
-----------------------------------------
Index: 1 OS Name: AIX
Index: 2 OS Name: Linux
Index: 3 OS Name: FreeBSD
Index: 4 OS Name: NetBSD
Index: 5 OS Name: OpenBSD
Index: 6 OS Name: Solaris
Index: 7 OS Name: SunOS
Index: 8 OS Name: IRIX
Index: 9 OS Name: OpenVMS
Index: 10 OS Name: Tru64
Index: 11 OS Name: MacOS
Index: 12 OS Name: Windows98
SCE8000#
```

Related Commands

Command	Description
os-fingerprinting signature-file	Specifies the OS fingerprinting file.

show party all

To display the contents of static parties in the Cisco SCE platform, use the **show party** command in the privileged EXEC mode.

show party {**all** | **all-names**}

Syntax Description

all	Shows all parties in the data-base.
all-names	Shows all names of all parties in the database.

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following is the sample output from the show party all-names command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party all-names
    There are 2 parties in the data-base:
    N/A
    10.1.5.145@ABC
```

The following is the sample output from the show party all command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party all

There are 2 parties in the data-base:
Party "N/A" is static
Party "N/A" has 0 mappings:
Party "N/A" is managed by N/A
Party "N/A" IP-range-mappings:
No records found.
Party "N/A" IPv6-range-mappings:
No records found.
Party "N/A" has 5 tunables:
downVlinkId=0
monitor=0
```

```
new_classification_policy=0
packageId=0
upVlinkId=0
Party "N/A" has no meters
Aging disabled
Party "test" is static
Party "test" has 1 mappings:
Party "test" is managed by CLI
Party "test" IP-range-mappings:
No records found.
Party "test" IPv6-range-mappings:
1080:a2b1::/64 - Expiration (sec): Unlimited
Party "test" has 5 tunables:
downVlinkId=0
monitor=0
new_classification_policy=0
packageId=0
upVlinkId=0
Party "test" has no meters
Aging disabled
```

show party name

To display the contents of a specified static party in the Cisco SCE platform, use the **show party name command** in the privileged EXEC mode.

show party name *party-name*

Syntax Description

party-name	Name of the static party for which contents are to be displayed.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.
3.8.0	IPv6 support added.

Usage Guidelines

The authorization used is root.

Examples

The following is the sample output from the show party name command for IPv4 party:

```
SCE8000>e nable 15
Password: <cisco>
SCE8000#> show party name [party-name]
Party "[party-name]" is static
Party "[party-name]" has 1 mappings:
Party "[party-name]" is managed by CLI
Party "[party-name]" IP-range-mappings:
1.2.3.4:0xffffffff - Expiration (sec): Unlimited
Party has no context, no variable data shown.
Party has no context, no meter data shown.
Aging disabled
hw-bypass for party "[party-name]" is enabled
SCE8000#>
```

The following is the sample output from the show party name command for IPv6 party:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party name test
Party "test" is static
Party "test" has 1 mappings:
Party "test" is managed by CLI
Party "test" IP-range-mappings:
No records found.
Party "test" IPv6-range-mappings:
```

```
ff00::/64 - Expiration (sec): Unlimited
Party "test" has 25 variables:
concurrentAttacksNumber=0
downVlinkId=0
monitor=0
new_classification_policy=0
packageId=0
PV_internalPackage=0
PV_REP_nonReportedSessionsInTUR=0
P_aggPeriodType=8
P_blockReportCounter=0
P_firstTimeParty=TRUE
P_internalDownVLink=0
P_internalUpVLink=0
P_MibSubCounters16[0..31][0..1]=0*64
P_MibSubCounters32[0..31][0..1]=0*64
P_newParty=TRUE
p_numOfRedirections=0
P_packageCounterIndex=0
P_partyCurrentDownVLink=0
P_partyCurrentPackage=0
P_partyCurrentUpVLink=0
P_serviceReportedBitMap=0
P_spamActivity=0
P_spamCounter=0
P_spamMessageCounter=0
upVlinkId=0
Party "test" has no meters
Aging disabled
```

Related Commands

Command	Description
party name *party-name*	Allows the creation of a specified static party in the Cisco SCE platform.
show party name *party-name* **hw-bypass**	To display the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform, use the **show party name hw-bypass** command in the privileged EXEC mode.

show party name hw-bypass

To display the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform, use the **show party name hw-bypass** command in the privileged EXEC mode.

show party name *party-name* **hw-bypass**

Note The hardware bypass action can be performed only on the static parties created in the hardware bypass mode.

Syntax Description

party-name	Name of the static party for which to display the hardware bypass status.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is the sample output from the **show party name hw-bypass** command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party name [party-name] hw-bypass
SCE8000#> hw-bypass for party "[party-name]" is  disabled
```

Related Commands

Command	Description
party name *party-name* **hw-bypass**	Sets the hardware bypass state for a specified static party in the hardware bypass mode of the Cisco SCE platform.

show party name mappings

To view the details of all IPv4 and IPv6 mappings of a party, use the **show party name** comamnd.

show party name *name* **mappings** { **all** | **ipranges** | **ipv6-ranges**}

Syntax Description

all	Shows all IPv4 and IPv6 mappings.
ip-ranges	Shows the IPv4 range mappings.
ipv6-ranges	Shows IPv6 range mappings.

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following is the sample output from the show party name mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party name 1080:a2b1::0@ipv6a mappings IPv6-ranges

Party "1080:a2b1::0@ipv6a" IPv6-range-mappings:
1080:a2b1::/64 - Expiration (sec): Unlimited
```

The following is the sample output from the show party name mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party name test mappings all

Party "test" has 1 mappings:
Party "test" IP-range-mappings:
10.1.4.145:0xffffffff - Expiration (sec): Unlimited
Party "test" IPv6-range-mappings:
No records found.
```

The following is the sample output from the show party name mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party name test mappings ipv6-addresses
```

```
Party "test" is static
Party "test" has 1 mappings:
Party "test" is managed by CLI
Party "test" IP-range-mappings:
No records found.
Party "test" IPv6-range-mappings:
ff00::/64 - Expiration (sec): Unlimited
Party "test" has 25 variables:
concurrentAttacksNumber=0
downVlinkId=0
monitor=0
new_classification_policy=0
packageId=0
PV_internalPackage=0
PV_REP_nonReportedSessionsInTUR=0
P_aggPeriodType=8
P_blockReportCounter=0
P_firstTimeParty=TRUE
P_internalDownVLink=0
P_internalUpVLink=0
P_MibSubCounters16[0..31][0..1]=0*64
P_MibSubCounters32[0..31][0..1]=0*64
P_newParty=TRUE
p_numOfRedirections=0
P_packageCounterIndex=0
P_partyCurrentDownVLink=0
P_partyCurrentPackage=0
P_partyCurrentUpVLink=0
P_serviceReportedBitMap=0
P_spamActivity=0
P_spamCounter=0
P_spamMessageCounter=0
upVlinkId=0
Party "test" has no meters
Aging disabled
```

show party mapping

To show the details of the party to which an IP address is mapped to, use the **show party mapping** command.

show party mapping {**IPv6-address** *ipv6-address* | **IPv6-address number** | **IPv6-range** *ipv6-address/prefix-length* | **IPv6-range number**}|{IP-address *ipv4-address* | IP-range}

Syntax Description

IPv6-address	Specifies that IPv6 address.
ipv6-address	IPv6 address for which the party mapping is sought.
IPv6-address number	Specifies the IPv6 address number to get the party mapping.
IPv6-range	Specifies the IPv6 range to get the party mapping.
ipv6-address/prefix-length	The IPv6 address range to get the party mapping.
IPv6-range number	Specifies the IPv6 range number to get the party mapping.
IP-address	Specifies that party mapping is for IPv4 address.
ipv4-address	IPv4 address for which the party mapping is sought.
IP-range	pecifies the IPv4 range to get the party mapping.

Command Default

None.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following is the sample output from the show party mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party mapping IPv6-address abcd::0

IPv6 address abcd::0 is mapped to party "siva"
```

The following is the sample output from the show party mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party mapping IPv6-address number
```

```
There are 1 ipv6-address mappings in the data-base.
```

The following is the sample output from the show party mappings IPv6 command:

```
SCE8000> enable 15
Password: <cisco>
SCE8000#> show party mapping IPv6-range bcd::/63

IPv6 range bcd::/63 is not mapped to a party.
```

The following is the sample output from the show party mappings IPv6 command:

```
sSCE8000> enable 15
Password: <cisco>
SCE8000#> show party mapping IPv6-range number

There are 1 ipv6-range mappings in the data-base.
```

show party num-parties-with-active-flows

To show the number of subscribers having only bidirectional flows, use the **show party num-parties-with-active-flows** command in the priviliged EXEC mode.

show party num-parties-with-active-flows

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.5	This command was introduced.

Examples

The following example is a sample output of the **show party num-parties-with-active-flows** command:

```
SCE8000# show party num-parties-with-active-flows

There are 1 parties with active flows
```

show party num-parties-with-open-flows

To show the number of subscribers having unidirectional, bidirectional, and inconclusive flows, use the **show party num-parties-with-open-flows** command in the priviliged EXEC mode.

show party num-parties-with-open-flows

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.5	This command was introduced.

Examples

The following is a sample output of the **show party num-parties-with-open-flows** command:

```
SCE8000# show party num-parties-with-open-flows

There are 2 parties with open flows
```

show pqi file

Displays information, such as installation options, about the specified application file.

show pqi file *filename* **info**

Syntax Description

filename	Filename of the application file.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display application file information:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show pqi file myfile.pqi info
application: sm
description: SCE 8000 sm
target SCE : SCE 8000
module names: sm20001.pm0
SCE8000>
```

Related Commands

Command	Description
pqi install file	Installs the specified pqi file using any specified installation options.

show pqi last-installed

Displays the name of the last pqi file that was installed.

show pqi last-installed

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to find out which pqi file is installed:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show pqi last-installed
package name: SACS BB
package version 3.0.1. build 02
package date: Tue Jun 10 17:27:55 GMT+00:00 2006
operation: Upgrade
SCE8000>
```

Related Commands

Command	Description
pqi rollback file	Reverses an upgrade of the specified pqi file.
pqi uninstall file	Uninstalls the specified pqi file.

show processes cpu

Displays detailed CPU utilization statistics (CPU use per process).

show processes cpu [sorted]

Syntax Description		
	sorted	(Optional) Displays CPU history sorted by percentage of utilization.

Command Default This command has no default settings.

Command Modes User EXEC

Command History This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines Authorization: viewer

Examples The following example illustrates the use of this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show processes cpu
CORE_0 CPU utilization for five seconds: 100%/  0%; one minute:  81%; five minutes:  38%
PID   Runtime(ms)   Invoked      uSecs   5Sec   1Min   5Min TTY Process
    1       78790      6374          0  0.00%  0.00%  0.00%   0 (init)
    2          10         1          0  0.00%  0.00%  0.00%   0 (kthreadd)
    3        5010       501          0  0.00%  0.00%  0.00%   0 (migration/0)
    4          90         9          0  0.00%  0.00%  0.00%   0 (ksoftirqd/0)
    5       63130      6313          0  0.00%  0.00%  0.00%   0 (watchdog/0)
    6        4940       494          0  0.00%  0.00%  0.00%   0 (migration/1)
    7           0         0          0  0.00%  0.00%  0.00%   0 (ksoftirqd/1)
    8       10530      1053          0  0.00%  0.00%  0.00%   0 (watchdog/1)
    9     2606490    207337          0  0.00%  0.02%  0.03%   0 (events/0)
   10     1246730    123793          0  0.00%  0.02%  0.02%   0 (events/1)
   11           0         0          0  0.00%  0.00%  0.00%   0 (khelper)
   12      177810     17781          0  0.00%  0.00%  0.00%   0 (kblockd/0)
   13        8010       801          0  0.00%  0.00%  0.00%   0 (kblockd/1)
   16           0         0          0  0.00%  0.00%  0.00%   0 (kswapd0)
   17           0         0          0  0.00%  0.00%  0.00%   0 (aio/0)
   18           0         0          0  0.00%  0.00%  0.00%   0 (aio/1)
   19           0         0          0  0.00%  0.00%  0.00%   0 (nfsiod)
   20           0         0          0  0.00%  0.00%  0.00%   0 (mtdblockd)
   21     1198570    119326          0  0.00%  0.02%  0.02%   0 (skynet)
   22     7413850    741207          0  0.00%  0.11%  0.10%   0 (hw-mon-regs)
   23      556170     49614          0  0.00%  0.02%  0.01%   0 (scos-dump)
   24      527310     52718          0  0.00%  0.00%  0.01%   0 (wdog-kernel)
```

```
SCE8000>
```

show rdr-formatter

Displays the RDR formatter configuration.

show rdr-formatter

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the configuration of the RDR formatter:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter
Status: enabled
Connection is: down
Forwarding mode: redundancy
Connection table:
-------------------------------------------------------
Collector | Port | Status | Priority per Category: |
IP Address / | |  |-------------------------|
Host-Name | |  | Category1 | Category2 |
-------------------------------------------------------
10.1.1.205 |33000 | Down | 100  | 100 |
10.1.1.206 |33000 | Down | 60  | 60  |
10.12.12.12 |33000 | Down | 40  | 40  |
-------------------------------------------------------
RDR:    queued: 0, sent:4460807,  thrown: 0, format-mismatch:0
UM:     queued: 0, sent: 0,       thrown: 0
Logger: queued: 0, sent: 39,      thrown: 0
Errors: thrown: 0
Last time these counters were cleared: 20:23:05 IST WED March 14 2007
SCE8000>
```

Related Commands

Command	Description
rdr-formatter destination	Configures an RDRv1 or NetFlow destination.
service rdr-formatter	Enables or disables the RDR formatter.

show rdr-formatter buffer-size

Displays the size of the buffer for each RDR formatter category.

show rdr-formatter buffer-size all

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example illustrates the use of this command.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show rdr-formatter buffer-size all
Category #1: 3000000 bytes.
Category #2: 1800000 bytes.
Category #3: 600000 bytes.
Category #4: 600000 bytes.
Total 6000000 bytes used out of 6000128 available (100%).
SCE8000#
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter connection-status

Displays information about the RDR formatter connections.

show rdr-formatter connection-status

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to display the following information about the RDR formatter connections:

- Main connection
- Status—Status and forwarding mode connection table with the following information for each destination:
  - Port
  - Status
  - Priority

Authorization: viewer

Examples

The following example shows how to display the RDR formatter connection status:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter connection-status
Connection is: up
Forwarding mode: redundancy
Connection table:
-------------------------------------------------------
Collector | Port | Status | Priority per Category: |
IP Address / | |  |-------------------------|
Host-Name | |  | Category1 | Category2 |
-------------------------------------------------------
10.1.1.205 |33000 | Up | 100 primary | 100 primary|
10.1.1.206 |33000 | Down | 60  | 60  |
10.12.12.12 |33000 | Up | 40  | 40  |
-------------------------------------------------------
SCE8000>
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter protocol netflowv9 dscp	Displays the DSCP value assigned by NetFlowV9.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter counters

Displays the RDR formatter counters.

show rdr-formatter counters

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the RDR formatter counters:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter counters
RDR: queued: 0, sent:4460807, thrown: 0, format-mismatch:0
UM: queued: 0, sent: 0, thrown: 0
Logger: queued: 0, sent: 39, thrown: 0
Last time these counters were cleared: 20:23:05 IST WED March 14 2007
SCE8000>
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter protocol netflowv9 dscp	Displays the DSCP value assigned by NetFlowV9.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter destination

Displays the RDR formatter destinations, including protocol and transport type.

show rdr-formatter destination

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the configured RDRv1 formatter destinations:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter destination
Destination: 10.56.201.50
Port: 33000
Protocol: RDRv1
Destination: 10.56.204.7
Port: 33000
Protocol: NetflowV9
Destination: 10.56.204.10
Port: 33000
Protocol: RDRv1
SCE8000>
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter protocol netflowv9 dscp	Displays the DSCP value assigned by NetFlowV9.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter enabled

Displays the RDR formatter status (enabled or disabled).

show rdr-formatter enabled

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the status of the RDR formatter (enabled):

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter enabled
Status: enabled
SCE8000>
```

Related Commands

Command	Description
service rdr-formatter	Enables or disables the RDR formatter.
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter forwarding-mode

Displays the configured RDR formatter forwarding mode (redundancy, multicast, or simple load balancing).

show rdr-formatter forwarding-mode

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the RDR formatter forwarding mode:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter forwarding-mode
Forwarding mode: redundancy
SCE8000>
```

Related Commands

Command	Description
rdr-formatter forwarding-mode	Defines the mode in which the RDR formatter will send the RDRs to the destinations.
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter history-size

Displays the configured size of the RDR formatter history buffer.

show rdr-formatter history-size

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the size of the RDR formatter history buffer:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter history-size
History buffer size: 16000 bytes
SCE8000>
```

Related Commands

Command	Description
rdr-formatter history-size	Configures the size of the history buffer (command not supported).
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter protocol netflowv9 dscp

Displays the DSCP value assigned by NetFlowv9.

show rdr-formatter protocol netflowv9 dscp

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.5	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter protocol netflowv9 dscp
Configured DSCP for Netflow traffic: 0
SCE8000>
```

Related Commands

Command	Description
rdr-formatter protocol netflowv9 dscp	Defines the DSCP value to be assigned to the NetFlow packets.
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter rdr-mapping

Displays to which RDR formatter category a specified RDR tag is mapped.

show rdr-formatter rdr-mapping {all | *tag-id}*

Syntax Description

all	Displays all current RDR category mappings.
tag-id	RDR tag.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to use this command and includes partial output:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter rdr-mapping all
Tag  Categories
---  ----------
0xb2d05e01 1
0xb2d05e02 1
0xb2d05e04 1
0xb2d05e05 1
0xf0f0f000 1
0xf0f0f002 1
0xf0f0f004 1
0xf0f0f005 1
0xf0f0f010 1
0xf0f0f016 1
0xf0f0f017 1
0xf0f0f018 1
---More---
SCE8000>
```

Related Commands

Command	Description
rdr-formatter rdr-mapping	Adds a dynamic RDR mapping to a category or removes one from a category.
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter statistics	Displays RDR formatter statistics.

show rdr-formatter statistics

Displays RDR formatter statistics.

show rdr-formatter statistics

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to display the following RDR formatter statistics:

- Rates and counters for each connection
- Protocol and transport attributes for each connection
- For NetFlow destinations only:
  - Number of templates sent
  - Number of records sent

Authorization: viewer

Examples

The following example shows how to display the current RDR statistics:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show rdr-formatter statistics
RDR-formatter statistics:
=========================
Category 1:
sent:  1794517
in-queue:  0
thrown:  0
format-mismatch: 0
unsupported-tags: 1701243
rate:  2 RDRs per second
max-rate:  64 RDRs per second
Category 2:
sent:  12040436
in-queue:  0
thrown:  0
```

```
format-mismatch: 0
unsupported-tags: 0
rate:  12 RDRs per second
max-rate:  453 RDRs per second
Category 3:
sent:  0
in-queue:  0
thrown:  0
format-mismatch: 0
unsupported-tags: 0
rate:  0 RDRs per second
max-rate:  0 RDRs per second
Category 4:
sent:  0
in-queue:  0
thrown:  0
format-mismatch: 0
unsupported-tags: 0
rate:  0 RDRs per second
max-rate:  0 RDRs per second
Destination: 10.56.201.50 Port: 33000 Status: up
Sent: 13835366
Rate: 211 Max: 679
Last connection establishment: 17 hours, 5 minutes, 14 seconds
Destination: 10.56.204.7 Port: 33000 Status: up
Sent: 12134054
Rate: 183 Max: 595
Sent Templates:  13732
Sent Data Records: 12134054
Refresh Timeout (Sec): 5
Last connection establishment: 17 hours, 5 minutes, 15 seconds
SCE8000>
```

Related Commands

Command	Description
show rdr-formatter	Displays the RDR formatter configuration.
show rdr-formatter connection-status	Displays information about the RDR formatter connections.
show rdr-formatter counters	Displays the RDR formatter counters.
show rdr-formatter destination	Displays the RDR formatter destinations, including protocol and transport type.
show rdr-formatter enabled	Displays the RDR formatter status.
show rdr-formatter forwarding-mode	Displays the configured RDR formatter forwarding mode.
show rdr-formatter history-size	Displays the configured size of the RDR formatter history buffer.
show rdr-formatter protocol netflowv9 dscp	Displays the DSCP value assigned by NetFlowV9.
show rdr-formatter rdr-mapping	Displays to which RDR formatter category a specified RDR tag is mapped.

show running-config

To display the contents of the currently running configuration, use the command in the privileged EXEC mode.

show running-config [all-data]

Syntax Description

all-data	Displays default and nondefault settings. Use this keyword to see sample usage for many CLI configuration commands.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows the output from the **show running-config** command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#>show running-config all-data
#This is a general configuration file (running-config).
#Created on 12:06:13  UTC  MON May  11  2009
#cli-type 1
#version 1
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
snmp-server community "public" ro
RDR-formatter forwarding-mode multicast
RDR-formatter destination 10.56.96.26 port 33000 category number 1 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 2 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 3 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 4 priority 100
interface LineCard 0
connection-mode inline on-failure external-bypass
no silent
no shutdown
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
```

```
ip address 10.56.96.46 255.255.252.0
interface TenGigabitEthernet 3/0/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/1/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/2/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/3/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"

exit
ip default-gateway 10.56.96.1
line vty 0 4
exit
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.1.6 build 79"
management-agent property "com.pcube.management.framework.install.activation.date" "Sun
May 11 08:44:04 GMT+00:00 2008"
flow-filter partition name "ignore_filter" first-rule 4 num-rules 32
flow-filter partition name "udpPortsToOpenBySw" first-rule 40 num-rules 21
SCE8000#
```

Related Commands

Command	Description
more	Displays the contents of a file.

show running-config-all

To display the contents of all the currently running configuration files, use the **show running-config-all** command in the privileged EXEC mode.

show running-config-all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **show running-config-all** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#show running-config-all
#This is a general configuration file (running-config).
#Created on 16:19:09  UTC  FRI  November  18  2011
#cli-type 1
#version 1
watchdog software-reset disabled
watchdog hardware-reset disabled
hostname "pqemb154SAV"
ip ssh
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
RDR-formatter destination 10.78.242.172 port 33000 category number 1 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 2 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 3 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 4 priority 100
interface LineCard 0
aggregative-global-controllers
aggregative-global-controller-dynamic mode suspend
aggregative-global-controller-dynamic mode active
connection-mode inline on-failure bypass
no watchdog
```

```
no silent
no shutdown
flow-open-mode enhanced UDP min-packets 2
statistics-logging frequency 5
service-bandwidth-prioritization-mode global
no protocol-pack version
no VAS-traffic-forwarding VAS server-id 0 health-check
no VAS-traffic-forwarding VAS server-id 1 health-check
no VAS-traffic-forwarding VAS server-id 2 health-check
no VAS-traffic-forwarding VAS server-id 3 health-check
no VAS-traffic-forwarding VAS server-id 4 health-check
no VAS-traffic-forwarding VAS server-id 5 health-check
no VAS-traffic-forwarding VAS server-id 6 health-check
no VAS-traffic-forwarding VAS server-id 7 health-check
no VAS-traffic-forwarding VAS server-id 8 health-check
no VAS-traffic-forwarding VAS server-id 9 health-check
no VAS-traffic-forwarding VAS server-id 10 health-check
no VAS-traffic-forwarding VAS server-id 11 health-check
no VAS-traffic-forwarding VAS server-id 12 health-check
no VAS-traffic-forwarding VAS server-id 13 health-check
no VAS-traffic-forwarding VAS server-id 14 health-check
no VAS-traffic-forwarding VAS server-id 15 health-check
no VAS-traffic-forwarding VAS server-id 16 health-check
no VAS-traffic-forwarding VAS server-id 17 health-check
no VAS-traffic-forwarding VAS server-id 18 health-check
no VAS-traffic-forwarding VAS server-id 19 health-check
no VAS-traffic-forwarding VAS server-id 20 health-check
no VAS-traffic-forwarding VAS server-id 21 health-check
no VAS-traffic-forwarding VAS server-id 22 health-check
no VAS-traffic-forwarding VAS server-id 23 health-check
no VAS-traffic-forwarding VAS server-id 24 health-check
no VAS-traffic-forwarding VAS server-id 25 health-check
no VAS-traffic-forwarding VAS server-id 26 health-check
no VAS-traffic-forwarding VAS server-id 27 health-check
no VAS-traffic-forwarding VAS server-id 28 health-check
no VAS-traffic-forwarding VAS server-id 29 health-check
no VAS-traffic-forwarding VAS server-id 30 health-check
no VAS-traffic-forwarding VAS server-id 31 health-check
no VAS-traffic-forwarding VAS server-id 32 health-check
no VAS-traffic-forwarding VAS server-id 33 health-check
no VAS-traffic-forwarding VAS server-id 34 health-check
no VAS-traffic-forwarding VAS server-id 35 health-check
no VAS-traffic-forwarding VAS server-id 36 health-check
no VAS-traffic-forwarding VAS server-id 37 health-check
no VAS-traffic-forwarding VAS server-id 38 health-check
no VAS-traffic-forwarding VAS server-id 39 health-check
no VAS-traffic-forwarding VAS server-id 40 health-check
no VAS-traffic-forwarding VAS server-id 41 health-check
no VAS-traffic-forwarding VAS server-id 42 health-check
no VAS-traffic-forwarding VAS server-id 43 health-check
no VAS-traffic-forwarding VAS server-id 44 health-check
no VAS-traffic-forwarding VAS server-id 45 health-check
no VAS-traffic-forwarding VAS server-id 46 health-check
no VAS-traffic-forwarding VAS server-id 47 health-check
no VAS-traffic-forwarding VAS server-id 48 health-check
no VAS-traffic-forwarding VAS server-id 49 health-check
no VAS-traffic-forwarding VAS server-id 50 health-check
no VAS-traffic-forwarding VAS server-id 51 health-check
no VAS-traffic-forwarding VAS server-id 52 health-check
no VAS-traffic-forwarding VAS server-id 53 health-check
no VAS-traffic-forwarding VAS server-id 54 health-check
no VAS-traffic-forwarding VAS server-id 55 health-check
no VAS-traffic-forwarding VAS server-id 56 health-check
no VAS-traffic-forwarding VAS server-id 57 health-check
```

```
no VAS-traffic-forwarding VAS server-id 58 health-check
no VAS-traffic-forwarding VAS server-id 59 health-check
no VAS-traffic-forwarding VAS server-id 60 health-check
no VAS-traffic-forwarding VAS server-id 61 health-check
no VAS-traffic-forwarding VAS server-id 62 health-check
no VAS-traffic-forwarding VAS server-id 63 health-check
no sanity-checks test-packets
no sanity-checks attack-filter
no sanity-checks event-counters Flow-ID-Allocations-Failed
no l7-filter
no attack-filter protocol TCP
no attack-filter protocol UDP
no attack-filter protocol ICMP attack-direction single-side-both
no attack-filter protocol other attack-direction single-side-both
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 1/2
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 3/0/0
auto-negotiate
interface GigabitEthernet 3/1/0
auto-negotiate
interface GigabitEthernet 3/2/0
auto-negotiate
interface GigabitEthernet 3/3/0
auto-negotiate
exit
ip default-gateway 10.78.242.129
line vty 0 4
no timeout
exit
interface Mng 0/1
no auto-fail-over
exit
interface Mng 0/2
active-port
exit
sub-attribute add-attribute Called-Station-ID
sub-attribute add-attribute 3GPP-Charging-Characteristics
sub-attribute add-attribute 3GPP-GPRS-Negotiated-QoS-Profile
sub-attribute add-attribute 3GPP-RAT-Type
sub-attribute add-attribute 3GPP-SGSN-Address-Code-6
sub-attribute add-attribute 3GPP-SGSN-Address
sub-attribute add-attribute 3GPP-SGSN-MCC-MNC
cdp mode bypass
service debug-shell
service debug-telnet
service debug-ssh
debug const-db name lcConstDb.rucSched.shutWaitBeforeShuttingRucs value 1000
debug const-db name lcConstDb.rucSched.shutWaitAfterShuttingRucs value 1000
debug const-db name lcConstDb.traverser.maxClsFcIds value 3312
debug const-db name lcConstDb.traverser.clsFcIdsThreshold value 3248
debug const-db name lcConstDb.sanityChecks.enableTestPackets value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsEF value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsBE value false
debug const-db name lcConstDb.attackFilter.maxTotalPacketsIncrease value 1e+10
debug const-db name commonConstDb.sli.minSupportedObjectFormat value 13
diameter
no subscriber LEG dhcp-lease-query
subscriber LEG dhcp-lease-query servers 127.0.0.1
logger device SCE-agent-Statistics-Log max-file-size 204800
```

```
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.7.0 build 514"
management-agent property "com.pcube.management.framework.install.activation.date" "Wed
Nov 16 11:57:15 UTC 2011"
ip ftp-server
ip http-tech-if
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration

#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 16:19:29  UTC  FRI  November  18  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "party-name"
party mapping ip-address 1.2.3.4 name party-name
party name  party-name hw-bypass
SCE8000#
```

Related Commands

Command	Description
more running-config-all	Displays the contents of all the currently running configuration files.
show running-config	Displays the contents of the currently running configuration.
show running-config-application	Displays the contents of the currently running configuration application in the Cisco SCE platform.
show running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform.

show running-config-application

To display the contents of the currently running configuration application in the Cisco SCE platform, use the **show running-config-application** command in the privileged EXEC mode.

show running-config-application

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The followingis sample output from the show running-config-application command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show running-config-application
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration
#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
SCE8000#>
```

Related Commands

Command	Description
more running-config-application	Displays the contents of the currently running configuration application in the Cisco SCE platform.
show running-config-all	Displays the contents of all the currently running configuration files.

show running-config-party-db

To display the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform, use the **show running-config-party-db** command in the privileged EXEC mode.

show running-config-party-db

Syntax Description

This command has no arguments or keywords.

Command Default

Default Party.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **show running-config-party-db** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show running-config-party-db
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:02  UTC  TUE  July  12  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
more running-config-party-db	Displays the contents of the currently running party database configuration for the static parties that are configured in the Cisco SCE platform.
more running-config-all	Displays the contents of all the currently running configuration files.
party name *party-name* **hw-bypass**	Sets the hardware bypass state for a specified static party in the hardware bypass mode of the Cisco SCE platform.
show party name *party-name*	Displays the contents of a specified static party in the Cisco SCE platform.
show party name *party-name* **hw-bypass**	Displays the hardware bypass status of a specified static party in the hardware bypass mode of the Cisco SCE platform.
show running-config-all	Displays the contents of all the currently running configuration files.

show scmp

Displays the SCMP (ISG) general configuration and status.

show scmp {all | name *name***} [counters]**

Syntax Description

all	Displays the configuration for all destinations.
name	Displays the configuration or counters for the specified destination (SCMP peer device).
counters	Displays the statistics for each destination. You must specify either the destination, using the **name** keyword, or **all**.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.5	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to display the SCMP counters for a specified destination:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show scmp name scmp_peer1 counters
SCMP Connection 'scmp_peer1' counters:
Total messages sent:  72
Total messages received: 72
Establish requests sent: 1
Establish replies received: 1
Accounting requests sent: 20
Accounting replies received: 20
Subscriber queries sent: 0
Subscriber query response recv: 0
Request retry exceeded:  0
Requests replied with errors: 0
Subscriber requests received: 50
Subscriber responses sent: 50
Failed Requests:  0
Keep-alive sent:  1
Keep-alive received:  1
SCE8000>
```

Related Commands

Command	Description
clear scmp name counters	Clears the counters for the specified SCMP peer device.
scmp	Enables the Service Control Management Protocol functionality.

show snmp

Displays the SNMP configuration and counters.

show snmp

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the SNMP server configuration and statistics:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp
SNMP server status: Enabled
Location: London_Office Room301
Contact: JDoe@hello.com
Authentication Trap Status: Enabled
Management vlan 4 assigned to snmp service
Communities:
------------
Community: public, Access Authorization: RO, Access List Index: 1
Trap managers:
------------
Trap host: 10.1.1.205, community: public, version: SNMPv2c
SNMP stats:
29 SNMP packets input
0 Bad SNMP version errors
29 Unknown community name
0 Illegal operation for community name supplied
0 Encoding errors
0 Number of requested variables
0 Number of altered variables
0 Get-request PDUs
0 Get-next PDUs
0 Set-request PDUs
29 SNMP packets output
0 Too big errors
0 No such name errors
```

```
0 Bad values errors
0 General errors
0 Response PDUs
29 Trap PDUs
SCE8000>
```

Related Commands

Command	Description
show snmp community	Displays configured SNMP communities.
show snmp contact	Displays the configured MIB-II variable sysContact.
show snmp enabled	Displays the SNMP agent status.
show snmp host	Displays the destination hosts for SNMP traps.
show snmp location	Displays the configured MIB-II variable sysLocation.

show snmp accelerate-query

To view the linksServiceUsage queries configured for SNMP walk acceleration, use the **show snmp accelerate-query** command.

show snmp accelerate-query

Syntax Description

This command does not contain syntax or keywords.

Command Default

None.

Command Modes

EXEC (#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: Viewer

Examples

The following example shows the accelerated SNMP link Usage Queries. Only linkUsageUpVolume is accelerated in this case.

```
SCE8000#> show snmp accelerate-query

acceleration for linkServiceUsageUpVolume query is enabled
SCE8000#>
```

Related Commands

Command	Description
snmp-server accelerate-query	Enables or disables the SNMP walk acceleration for linkServiceUsage queries.

show snmp community

Displays configured communities.

show snmp community

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the SNMP manager communities:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp community
Community: public, Access Authorization: RO,
Access List Index: 1
SCE8000>
```

Related Commands

Command	Description
snmp-server community	Sets a community string.
show snmp	Displays the SNMP configuration and counters.

show snmp contact

Displays the configured MIB-II variable sysContact.

show snmp contact

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the system contact:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp contact
Contact: Brenda@mycompany.com
SCE8000>
```

Related Commands

Command	Description
snmp-server contact	Sets the MIB-II variable system contact.
show snmp	Displays the SNMP configuration and counters.

show snmp enabled

Displays the SNMP agent status (enabled or disabled).

show snmp enabled

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current status of the SNMP server (enabled):

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp enabled
SNMP server status: Enabled
SCE8000>
```

Related Commands

Command	Description
snmp-server	Enables the SNMP agent.
show snmp	Displays the SNMP configuration and counters.

show snmp engine-id

Displays the engine ID of the SNMP agent or device.

show snmp engine-id

Syntax Description

This command has no arguments or keywords.

Command Default

None.

Command Modes

User EXEC.

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

The engine ID may be used to configure the users on the SNMP manager for receiving the traps.

Authorization: viewer

Examples

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show snmp engine-id
SCE8000(config)#>
```

show snmp group

Displays information on the SNMP groups configured on a device; including the users configured in that group.

show snmp group {all-groups | group-name *group name***}**

Syntax Description

all-groups	Shows all SNMP groups configured on a device.
group-name	Shows the details of a specific SNMP group.
group name	Name of the group.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

Authorization: user

Examples

```
SCE8000#> show snmp group all-Groups

List of configured Groups:-
Group Name: ipGroup :
Security Level: authNoPriv
read view: IPView
write view: none-view

Group Name: ifGroup :
Security Level: authPriv
read view: IfView
write view: IfView

Group Name: ifGroupReadOnly :
Security Level: noAuthNoPriv
read view: IfView
write view: none-view

SCE8000#> show snmp group group-name ifGroup

Group Name: ifGroup :
Security Level: authPriv
read view: IfView
write view: IfView
```

```
Users belonging to this group:
ifUserRW
```

show snmp host

Displays the destination hosts for SNMP traps.

show snmp host

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the destination hosts for SNMP traps:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp host
Trap host: 10.1.1.205, community: public, version: SNMPv2c
SCE8000>
```

Related Commands

Command	Description
snmp-server host	Sets destination hosts for SNMP traps.
show snmp	Displays the SNMP configuration and counters.

show snmp location

Displays the configured MIB-II variable sysLocation.

show snmp location

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the system location:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp location
Location: London_Office
SCE8000>
```

Related Commands

Command	Description
snmp-server location	Assigns a name to the Cisco SCE platform location and sets the MIB-II variable sysLocation.
show snmp	Displays the SNMP configuration and counters.

show snmp mib

Displays MIB variables.

show snmp mib *mib variables*

Syntax Description

mib	Name of the MIB to display.
variables	Name of the specific MIB group or object to display.

Command Default

None

Command Modes

SCE 8000 uses MIBs from three sources:

- Cisco Service Control MIBs
- standard MIBs
- general Cisco MIBs

Table 2-13 and Table 2-14 describe these MIB files.

Note All Cisco MIBs and some of the common standard MIBs can be obtained at the following URL: http://tools.cisco.com/Support/SNMP/do/BrowseMIB.do?local=en&step=2

Note For information about the differences between the MIBs used by the Cisco SCE 8000, see the *Cisco Service Control MIBs* appendix in the Cisco SCE*8000 Software Configuration Guide*.

Table 2-13 CISCO-SERVICE_CONTROL MIBS

MIB	Description
CISCO-SERVICE-CONTROL-LINK-MIB.my	Provides information about the status and configuration of links used by service control entities.
CISCO-SERVICE-CONTROL-RDR-MIB.my	Defines objects describing statistics and configuration relating to the Raw Data Record Formatter running on a service control entity.
CISCO-SERVICE-CONTROL-SUBSCRIBERS-MIB.my	Provides global and specific information on subscribers managed by a service control entity
CISCO-SERVICE-CONTROL-TP-STATS-MIB.my	Provides information and statistics on the traffic processor(s) of a service control entity.

Table 2-13 CISCO-SERVICE_CONTROL MIBS (continued)

MIB	Description
CISCO-SERVICE-CONTROL-ATTACK-MIB.my	Provides information related to different types of attacks detected on the network entities and corresponding actions taken in the monitored network
CISCO-SERVICE-CONTROLLER-MIB.my	Provides information about service control traffic controllers.

Table 2-14 Standard and Cisco MIBs used tby the Cisco SCE 8000

MIBs	Description
CISCO-SMI.my	Defines Cisco enterprise tree structure
CISCO-TC.my	Contains Textual Conventions needed in some MIBs
CISCO-CONFIG-COPY-MIB.my	Facilitates writing of configuration files
CISCO-ENTITY-ALARM-MIB.my	Defines the managed objects that support the monitoring of alarms generated by physical entities contained by the system
CISCO-ENTITY-FRU-CONTROL-MIB.my	Monitor s and configures operational status of Field Replaceable Units
CISCO-ENTITY-REDUNDANCY-MIB.my	Supports configuration, control and monitoring of redundancy protection for various kinds of components on Cisco managed devices.
CISCO-ENTITY-REDUNDANCY-TC-MIB.my	Defines the textual conventions used within Cisco Entity Redundancy MIBs
CISCO-ENTITY-SENSOR-MIB.my	Monitors the values of sensors in the Entity-MIB
CISCO-PROCESS-MIB.my	Provides overall information about the CPU load.
CISCO-QUEUE-MIB.my	Manages interface queuing in Cisco devices.
CISCO-SECURE-SHELL-MIB.my	Displays and configures accounting and Secure Shell (SSH) related features in a device.
CISCO-SYSLOG-EXT-MIB.my	Extends the Cisco Syslog MIB and provides network management support to handle and process Syslog messages as device events
CISCO-SYSLOG-EVENT-EXT-MIB.my	Extends the Cisco Syslog.MIB and provides network management support to handle and process Syslog messages as device events
CISCO-SYSLOG-MIB.my	Describes and stores the system messages generated by the IOS and any other OS which supports syslogs.
CISCO-TELNET-SERVER-MIB.my	Displays and configures Telnet related features in a device.
ENTITY-MIB.my	Represents multiple logical entities supported by a single SNMP agent
ENTITY-STATE-MIB.my	Defines a state extension to the Entity MIB

Table 2-14 Standard and Cisco MIBs used tby the Cisco SCE 8000 (continued)

MIBs	Description
ENTITY-STATE-TC-MIB.my	Defines state textual conventions.
HOST-RESOURCES-MIB.my	Manages host systems.

Note Only OIDs that are mapped to former pcube MIB OIDs are in use in the standard and Cisco MIBs as listed in this table.

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows the MIB-II system group:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp mib mib-ii system
sysDescr.0 = CiSco Service Engineering,
SW version: Control Card Version 1.30 build 29,
HW version: SCE GE "RevE"
sysObjectID.0 = 1.3.6.1.4.1.5655.1.2
sysUpTime.0 = 14 hours, 25 minutes, 59 seconds
sysContact.0 = Brenda@mycompany.com
sysName.0 = SCE sysLocation.0 = London_Office
sysServices.0 = 2
SCE8000>
```

Related Commands

Command	Description
show snmp traps	**Displays the status of SNMP trap generation status (enabled or disabled).**

show snmp traps

Displays the status of SNMP trap generation status (enabled or disabled).

show snmp traps

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the status of the SNMP server traps:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show snmp traps
Authentication-failure trap status: Disabled
operational-status traps status: Enabled
system-reset trap status:  Enabled
chassis traps status:  Enabled
RDR-formatter traps status:  Enabled
Telnet traps status:  Enabled
logger traps status:  Enabled
SNTP traps status:   Enabled
link-bypass traps status:  Enabled
subscriber traps status:  Enabled
pull-request-failure traps status:  Disabled
attack traps status:  Enabled
port-operational-status traps status:  Enable
SCE8000>
```

Related Commands

Command	Description
snmp-server enable traps	Enables or disables SNMP traps.

show snmp user

Shows SNMP users on a device.

show snmp user {all-users | user-name *user name*}

Syntax Description

all-users	Shows all SNMP users configured on a device.
user-name	Shows the details of a specific SNMP user.
user name	Name of the user.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

Authorization: user

Examples

```
SCE8000#> show snmp user all-Users

User: ipUser :
Group Name: ipGroup
Authentication Protocol: MD5
Privacy protocol: NONE

User: ipUser01 :
Group Name: ipGroup
Authentication Protocol: SHA
Privacy protocol: NONE

User: ifUserNoAuth :
Group Name: ifGroupReadOnly
Authentication Protocol: NONE
Privacy protocol: NONE

User: ifUserRW :
Group Name: ifGroup
Authentication Protocol: SHA
Privacy protocol: AES

SCE8000#> show snmp user user-name ipUser

User: ipUser :
Group Name: ipGroup
```

```
Authentication Protocol: MD5
Privacy protocol: NONE
```

show snmp view

Shows details of SNMP views configured on a device.

show snmp view {all-views | view-name *view name***}**

Syntax Description

all-views	Shows all SNMP views configured on a device.
view-name	Shows the details of a specific SNMP view.
view name	Name of the view.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

```
SCE8000#> show snmp view all-Views

List of configured Views:-
View: full-view - include OID: 1
View: none-view - exclude OID: 1
View: IPView - include OID: 1.3.6.1.2.1.4
View: IfView - include OID: 1.3.6.1.2.1.2.2

SCE8000#> show snmp view view-name IPView

View: IPView -
include OID: 1.3.6.1.2.1.4
```

show sntp

Displays the SNTP configuration and update statistics.

show sntp

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display statistics from the SNTP clients:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show sntp
SNTP broadcast client: disabled
last update time: not available
SNTP uni-cast client: enabled
there is one server:
1: 128.182.58.100
last update time: June 10 2009, 14:06:41
update interval: 100 seconds
SCE8000>
```

Related Commands

Command	Description
sntp server	Enables the SNTP unicast client to query the specified SNTP server.
sntp broadcast client	Enables the SNTP multicast client to accept SNTP broadcasts from any SNTP server.
sntp update-interval	Defines the interval between SNTP unicast update queries.

show startup-config

Display the contents of the startup configuration file.

show startup-config

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to compare the configuration used by the Cisco SCE platform at boot time with the current configuration to make sure that you approve of all the differences before you save the configuration with the **copy running-config startup-config** command.

Authorization: admin

Examples

The following example shows sample output from this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#show startup-config
#Created on 12:06:13  UTC  SUN  May  11  2008
#cli-type 1
#version 1
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
snmp-server community "public" ro
RDR-formatter forwarding-mode multicast
RDR-formatter destination 10.56.96.26 port 33000 category number 1 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 2 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 3 priority 100
RDR-formatter destination 10.56.96.26 port 33000 category number 4 priority 100
interface LineCard 0
connection-mode inline on-failure external-bypass
no silent
no shutdown
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
```

```
ip address 10.56.96.46 255.255.252.0
interface TenGigabitEthernet 3/0/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/1/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/2/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"
interface TenGigabitEthernet 3/3/0
bandwidth 10000000 burst-size 50000
global-controller 0 name "Default Global Controller"

exit
ip default-gateway 10.56.96.1
line vty 0 4
exit
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.1.6 build 79"
management-agent property "com.pcube.management.framework.install.activation.date" "Sun
May 11 08:44:04 GMT+00:00 2008"
flow-filter partition name "ignore_filter" first-rule 4 num-rules 32
flow-filter partition name "udpPortsToOpenBySw" first-rule 40 num-rules 21

SCE8000#
```

Related Commands

Command	Description
more	Displays the contents of a file.

show startup-config-all

To display the contents of all the startup configuration files, use the **show startup-config-all** command in the privileged EXEC mode.

show startup-config-all

Note The configuration file contents will be displayed only if the corresponding startup configuration files are copied from the running configuration.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The followingis sample output from the show startup-config-all command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#show startup-config-all
#This is a general configuration file (running-config).
#Created on 16:19:09  UTC  FRI  November  18  2011
#cli-type 1
#version 1
watchdog software-reset disabled
watchdog hardware-reset disabled
hostname "pqemb154SAV"
ip ssh
no management-agent notifications notification-list
1417,1418,804,815,1404,1405,1406,1407,1408,400
no management-agent notifications notification-list
402,421,440,441,444,445,446,450,437,457
no management-agent notifications notification-list 3593,3594,3595,10040
RDR-formatter destination 10.78.242.172 port 33000 category number 1 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 2 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 3 priority 100
RDR-formatter destination 10.78.242.172 port 33000 category number 4 priority 100
interface LineCard 0
```

```
aggregative-global-controllers
aggregative-global-controller-dynamic mode suspend
aggregative-global-controller-dynamic mode active
connection-mode inline on-failure bypass
no watchdog
no silent
no shutdown
flow-open-mode enhanced UDP min-packets 2
statistics-logging frequency 5
service-bandwidth-prioritization-mode global
no protocol-pack version
no VAS-traffic-forwarding VAS server-id 0 health-check
no VAS-traffic-forwarding VAS server-id 1 health-check
no VAS-traffic-forwarding VAS server-id 2 health-check
no VAS-traffic-forwarding VAS server-id 3 health-check
no VAS-traffic-forwarding VAS server-id 4 health-check
no VAS-traffic-forwarding VAS server-id 5 health-check
no VAS-traffic-forwarding VAS server-id 6 health-check
no VAS-traffic-forwarding VAS server-id 7 health-check
no VAS-traffic-forwarding VAS server-id 8 health-check
no VAS-traffic-forwarding VAS server-id 9 health-check
no VAS-traffic-forwarding VAS server-id 10 health-check
no VAS-traffic-forwarding VAS server-id 11 health-check
no VAS-traffic-forwarding VAS server-id 12 health-check
no VAS-traffic-forwarding VAS server-id 13 health-check
no VAS-traffic-forwarding VAS server-id 14 health-check
no VAS-traffic-forwarding VAS server-id 15 health-check
no VAS-traffic-forwarding VAS server-id 16 health-check
no VAS-traffic-forwarding VAS server-id 17 health-check
no VAS-traffic-forwarding VAS server-id 18 health-check
no VAS-traffic-forwarding VAS server-id 19 health-check
no VAS-traffic-forwarding VAS server-id 20 health-check
no VAS-traffic-forwarding VAS server-id 21 health-check
no VAS-traffic-forwarding VAS server-id 22 health-check
no VAS-traffic-forwarding VAS server-id 23 health-check
no VAS-traffic-forwarding VAS server-id 24 health-check
no VAS-traffic-forwarding VAS server-id 25 health-check
no VAS-traffic-forwarding VAS server-id 26 health-check
no VAS-traffic-forwarding VAS server-id 27 health-check
no VAS-traffic-forwarding VAS server-id 28 health-check
no VAS-traffic-forwarding VAS server-id 29 health-check
no VAS-traffic-forwarding VAS server-id 30 health-check
no VAS-traffic-forwarding VAS server-id 31 health-check
no VAS-traffic-forwarding VAS server-id 32 health-check
no VAS-traffic-forwarding VAS server-id 33 health-check
no VAS-traffic-forwarding VAS server-id 34 health-check
no VAS-traffic-forwarding VAS server-id 35 health-check
no VAS-traffic-forwarding VAS server-id 36 health-check
no VAS-traffic-forwarding VAS server-id 37 health-check
no VAS-traffic-forwarding VAS server-id 38 health-check
no VAS-traffic-forwarding VAS server-id 39 health-check
no VAS-traffic-forwarding VAS server-id 40 health-check
no VAS-traffic-forwarding VAS server-id 41 health-check
no VAS-traffic-forwarding VAS server-id 42 health-check
no VAS-traffic-forwarding VAS server-id 43 health-check
no VAS-traffic-forwarding VAS server-id 44 health-check
no VAS-traffic-forwarding VAS server-id 45 health-check
no VAS-traffic-forwarding VAS server-id 46 health-check
no VAS-traffic-forwarding VAS server-id 47 health-check
no VAS-traffic-forwarding VAS server-id 48 health-check
no VAS-traffic-forwarding VAS server-id 49 health-check
no VAS-traffic-forwarding VAS server-id 50 health-check
no VAS-traffic-forwarding VAS server-id 51 health-check
no VAS-traffic-forwarding VAS server-id 52 health-check
```

```
no VAS-traffic-forwarding VAS server-id 53 health-check
no VAS-traffic-forwarding VAS server-id 54 health-check
no VAS-traffic-forwarding VAS server-id 55 health-check
no VAS-traffic-forwarding VAS server-id 56 health-check
no VAS-traffic-forwarding VAS server-id 57 health-check
no VAS-traffic-forwarding VAS server-id 58 health-check
no VAS-traffic-forwarding VAS server-id 59 health-check
no VAS-traffic-forwarding VAS server-id 60 health-check
no VAS-traffic-forwarding VAS server-id 61 health-check
no VAS-traffic-forwarding VAS server-id 62 health-check
no VAS-traffic-forwarding VAS server-id 63 health-check
no sanity-checks test-packets
no sanity-checks attack-filter
no sanity-checks event-counters Flow-ID-Allocations-Failed
no l7-filter
no attack-filter protocol TCP
no attack-filter protocol UDP
no attack-filter protocol ICMP attack-direction single-side-both
no attack-filter protocol other attack-direction single-side-both
attack-filter subscriber-notification ports 80
replace spare-memory code bytes 3145728
interface GigabitEthernet 1/1
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 1/2
ip address 10.78.242.173 255.255.255.0
interface GigabitEthernet 3/0/0
auto-negotiate
interface GigabitEthernet 3/1/0
auto-negotiate
interface GigabitEthernet 3/2/0
auto-negotiate
interface GigabitEthernet 3/3/0
auto-negotiate
exit
ip default-gateway 10.78.242.129
line vty 0 4
no timeout
exit
interface Mng 0/1
no auto-fail-over
exit
interface Mng 0/2
active-port
exit
sub-attribute add-attribute Called-Station-ID
sub-attribute add-attribute 3GPP-Charging-Characteristics
sub-attribute add-attribute 3GPP-GPRS-Negotiated-QoS-Profile
sub-attribute add-attribute 3GPP-RAT-Type
sub-attribute add-attribute 3GPP-SGSN-Address-Code-6
sub-attribute add-attribute 3GPP-SGSN-Address
sub-attribute add-attribute 3GPP-SGSN-MCC-MNC
cdp mode bypass
service debug-shell
service debug-telnet
service debug-ssh
debug const-db name lcConstDb.rucSched.shutWaitBeforeShuttingRucs value 1000
debug const-db name lcConstDb.rucSched.shutWaitAfterShuttingRucs value 1000
debug const-db name lcConstDb.traverser.maxClsFcIds value 3312
debug const-db name lcConstDb.traverser.clsFcIdsThreshold value 3248
debug const-db name lcConstDb.sanityChecks.enableTestPackets value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsEF value false
debug const-db name lcConstDb.sanityChecks.enableDelayPacketsBE value false
debug const-db name lcConstDb.attackFilter.maxTotalPacketsIncrease value 1e+10
debug const-db name commonConstDb.sli.minSupportedObjectFormat value 13
```

```
diameter
no subscriber LEG dhcp-lease-query
subscriber LEG dhcp-lease-query servers 127.0.0.1
logger device SCE-agent-Statistics-Log max-file-size 204800
management-agent property "com.pcube.management.framework.install.activation.operation"
"Install"
management-agent property "com.pcube.management.framework.install.activated.package" "SCA
BB"
management-agent property "com.pcube.management.framework.install.activated.version"
"3.7.0 build 514"
management-agent property "com.pcube.management.framework.install.activation.date" "Wed
Nov 16 11:57:15 UTC 2011"
ip ftp-server
ip http-tech-if
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration

#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 16:19:29  UTC  FRI  November  18  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "party-name"
party mapping ip-address 1.2.3.4 name party-name
party name  party-name hw-bypass
SCE8000#
```

Related Commands

Command	Description
more startup-config-all	Displays the contents of all the startup configuration files.
show startup-config	Displays the contents of a startup configuration file.
show startup-config-application	Displays the contents of the startup configuration application files in the Cisco SCE platform.
show startup-config-party-db	Displays the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform.

show startup-config-application

To display the contents of a startup configuration application file in the Cisco SCE platform, use the **show startup-config-application** command in the privileged EXEC mode.

show startup-config-application

Note The configuration file contents will be displayed only if the corresponding startup configuration application is copied from the running configuration application.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **show startup-config-application** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show startup-config-application
#This is an application configuration file (running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
interface LineCard 0
application /apps/data/scos/temp.sli
exit
# Dynamic RDR category configuration
#This is a party templates configuration(included in application configuration
running-config-application).
#Created on 16:19:28  UTC  FRI  November  18  2011
#cli-type 1
#version 1
logger application-stats import-application-stats
/apps/data/scos/system/p3hidden/um//config//appstats.csv
RDR-formatter protocol NetflowV9 mapping file
/apps/data/scos/system/p3hidden/um//config//netflow.xml
SCE8000#>
```

Related Commands

Command	Description
more startup-config-application	Displays the contents of all the startup configuration application files in the Cisco SCE platform.
show startup-config-all	Displays the contents of all the startup configuration files.

show startup-config-party-db

To display the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform, use the **show startup-config-party-db** command in the privileged EXEC mode.

show startup-config-party-db

Note The configuration file contents will be displayed only if the corresponding startup configuration party database is copied from the running configuration party database.

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

The authorization used is root.

Examples

The following is sample output from the **show startup-config-party-db** command:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>show startup-config-party-db
#This is a party database configuration file (running-config-party-db) for static parties
only.
#Created on 13:34:02  UTC  TUE  July  12  2011
#cli-type 1
#version 1
hw-bypass mode
party name "N/A"
party name "[party-name]"
party mapping ip-address 24.11.52.128 name [party-name]
party mapping ip-address 110.10.10.10 name [party-name]
party name  [party-name] hw-bypass
SCE8000#>
```

Related Commands

Command	Description
copy startup-config-party-db backupfile	Allows the task of copying the startup configuration party database and creating a backup file of the configured static parties in the Cisco SCE platform.
more running-config-all	Displays the contents of all the currently running configuration files.
more startup-config-all	Displays the contents of all the startup configuration files.
more startup-config-party-db	Displays the contents of the startup configuration party database of the static parties that are configured in the Cisco SCE platform.
show startup-config-all	Displays the contents of all the startup configuration files.
show running-config-all	Displays the contents of all the currently running configuration files.

show system operation-status

Displays the operating status of the system.

show system operation-status

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the system operating status:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show system operation-status
System Operation status is Operational
SCE8000>
```

show system-uptime

Displays the length of time the system has been running since the last reboot.

show system-uptime

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the system uptime for the Cisco SCE platform:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show system-uptime
SCE uptime is 4 days, 13 hours, 21 minutes, 37 seconds
SCE8000>
```

show tacacs

Displays statistics for the TACACS+ servers.

show tacacs [all]

Syntax Description

all	Displays keys, timeouts, and other statistics.

Command Default

None

Command Modes

User EXEC

The **all** keyword is available only at the Privileged EXEC level.

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Note that, although most **show** commands are accessible to viewer-level users, the **all** keyword is available only at the admin authorization level. Use the **enable 10 command** to access the admin level.

Authorization: viewer

Examples

The following example shows how to display statistics for all TACACS+ servers:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show tacacs
Server: 100.10.10.10./49: opens=0 closes=0 error=0
messages in=0 messages out=0
SCE8000>
```

The following example shows how to display statistics, including keys and timeouts, for all TACACS+ servers:

```
SCE8000>enable 10
Password:<cisco>
SCE8000# show tacacs all
Server: 100.10.10.10./49: opens=0 closes=0 error=0
messages in=0 messages out=0
timeout=20
uses default timeout= yes
key= a
uses default key= no
SCE8000#
```

Related Commands

Command	Description
tacacs-server host	Defines a new TACACS+ server host that is available to the Cisco SCE platform TACACS+ client.
tacacs-server key	Defines the global default encryption key for the TACACS+ server hosts.
tacacs-server timeout	Defines the global default timeout interval for the TACACS+ server hosts.

show telnet sessions

Displays the active Telnet sessions.

show telnet sessions

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

The Index number in the command output does not indicate the number of telnet sessions; but provides a unique number for each session. The Index numbers are filled in increasing order. When four telnet sessions are active, the corresponding index numbers are 0, 1, 2, and 3. If the session with index number 1 logs off, then there will be 3 active sessions with index numbers 0, 2, and 3. If a fourth session is opened, the index numbers will again be 0, 1, 2, and 3.

Examples

The following example shows how to display the currently active Telnet sessions:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show telnet sessions

There are 3 active telnet sessions:
Index | Source
================
0 | 10.1.1.201
1 | 10.1.1.202
2 | 10.1.1.202

SCE8000>
```

Related Commands

Command	Description
telnet	Starts a Telnet session.
show telnet status	Displays the status of the Telnet server daemon.

show telnet status

Displays the status of the Telnet server daemon.

show telnet status

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current status of the Telnet daemon (enabled):

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show telnet status

Telnet daemon is enabled.
SCE8000>
```

Related Commands

Command	Description
service telnetd	Enables the Telnet daemon.
show telnet sessions	Displays any active Telnet sessions.

show timezone

Displays the current time zone and daylight saving time configuration as configured by the user.

show timezone

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the time zone configured by the user:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show timezone
Time zone: ISR minutes offset from UTC: 120
SCE8000>
```

Related Commands

Command	Description
clock timezone	Sets the time zone.

show users

Displays the users in the local database. The display includes passwords.

show users

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Note that, although most **show** commands are accessible to viewer-level users, this command is available only at the admin authorization level. To access the admin level, use the **enable 10** command.

Authorization: admin

Examples

The following example shows how to display the users in the local database:

```
SCE8000>enable 10
Password:<cisco>
SCE8000# show users
User: name = Joe
privilege level = 10
password = jasper
is password encrypted = no
SCE8000#
```

Related Commands

Command	Description
username	Adds a new user to the local database.
username privilege	Sets the privilege level for the specified user.

show version

To display the configuration information for the system, including the hardware version, the software version, the application used, and other configuration information, use the **show version** command in user EXEC command.

show version

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC (>)

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current version information of the Cisco SCE platform:

```
SCE8000> enable 5
Password: <cisco>
SCE8000> show version

System version: Version 3.7.5 Build 345
Build time: Feb 29 2012, 20:35:04 (Change-list 697063)
Software version is: Version 3.7.5 Build 345
Cryptography class: K9
Hardware information is:
=====================
Module 1
=====================

---------------------
Firmware
---------------------
kernel      : [kernel] 2.4.0/3 (inactive: [kernel] 2.4.0/3)
u-boot      : [uboot] 2.1.0/1 (field: [uboot] 0.8.1/18)
select      : [ubs-cf1] 2.4.0/3 (secondary: [ubs-cf1] 2.4.0/3)

---------------------
Slot 1: SCE8000-SCM-E
---------------------
serial-num  : CAT1326G027
part-num    : 73-10598-03
```

```
cpld        : 0x8274
vtpld       : 0xc004
summit-0    : 0xf2c1001
summit-1    : 0xf2c1101
dpt/tx      : 0x491f
cls/ff      : 0x2113
cls cam     : 0x454120
cls flow cap: 33554432
ssa         : 0x90

---------------------
TVR
---------------------
#cpus       : 1
cpu SVR     : 0x80900121
cpu PVR     : 0x80040202
cpu freq    : 1000MHz
cpu (eeprom): 2.1, 1000MHz
cpld        : 0xa1bc
cpld-ufm    : 0xa803
summit      : 0xf2c1701
cf          : Model=SMART CF, S/N=2008021302C418071807, FwRev=0x20060811, Size=4062240KB
phy-0       : 0xcc2
phy-1       : 0xcc2
phy-2       : 0xcc2

---------------------
CFC-0
---------------------
board type  : P2
#cpus       : 3
cpu-0 SVR   : 0x80900121
cpu-0 PVR   : 0x80040202
cpu-0 freq  : 1500MHz
cpu-1 SVR   : 0x80900121
cpu-1 PVR   : 0x80040202
cpu-1 freq  : 1500MHz
cpu-2 SVR   : 0x80900121
cpu-2 PVR   : 0x80040202
cpu-2 freq  : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0      : 0xb219
cpld-1      : 0xb219
cpld-2      : 0xb219
cpld-0-ufm  : 0xb803
cpld-1-ufm  : 0xb803
cpld-2-ufm  : 0xb803
summit-0    : 0xf2c1301
summit-1    : 0xf2c1401
fc          : 0x130e

---------------------
CFC-1
---------------------
board type  : P2
#cpus       : 3
cpu-0 SVR   : 0x80900121
cpu-0 PVR   : 0x80040202
cpu-0 freq  : 1500MHz
cpu-1 SVR   : 0x80900121
cpu-1 PVR   : 0x80040202
cpu-1 freq  : 1500MHz
cpu-2 SVR   : 0x80900121
cpu-2 PVR   : 0x80040202
```

```
cpu-2 freq  : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0      : 0xb219
cpld-1      : 0xb219
cpld-2      : 0xb219
cpld-0-ufm  : 0xb803
cpld-1-ufm  : 0xb803
cpld-2-ufm  : 0xb803
summit-0    : 0xf2c1301
summit-1    : 0xf2c1401
fc          : 0x130e

---------------------
Slot 3: SCE8000-SIP
---------------------
serial-num  : CAT1342G00V
part-num    : 73-10947-02
cpld        : 0x9274
summit-0    : 0xf2c1501
summit-1    : 0xf2c1601
dpt-0       : 0x3245
dpt-1       : 0x3245
ssa-0       : 0x90
ssa-1       : 0x90
CIO RLDRAM  : OK
spa[0]      : SPA-8X1GE
spa[1]      : no SPA
spa[2]      : no SPA
spa[3]      : no SPA

---------------------
SCE8000 Chassis
---------------------
product-num : SCE8000
serial-num  : FOX1338HAA5
part-num    : 73-11293-02
part-rev    : A0
vid         : V02


=====================
Module 2
=====================

---------------------
Firmware
---------------------
kernel      : [kernel] 2.4.0/3 (inactive: [kernel] 2.4.0/3)
u-boot      : [uboot] 2.1.0/1 (field: [uboot] 0.8.1/18)
select      : [ubs-cf0] 2.4.0/3 (secondary: [ubs-cf0] 2.4.0/3)

---------------------
Slot 2: SCE8000-SCM-E
---------------------
serial-num  : CAT1230G001
part-num    : 73-10598-01
cpld        : 0x8274
vtpld       : 0xc003
summit-0    : 0xf2c1001
summit-1    : 0xf2c1101
dpt/tx      : 0x491f
cls/ff      : 0x2113
cls cam     : 0x454120
cls flow cap: 33554432
```

```
ssa          : 0x90

----------------------
TVR
----------------------
#cpus        : 1
cpu SVR      : 0x80900121
cpu PVR      : 0x80040202
cpu freq     : 1000MHz
cpu (eeprom): 2.1, 1000MHz
cpld         : 0xa1bb
cpld-ufm     : 0xa803
summit       : 0xf2c1701
cf           : Model=SILICONSYSTEMS INC 4GB-3213, S/N=B828318HCJY10916300C,
FwRev=0x242-0230, Size=4125744KB
phy-0        : 0xcc2
phy-1        : 0xcc2
phy-2        : 0xcc2

----------------------
CFC-0
----------------------
board type   : P2
#cpus        : 3
cpu-0 SVR    : 0x80900121
cpu-0 PVR    : 0x80040202
cpu-0 freq   : 1500MHz
cpu-1 SVR    : 0x80900121
cpu-1 PVR    : 0x80040202
cpu-1 freq   : 1500MHz
cpu-2 SVR    : 0x80900121
cpu-2 PVR    : 0x80040202
cpu-2 freq   : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0       : 0xb217
cpld-1       : 0xb217
cpld-2       : 0xb217
cpld-0-ufm   : 0xb803
cpld-1-ufm   : 0xb803
cpld-2-ufm   : 0xb803
summit-0     : 0xf2c1301
summit-1     : 0xf2c1401
fc           : 0x130e

----------------------
CFC-1
----------------------
board type   : P2
#cpus        : 3
cpu-0 SVR    : 0x80900121
cpu-0 PVR    : 0x80040202
cpu-0 freq   : 1500MHz
cpu-1 SVR    : 0x80900121
cpu-1 PVR    : 0x80040202
cpu-1 freq   : 1500MHz
cpu-2 SVR    : 0x80900121
cpu-2 PVR    : 0x80040202
cpu-2 freq   : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0       : 0xb217
cpld-1       : 0xb217
cpld-2       : 0xb217
cpld-0-ufm   : 0xb803
cpld-1-ufm   : 0xb803
```

```
cpld-2-ufm  : 0xb803
summit-0    : 0xf2c1301
summit-1    : 0xf2c1401
fc          : 0x130e

Part number       : 73-10598-03
Revision          : 1
Software revision : 1
LineCard S/N      : CAT1326G027
Power Supply type : AC

SML Application information is:
No application is configured.
Logger status: Enabled

Platform: SCE8000
Management agent interface version: SCE Agent 3.7.5 Build 300
Software package file: ftp://ftpserver/simba_03750345_K9.pkg

SCE8000  uptime is 1 weeks, 4 days, 17 hours, 28 minutes, 0 seconds

SCE8000#>
```

Related Commands

Command	Description
show version all	Displays complete version information as well as the information on the running configuration for all the components.
show version software	Displays version information about the current software that is being used.

show version all

Displays complete version information as well as the running configuration for all components.

show version all

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display version and configuration information for all system components:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show version all
System version: Version 3.1.6S Build 279
Build time: Jun 10 2008, 19:27:47 (Change-list 335658)
Software version is: Version 3.1.6S Build 279
Hardware information is:
----------------
Firmware
----------------
kernel : [kernel] 1.0.0/5 (inactive: [kernel] 1.0.0/5)
u-boot : [uboot] 1.0.0/6 (field: [uboot] 0.8.1/13)
select : [ubs-cf1] 1.0.0/5 (secondary: [ubs-cf1] 1.0.0/5)
----------------
Slot 1: SCM-8000
----------------
serial-num : CAT1202G07D
part-num : 73-10598-01 38
cpld : 0x8162
vtpld : 0xc001
summit-0 : 0x10008
summit-1 : 0x10008
dpt/tx : 0x4837
cls/ff : 0x2047
cls flow cap: 33554432
```

```
----------------
TVR
----------------
#cpus : 1
cpu SVR : 0x80900120
cpu PVR : 0x80040202
cpu freq : 1000MHz
cpu (eeprom): 2.1, 1000MHz
cpld : 0xa1b7
cpld-ufm : 0xa803
summit : 0x10007
cf : Model=SMART CF, FwRev=0x20060811, Size=4062240KB
----------------
CFC-0
----------------
board type : P2
#cpus : 3
cpu-0 SVR : 0x80900121
cpu-0 PVR : 0x80040202
cpu-0 freq : 1500MHz
cpu-1 SVR : 0x80900121
cpu-1 PVR : 0x80040202
cpu-1 freq : 1500MHz
cpu-2 SVR : 0x80900121
cpu-2 PVR : 0x80040202
cpu-2 freq : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0 : 0xb20e
cpld-1 : 0xb20e
cpld-2 : 0xb20e
cpld-0-ufm : 0xb803
cpld-1-ufm : 0xb803
cpld-2-ufm : 0xb803
summit-0 : 0x1000a
summit-1 : 0x1000a
fc : 0x1044
----------------
CFC-1
----------------
board type : P2
#cpus : 3
cpu-0 SVR : 0x80900121
cpu-0 PVR : 0x80040202
cpu-0 freq : 1500MHz
cpu-1 SVR : 0x80900121
cpu-1 PVR : 0x80040202
cpu-1 freq : 1500MHz
cpu-2 SVR : 0x80900121
cpu-2 PVR : 0x80040202
cpu-2 freq : 1500MHz
cpu (eeprom): 2.1, 1500MHz
cpld-0 : 0xb20e
cpld-1 : 0xb20e
cpld-2 : 0xb20e
cpld-0-ufm : 0xb803
cpld-1-ufm : 0xb803
cpld-2-ufm : 0xb803
summit-0 : 0x1000a
summit-1 : 0x1000a
fc : 0x1044
----------------
Slot 3: SIP-8000
----------------
serial-num : CAT1204G01H
```

```
part-num : 73-10947-01
cpld : 0x9162
summit-0 : 0x10006
summit-1 : 0x10006
dpt-0 : 0x3033
dpt-1 : 0x3033
spa[0] : SPA-1X10GE-L-V2
spa[1] : SPA-1XTENGE-XFP
spa[2] : SPA-1X10GE-L-V2
spa[3] : SPA-1XTENGE-XFP
----------------
SCE8000 Chassis
----------------
product-num : CISCO7604
serial-num : FOX10420BKZ
part-num : 73-9789-02
part-rev : A0
vid : V01
Part number: 73-10598-01 38
Revision:
Software revision:
LineCard S/N : CAT1202G07D
Power Supply type: AC
SML Application information is:
No application is configured.
Logger status: Enabled

Platform: SCE8000 - 4x10GBE
Management agent interface version: SCE Agent 3.1.6 Build 134
Software package file: ftp://ftpserver/simba.pkg
SCE8000 uptime is 9 minutes, 54 seconds

======================
#This is a general configuration file (running-config).
#Created on 10:14:59 UTC TUE November 12 2006
.
interface LineCard 0
connection-mode active
no silent
.
.
Software package file: Not available
Unified management package file: /system/images/um13012.pkg
SCE8000>
```

Related Commands

Command	Description
show version	Displays the configuration information for the system.
show version software	Displays version information for the current software.

show version software

Displays version information for the current software.

show version software

Syntax Description

This command has no arguments or keywords.

Command Default

None

Command Modes

User EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

The following example shows how to display the current software version:

```
SCE8000>enable 5
Password:<cisco>
SCE8000>show version software
Software version is: Version 3.0.5 Build 240
SCE8000>
```

Related Commands

Command	Description
show version	Displays the configuration information for the system.
show version all	Displays complete version information as well as the running configuration for all components.

show vty mng-vlan

Displays the management interface VLAN configured for Telnet services.

show vty mng-vlan

Syntax Description

This command has no arguments or keywords.

Command Default

This command has no default settings.

Command Modes

User Exec

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: viewer

Examples

This example shows how to display the VLAN configured for Telnet services.

```
SCE8000>enable 5
Password:<cisco>
SCE8000#show vty mng-vlan
Management vlan 2 assigned to telnet service
SCE8000#
```

Related Commands

Command	Description
vty mng-vlan	Assigns the specified VLAN to Telnet services.

silent

Disables the line card from reporting events.

To enable the line card to send reports, use the **no** form of this command.

silent

no silent

Syntax Description

This command has no arguments or keywords.

Command Default

Reporting events is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to change the line card state to silent:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#silent
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard silent	Displays the current silent state.

snmp-server accelerate-query

To enable the SNMP walk acceleration for linksServiceUsage queries, use the **snmp-server accelerate-query** command.

Use the **no** form of the command to disable the SNMP walk acceleration.

snmp-server accelerate-query <*linkServiceUsage query***>**

no snmp-server accelerate-query <*linkServiceUsage query***>**

Syntax Description

linkServiceUsage query	Any one of the following linkServiceUsage queries: • linkServiceUsageActiveSubs • linkServiceUsageConcSessions • linkServiceUsageDownVolume • linkServiceUsageDuration • linkServiceUsageNumSessions • linkServiceUsageUpVolume

Command Default

None.

Command Modes

CONFIG (#)>

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows the how to enable SNMP linkServiceUsageUpVolume query.

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)#> snmp-server accelerate-query linkServiceUsageUpVolume
SCE8000(config)#>
```

The following example shows the how to disable SNMP linkServiceUsageUpVolume query

```
SCE8000>enable 10
Password:<cisco>
SCE8000# config
SCE8000(config)#> snmp-server accelerate-query linkServiceUsageUpVolume
```

```
SCE8000(config)#>
```

Related Commands

Command	Description
show snmp accelerate-query	Displays the linkServiceUsage queries enabled on the Cisco SCE.

snmp-server

Enables the SNMP agent. You can also use any of the other **snmp-server** commands to enable the SNMP agent.

To disable the SNMP agent from responding to SNMP managers, use the **no** form of this command. All SNMP settings are saved and then restored when the SNMP agent is re-enabled.

snmp-server enable

no snmp-server

Syntax Description

enable	Enables the SNMP agent.

Command Default

The SNMP agent is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

To allow SNMP access, you must define at least one community string.

Authorization: admin

Examples

The following example shows how to disable the SNMP server:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no snmp-server
SCE8000(config)#
```

Related Commands

Command	Description
snmp-server community	Sets a community string.
show snmp	Displays the SNMP configuration and counters.

snmp-server community

Sets a community string.

To remove a community string, use the **no** form of this command.

snmp-server community *community-string* **[ro | rw]** ***[acl-number]***

no snmp-server community *community-string* **[ro | rw]** ***[acl-number]***

no snmp-server community all

Syntax Description

community-string	SNMPv1 and SNMPv2c security string that identifies a community of managers that can access the SNMP server. It functions much like a password, permitting access to SNMP. The community string is 1 to 32 alphanumeric characters. Blank spaces are not permitted. **Note** The @ symbol is used for delimiting the context information. Avoid using the @ symbol as part of the SNMP community string when configuring this command.
ro	(Optional) Specifies read-only access. Authorized management stations can only retrieve MIB objects.
rw	(Optional) Specifies read-write access. Authorized management stations can both retrieve and modify MIB objects.
acl-number	(Optional) Integer from 1 to 99 that specifies a standard access list of IP addresses allowed access to the SNMP agent. This ACL is assigned globally to the SNMP agent, not just to the specified community string.
all	(Optional) Used with the **no** form of the command. Removes all configured communities.

Command Default

No SNMP access.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Note Assigning different ACLs to different community strings is not supported. If you specify an ACL in this command, it is assigned to the SNMP server globally, not just to the specified community string. For example, if you configure two community strings and assign a different ACL to each, access to the SNMP agent for both communities is controlled by both ACLs.

Authorization: admin

Examples

The following example shows how to configure two SNMP manager communities with read-only access. Access by both communities is controlled by ACLs 1 and 2 in conjunction.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server community community1 ro 1
SCE8000(config)#snmp-server community community2 ro 2
SCE8000(config)#
```

The following example shows how to remove one of the configured community strings. The assigned ACL address is also removed, so that access to the SNMP agent is now controlled be ACL 2 only.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no snmp-server community community1 ro 1
SCE8000(config)#
```

Related Commands

Command	Description
access-list	Creates or updates a specified ACL
show snmp community	Displays the current SNMP community configuration.

snmp-server contact

Sets the system contact (sysContact) string.

To remove the contact setting, use the **no** form of this command.

snmp-server contact *contact*

no snmp-server contact

Syntax Description

contact	Sring that identifies the system contact.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the system contact:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server contact Brenda@MyCompany.com
SCE8000(config)#
```

Related Commands

Command	Description
show snmp contact	Displays the configured system contact string.

snmp-server enable traps

Enables or disables sending the specified SNMP traps. (Only authentication-failure traps and enterprise traps can be controlled using this command.)

To reset SNMP traps to the default status, use the **default** form of this command.

snmp-server enable traps [snmp [*snmp-trap-name***]] [enterprise [***enterprise-trap-name***]]**

no snmp-server enable traps [snmp [*snmp-trap-name***]] [enterprise [***enterprise-trap-name***]]**

default snmp-server enable traps [snmp [*snmp-trap-name***]] [enterprise [***enterprise-trap-name***]]**

Syntax Description

snmp-trap-name	(Optional) Controls a specific SNMP trap. The only valid trap is **Authentication.**
enterprise-trap-name	(Optional) Controls a specific enterprise trap. Choose **attack, chassis, link-bypass, logger, operational-status, port-operational-status, pull-request-failure, RDR-formatter, session, SNTP, subscriber, system-reset, telnet, vas-traffic-forwarding**

Command Default

SNMP traps are disabled.

Enterprise traps are enabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The following classes of SNMP traps are controlled by this command:

- SNMP traps
- Enterprise traps

The **snmp** and **enterprise** keywords specify the class of traps that are to be enabled or disabled by this command. Each class, or type, is composed of specific traps. Use these keywords as follows:

- To enable or disable all traps of one type—Specify only **snmp** or **enterprise.**
- To enable or disable only one specific trap—Specify **snmp** or **enterprise** with the *trap-name* argument naming the trap.
- To enable or disable all traps—Do not specify either **snmp** or **enterprise.**

Because currently only the SNMP type of trap is the authentication trap, the **snmp** and **authentication** keywords are redundant.

The **snmp-server enable traps** command is used in conjunction with the **snmp-server host** command. Use the s**nmp-server host** command to specify which host or hosts receive SNMP notifications. To send notifications, you must configure at least **one snmp-server host** command.

Authorization: admin

Examples

The following example shows how to configure the SNMP server to send traps:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server enable traps
SCE8000(config)#
```

Related Commands

Command	Description
show snmp traps	Displays the status of SNMP trap generation.
snmp-server host	Configures a destination for SNMP traps.

snmp-server group

Configures an SNMP server group. To remove all server groups or a specific server group use the no form of the command.

snmp server group *group name 3* **{noAuthNoPriv | authNoPriv | authPriv } [read-view** *view name*] **[write-view** ***view name***]

no snmp server group *group name*

no snmp server group all

Syntax Description

group name	Name of the SNMP server group.
3	Indicates the SNMP version 3.
noAuthNoPriv	Sets the security level to no authentication and no privacy. Group does not require any authentication or encryption security levels for access.
authNoPriv	Sets the security level with authentication and no privacy. The users of this group has to authenticate themselves to get access.
authPriv	Sets the security level with authentication and privacy. The users of this group requires both authentication and encryption security levels for access.
read-view	(Optional)Specifies that the view is a read-view. This is the view used for SNMPGET/GET-NEXT/WALK.
write-view	(Optional)Specifies that the view is a write-view. This is the view used for SNMPSET.
view name	Enter the view name for the group.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

If configured, SNMP server group details are included in the running configuration. SNMPv3 group configurations are not persistent across restarts. You must copy the running-configuration to the startup-configuration to make the groups persistent.

Notify-view is not supported for group configuration.

By default an SNMP group is read-only.

You can remove a group only if there are no users configured in the group.

Authorization: admin.

Examples

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)#> snmp-server view IPView OID 1.3.6.1.2.1.4 operation include
SCE8000(config)#> snmp-server view IfView OID 1.3.6.1.2.1.2.2 operation include
SCE8000(config)#> snmp-server group ipGroup 3 authNoPriv read-view IPView
SCE8000(config)#> snmp-server group ifGroup 3 authPriv read-view IfView write-view IfView
SCE8000(config)#> snmp-server group ifGroupReadOnly 3 noAuthNoPriv read-view IfView
```

snmp-server host

Configures a destination for SNMP traps.

To remove configured hosts, use the no form of the command.

snmp-server host { *hostname*| *ip-address* } [traps] [version *version*] {community-string | { noAuthNoPriv | authNoPriv | authPriv }} user *user-name*

no snmp-server host { *hostname*| *ip-address* } [traps]

no snmp-server host all

Syntax Description

host	Specifies the details of the SNMP host. The SNMP notification host is typically a network management station (NMS) or SNMP manager. This host is the recipient of the SNMP traps.
hostname	Name of the host.
ip-address	IP address of the SNMP notification host.
traps	Optional switch, does not influence command functionality.
version	SNMP version running in the system.
version	SNMP version. Can be set to 1. 2c, or 3.
community-string	(Only for SNMP v1 and v2c) The SNMPv1 and SNMPv2c security string that identifies a community of managers that are able to access the SNMP server.
noAuthNoPriv	(Only for SNMP v3) Specifies to configure the traps for the host with no authentication and no privacy.
authNoPriv	(Only for SNMP v3) Specifies to configure the traps for the host with authentication; but no privacy.
authPriv	(Only for SNMP v3) Specifies to configure the traps for the host with both authentication and privacy.
user-name	(Only for SNMP v3) Name of the user.
all	(Optional) Used with the no form of the command, removes all configured hosts.

Command Default

SNMP traps do not have destination hosts.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
4.1.0	This command was updated for SNMP version 3.

Usage Guidelines

For SNMP version 1 and version 2c, If the given community is not configured earlier, then the community is automatically configured with read only permissions as if the **snmp-server community community-string ro** command was given along with the **snmp-server host** command.

For SNMP version 3, you must configure the *user-name* for the user before configuring the trap host using the *user-name*.

Notifications are not sent unless you enter at least one **snmp-server hos**t command. To configure the Cisco SCE platform to send SNMP notifications, you must enter at least one **snmp-server host** command. To enable multiple hosts, issue separate **snmp-server host** command for each host.

The **snmp-server host** command is used in conjunction with the **snmp-server enable traps** command. Use the **snmp-server enable traps** command to specify which SNMP notifications are to be sent.

Use the all keyword with the **no** form of the command to remove all configured hosts. This will result in no notifications being sent.

Authorization: admin

Examples

The following example shows how to add a host destination for SNMPv2c traps:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server host 10.1.1.205 2c public
SCE8000(config)#
```

Adding a host destination for SNMPv3 traps:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# snmp-server host host 10.1.1.205 version 3 authPriv user user1
SCE8000(config)#
```

Related Commands

Command	Description
show snmp host	Displays the destination hosts for SNMP traps.
snmp-server enable traps	Specifies which notifications to send.

snmp-server interface

Defines a specific SNMP server interface.

To remove the interface definition, use the **no** form of this command.

snmp-server interface *interface-number* **{alias** *alias* **| link-up-down-trap}**

no snmp-server interface *interface-number*

Syntax Description

interface-number	Number of the SNMP server interface.
alias	Logical name assigned to the interface.
link-up-down-trap	Enables the link up or down trap for the specified interface.

Command Default

No SNMP server interface is defined.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to define an alias for the specified interface:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server interface 4 alias snmp-server1
SCE8000(config)#
```

The following example shows how to enable the link up or down trap for the specified interface:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server interface 4 link-up-down-trap
SCE8000(config)#
```

Related Commands

Command	Description
snmp-server	Enables the SNMP server.

snmp-server location

Assigns a name to the Cisco SCE platform location (sysLocation).

To remove the location setting, use the **no** form of this command.

snmp-server location *location*

no snmp-server location

Syntax Description

location	String that specifies the system location.

Command Default

No location is defined.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to configure the system location:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#snmp-server location London Office Room 300
SCE8000(config)#
```

Related Commands

Command	Description
show snmp location	Displays the configured MIB-II variable sysLocation.

snmp-server mng-vlan

Assigns the specified VLAN to SNMP services.

Use the **no** form of the command to the VLAN configuration for SNMP services.

snmp-server mng-vlan *vlan-id*

no snmp-server mng-vlan

Syntax Description

vlan-id	VLAN tag to be assigned to SNMP services (1-4094).

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You can create separate VLAN interfaces on the management interface in order to differentiate between various management services. There are two steps in this process:

1. Create the VLAN and assign the IP address (**mng-vlan** command).
2. Assign the VLAN to a management service.

Note This command, in either the positive or negative form, restarts the SNMP process in order for the changes to take effect. This generates a cold-start trap.

Authorization: admin

Examples

The following example shows how to configure a VLAN for SNMP services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#mng-vlan 100 address 10.10.10.20 mask 255.255.255.0
SCE8000(config)#snmp-server mng-vlan 100
SCE8000(config)#
```

The following example shows how to remove the VLAN for SNMP services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no snmp-server mng-vlan
SCE8000(config)#
```

Related Commands

Command	Description
show snmp	Displays the VLAN configuration of SNMP service, if configured, in addition to other SNMP properties.

snmp-server user

Configures SNMPv3 users on a Cisco SCE device.

To remove a specific SNMP user or all SNMP users on a device, use the no form of the command.

snmp-server user *user-name* **group** *group-name* **[auth { MD5-auth | SHA-auth }** **auth-pass-phrase** *authPassPhrase* **] [priv { AES-priv | DES-priv } priv-pass-phrase** *privPassPhrase* **]**

no snmp server user *user name*

no snmp server user all

Syntax Description

user	Specifies the SNMP user name.
user-name	SNMP user name to be added to a group.
group	Specifies the group to add the user.
group-name	Name of the group to add the user.
auth	Specifies the type of authentication.
MD5-auth	Specifies to use MD5 authentication.
SHA-auth	Specifies to use SHA authentication.
auth-pass-phrase	Specifies the authentication pass phrase.
authPassPhrase	Authentication pass phrase to be used for the specific user.
priv	Specifies the type of privacy to be used.
AES-priv	Specifies to use AES privacy.
DES-priv	Specifies to use DES privacy.
priv-pass-phrase	Specifies to use the pass phrase for the privacy type.
privPassPhrase	Pass phrase to be used for the privacy.
all	Removes all SNMP users from a device.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

If you are configuring large number of SNMPv3 users, disable SNMP agent before configuring the users. Enable the SNMP agent after configuring all users.

If you are configuring less number of SNMPv3 user or few ad hoc configurations, you need not disable the SNMP agent. You may notice a delay of few seconds for the configuration to take effect.

SNMPv3 users are not shown in the running-configuration. To see a list of configured users, use the show snmp user command. The SNMPv3 user configurations are persistent across restarts of the Cisco SCE. To remove any or all users, you must explicitly remove them using no snmp-server user command.

If you configure a group and configure few users for that group. You must copy the running-configuration to startup-configuration to preserve the group configurations across restarts of the Cisco SCE. If you do not copy the running-configuration to startup-configuration, the user configuration is preserved and group configuration is deleted. To make the groups and users usable again, you need to configure the groups again.

Authorization: admin

Examples

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)#> no snmp-server
SCE8000(config)#> snmp-server user ipUser group ipGroup auth MD5-auth auth-pass-phrase
password

Note: Do not forget to enable the SNMP agent after all the user configuration, to make
them active.

SCE8000(config)#> snmp-server user ipUser01 group ipGroup auth SHA-auth auth-pass-phrase
passwordsha

Note: Do not forget to enable the SNMP agent after all the user configuration, to make
them active.

SCE8000(config)#> snmp-server user ifUserNoAuth group ifGroupReadOnly

Note: Do not forget to enable the SNMP agent after all the user configuration, to make
them active.

SCE8000(config)#> snmp-server user ifUserRW group ifGroup auth SHA-auth auth-pass-phras
passwordsha priv AES-priv priv-pass-phrase passwordaes

Note: Do not forget to enable the SNMP agent after all the user configuration, to make
them snmp-server user active.

SCE8000(config)#> snmp-server enable
SCE8000(config)#> end
SCE8000#>
```

snmp-server view

Creates a view entry. To remove an SNMP view entry, use the no form of the command.

Note Enter a valid SNMP Object ID to be included or excluded. Cisco SCE does not validate the OID.

snmp server view *view-name* **OID** *OID* or *MIB Name* **Operation {Included | Excluded}**

no snmp server view *view-name* **OID** *OID or MIB Name* **Operation {Included | Excluded}**

no snmp server view all

Syntax Description

view-name	Name for the viewyou are creating.
OID	Specifies to use theMIB Object ID.
OID or MIB Name	SNMP MIB Object ID or the MIB name.
Operation	Specifies the type of the entry for view.
Included	Specifies to include all entries from the MIB/OID name to the view.
Excluded	Specifies to exclude the MIB/OID name from the view.
all	Specifies to remove all view entries.

Command Default

None.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
4.1.0	This command was introduced.

Usage Guidelines

If configured, SNMP server view details are included in the running configuration.

By default, two views are defined. A full-view that indicates that the user can see all objects and a none-view that indicates that the user cannot view any objects. You can not modify or remove these views.

While removing a view, both the OID and the operation should match. You can not remove a view if it is being used in a group.

Authorization: admin

Examples

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
```

```
SCE8000(config)#> snmp-server view IPView OID 1.3.6.1.2.1.4 operation include
SCE8000(config)#> snmp-server view IfView OID 1.3.6.1.2.1.2.2 operation include
SCE8000#>
```

sntp broadcast client

Enables the SNTP multicast client to accept SNTP broadcasts from any SNTP server.

To disable the SNTP multicast client, use the **no** form of this command.

sntp broadcast client

no sntp broadcast client

Syntax Description

This command has no arguments or keywords.

Command Default

The SNTP multicast client is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable the SNTP multicast client:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#sntp broadcast client
SCE8000(config)#
```

Related Commands

Command	Description
show sntp	Displays the SNTP configuration and update statistics.
sntp server	Enables the SNTP unicast client to query the specified SNTP server.
sntp update-interval	Defines the interval between SNTP unicast update queries.

sntp server

Enables the SNTP unicast client to query the specified SNTP server.

To disable the SNTP unicast server, use the **no** form of this command.

sntp server {*address* | *hostname***}**

no sntp server *hostname*

no sntp server all

Syntax Description

address	IP address of the SNTP server.
hostname	Hostname of the SNTP server.
all	Used with the **no** form of this command, disables all SNTP unicast servers.

Command Default

The SNTP unicast server is disabled.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable an SNTP server at a specified IP address:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#sntp server 128.182.58.100
SCE8000(config)#
```

Related Commands

Command	Description
show sntp	Displays the SNTP configuration and update statistics.
sntp broadcast client	Enables the SNTP multicast client to accept SNTP broadcasts from any SNTP server.
sntp update-interval	Defines the interval between SNTP unicast update queries.

sntp update-interval

Defines the interval (in seconds) between SNTP unicast update queries.

sntp update-interval [*interval]*

Syntax Description

interval	Length of the interval, in seconds.

Command Default

The default interval is 64 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the SNTP update interval to 100 seconds:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#sntp update-interval 100
SCE8000(config)#
```

Related Commands

Command	Description
show sntp	Displays the SNTP configuration and update statistics.
sntp server	Enables the SNTP unicast client to query the specified SNTP server.
sntp broadcast client	Enables the SNTP multicast client to accept SNTP broadcasts from any SNTP server.

speed

Configures the speed of the management interface to either 10 Mbps, 100 Mbps, or 1000 Mbps. The auto option specifies auto-negotiation (do not force speed on the link).

speed [*speed]*

no speed

Syntax Description

speed	Speed in Mbps or auto-negotiation. Can be set to **10, 100, 1000,** or **auto.**

Command Default

The default speed is auto.

Command Modes

GigabitEthernet Interface Configuration

Mng Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Use this command to configure the speed of the GigabitEthernet management interface.

If the duplex mode of the interface is configured to auto (see the **duplex command**), changing this configuration has no effect.

Authorization: admin

Examples

The following example shows how to configure the speed of the management port to auto.

```
SCE2000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface GigabitEthernet 1/2
SCE8000(config if)#speed auto
SCE2(config if)#
```

Related Commands

Command	Description
duplex	Configures the duplex operation of the GigabitEthernet management interface.
show interface mng	Displays the details of the GigabitEthernet management interface.

subscriber aging

Enables or disables subscriber aging for the specified type of subscribers (anonymous or introduced). The aging period may also be defined when aging is enabled.

subscriber aging {anonymous | introduced} [timeout *aging-time*]

no subscriber aging {anonymous | introduced}

Syntax Description

aging-time	Length of the aging period, in minutes (2-14400).
anonymous	Anonymous subscribers.
introduced	Introduced subscribers.

Command Default

By default, subscriber aging is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The most common usage for aging is for anonymous subscribers. Aging ensures that anonymous subscribers who have logged out of the network are removed from the Cisco SCE platform and are no longer occupying resources.

The aging time can be configured individually for introduced subscribers and for anonymous subscribers.

Authorization: admin

Examples

The following example shows how to enable subscriber aging for anonymous subscribers with a timeout period of 10 minutes:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#subscriber aging anonymous timeout 10
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard subscriber aging	Displays the subscriber aging configuration for the specified type of subscriber.

subscriber anonymous-group export csv-file

Exports anonymous groups to the specified CSV file.

subscriber anonymous-group export csv-file *filename*

Syntax Description

filename	Name of the CSV file to which the anonymous group information is to be exported.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Note This command is not applicable to IPv6 subscribers.

Examples

The following example shows how to export anonymous group information to the specified file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber anonymous-group export csv-file s_g_0507.csv
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber anonymous-group import csv-file	Creates anonymous groups by importing anonymous subscribers from the specifed CSV file.

subscriber anonymous-group import csv-file

Creates anonymous groups by importing anonymous subscribers from the specified CSV file.

subscriber anonymous-group import csv-file *filename*

Syntax Description

filename	Name of the CSV file containing the anonymous group information.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Anonymous Group CSV files have a fixed format. All lines have the following structure:

Anonymous-group-name, IP-range or IPv6-range [, subscriber-template-number].

If no subscriber template number is specified, then the anonymous subscribers of that group will use the default template (0), which cannot be changed by template import operations.

The following example shows an anonymous group *CSV* file:

```
group1, 10.1.0.0/16, 2
group2, 176.23.34.0/24, 3
group3, 10.2.0.0/16
```

Authorization: admin

Note This command is not applicable to IPv6 subscribers.

Examples

The following example shows how to import subscribers from the file *subscribers_groups.csv:*

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber anonymous-group import csv-file subscribers_groups.csv
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber anonymous-group export csv-file	Exports anonymous groups to the specifed CSV file.

subscriber anonymous-group name ip-range

Assigns the anonymous group to the specified range of IP addresses and optional template, to an SCMP device, to a Gx, or to a Cisco SCE.

To delete the anonymous group or remove it from the specified SCMP destination, use the **no** form of this command.

subscriber anonymous-group name *group-name* **{ip-range** *range* **| ipv6-range** *range***} [template** *template***] [None]**

subscriber anonymous-group name *group-name* **{ip-range** *range* **| ipv6-range** *range***} {Gx | None | scmp name [***scmp-name***]}**

no subscriber anonymous-group {name *group-name* **[scmp] | all}**

Syntax Description

group-name	Name of the anonymous group.
range	IP range of the anonymous group.
ipv6 range	IPv6 range of the anonymous group.
template	(optional) Group template for the anonymous group .
scmp-name	(optional) Name of the SCMP peer device. SCMP option is not available for IPv6.
Gx	Assigns the anonymous group to the Gx, so as to enable the Gx to introduce subscribers.
None	Assigns the anonymous group to the Cisco SCE. The subscribers assigned to the Cisco SCE remains anonymous always.
all	Specifies all anonymous subscriber group definitions.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.1.6	This command was introduced.
3.6.0	Gx and None options were introduced.
3.8.0	IPv6 range was introduced.

Usage Guidelines

An anonymous subscriber group is a specified IP range, where each IP address in the given range is treated as a separate subscriber. You can assign a subscriber template to the group so that all subscribers in the group have properties as defined by that template.

This command defines the IP range of the specified anonymous group and optionally defines a subscriber template to be assigned to all subscribers within that IP range.

Anonymous groups can have overlapping IP ranges. When the Cisco SCE platform detects traffic for an IP address which is contained in more than one anonymous group, the group with the longest prefix is used to create the anonymous subscriber for that IP address.

Use the **scmp** option to assign the anonymous group to the specified SCMP destination. In this case, the specified anonymous group is the IP range managed by the SCMP peer device and subscribers for this anonymous group are generated when subscriber traffic from the SCMP peer device is detected. If a subscriber template has been assigned to the group, the anonymous subscribers generated have properties as defined by that template. If no subscriber template has been assigned, the default template is used.

If Gx or None option is not configured, the Cisco SCE sends the anonymous group to the Subscriber Manager.

You must define the specified SCMP peer device before assigning the anonymous group (see **scmp name**).

The **no** form of the command has three options:

- Delete the specified anonymous subscriber group definition: **no subscriber anonymous-group name** ***group-name***
- Remove the specified anonymous subscriber group from the specified SCMP destination: **no subscriber anonymous-group name** ***group-name*** **scmp**
- Delete all anonymous subscriber group definitions: **no subscriber anonymous-group all**

Authorization: admin

Examples

The following example shows how to assign an anonymous group to an IPv6 range and also assign a template:

```
SCE8000> enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)# interface linecard 0
SCE8000(config if)# subscriber anonymous-group name anon_group IPv6-range
10:10:10:10::0/64 template 2
SCE8000(config if)#
```

The following example shows how to assign an anonymous group to an IPv4 range and also assign a template:

```
SCE8000> enable 10
Password:<cisco>
SCE8000# configure
SCE8000(config)# interface linecard 0
SCE8000(config if)#subscriber anonymous-group name anon_group IP-range 10.10.10.0/8
template 2
SCE8000(config if)#
```

The following example shows how to assign an anonymous group to an SCMP device:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)#scmp name peer_device1 radius radius1 secret abcdef
```

```
SCE8000(config)# interface linecard 0
SCE8000(config if)#subscriber anonymous-group name anon_group IP-range 10.10.10.0/8 scmp
name peer_device1
SCE8000(config if)#
```

The following example shows how to remove an anonymous group from an SCMP device:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)# interface linecard 0
SCE8000(config if)#no subscriber anonymous-group name anon_group scmp
SCE8000(config if)#
```

The following example shows how to assign an anonymous group to a Gx:

```
SCE8000#> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# interface LineCard 0
SCE8000(config if)# subscriber anonymous-group name test IP-range 10.10.10.0/24 Gx
SCE8000(config if)#
```

The following example shows how to assign an anonymous group to an SCE:

```
SCE8000#> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# interface LineCard 0
SCE8000(config if)# subscriber anonymous-group name test IP-range 10.10.10.0/24 None
SCE8000(config if)#
```

The following example shows how to remove all currently defined anonymous groups:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(config)# interface linecard 0
SCE8000(config if)# no subscriber anonymous-group all
SCE8000(config if)#
```

subscriber capacity-options

To override the capacity option when loading the SCA BB application, use the **disable** form of this command.

To reenable the capacity option, use the **enable** form of this command.

subscriber capacity-options {enable | disable}

Syntax Description This command has no arguments or keywords.

Command Default The capacity option is enabled.

Command Modes Interface Linecard Configuration

Command History This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines You must first define the maximum number of subscribers using the **subscriber max-subscribers** command**.**

You must override the capacity option before installing the pqi file.

If you have disabled the capacity option but want to use it the next time you load a new application, you must reenable the option before you load the application file.

Caution If you have applied a policy configuration (PQB file) to the Cisco SCE platform, you must retrieve it and save it before loading an application file. Then reapply it after the executing the command and loading the PQI file. (PQB files are managed from the SCA BB console.)

Authorization: admin

Examples The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#subscriber max-subscribers 500K
SCE8000(config if)#subscriber capacity-options disable
SCE8000(config if)#pqi install file mov2008.pqi
```

Related Commands

Command	Description
subscriber max-subscribers	Specifies the maximum number of subscribers.
show interface linecard subscriber max-subscribers	Displays the maximum number of subscribers.

subscriber downstream-split-flow-pull

To enable downstream split-flow pull request, use the subscriber **downstream-split-flow-pull** command in linecard interface configuration mode. Use the **no** form of this command to disable downstream split-flow pull request.

subscriber downstream-split-flow-pull

no subscriber downstream-split-flow-pull

Syntax Description

downstream-split-flow-pull	Enables downstream split-flow pull request.

Command Default

Downstream split-flow pull request is enabled by default.

Command Modes

Linecard Interface Configuration.

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to disable downstream split-flow pull request**:**

```
SCE8000#>
SCE8000#>config
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>no subscriber downstream-split-flow-pull
SCE8000(config if)#>end
```

subscriber export csv-file

To export subscribers to a specified CSV file, use the **subscriber export csv-file** command in the interface linecard configuration mode. Use the keyword **all** to export all the subscribers that are introduced statically and dynamically.

subscriber export csv-file *filename* **[all]**

subscriber export csv-file *filename*

Note Exports only the static subscribers when the keyword **all** is not used.

Syntax Description

filename	Name of the CSV file to which the subscriber information is to be exported.
all	Exports both the static and dynamic subscribers to the specified file.

Command Default

None

Command Modes

Interface linecard configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.7.x	This command was modified.
3.8.5	This command was modified to support IPv6 subscribers.

Usage Guidelines

Subscriber CSV files are application-specific. Refer to the relevant application documentation for the definition of the file format.

- Subscribers introduced statically and dynamically by the Subscriber Manager (SM), Service Control Engine(SCE) subscriber API, or Service Control Management Protocol(SCMP) integration are exported.
- Subscribers imported using the **subscriber import** CLI command are exported.

To export the subscribers managed by the SM, the SM GUI, or Command-Line Utilities (CLU) should be used. (For more information about exporting the subscribers managed by SM, the SM GUI or CLU, See the *Cisco Service Control Management Suite Subscriber Manager User Guide*.)

The authorization used is admin.

Note This command is not applicable to IPv6 subscribers.

Examples

The following example shows how to export all the subscribers to a specified file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber export csv-file gold_subscribers_04072003.csv all
SCE8000(config if)#
```

The following example shows how to export only the static subscribers to a specified file:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber export csv-file gold_subscribers_04072003.csv
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber import csv-file	Imports subscribers from the specified CSV file.

subscriber Gx-pull-request-disable

Disables the Gx pull request.

subscriber Gx-pull-request disable

no subscriber Gx-pull-request-disable

Syntax Description

This command does not have any argument.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to use the command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber gx-pull-request-disable
SCE8000(config if)#
```

Related Commands

None

subscriber ip-linger-stats

To view the configured linger time and flow details, use the **subscriber ip-linger-stats** command in the linecard interface configuration mode.

subscriber ip-linger-stats

Syntax Description

This command has no arguments or keywords.

Command Modes

Linecard interface configuration (configure-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.0	This command was introduced.

Usage Guidelines

Use the **subscriber ip-linger-stats** command to view the configured linger time if the subscriber lingering option is enabled.

Examples

The following example shows how to view the configured linger time and flow details**:**

```
SCE8000(configure)# interface linecard 0
SCE8000(configure if)# subscriber ip-linger-stats

IP lingering option is enabled
Configured linger time is 240 seconds

Linger time flows:
====================
Traffic Processor 1   :   0
Traffic Processor 2   :   2
Traffic Processor 3   :   5
```

subscriber ip-linger-time

To configure the linger time for subscribers, use the **subscriber ip-linger-time** command in the linecard interface configuration mode.

subscriber ip-linger-time *linger-time*

Syntax Description

linger-time	Linger time, in seconds.

Command Default

By default, the subscriber lingering option is disabled.

Command Modes

Linecard interface configuration (configure-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

If this option is enabled, configuring 0 seconds disables this option. The maximum linger time that is allowed is 86400 seconds (1 day).

Authorization: admin

Examples

The following example shows how to configure linger time**:**

```
SCE8000#
SCE8000# configure
SCE8000(configure)# interface linecard 0
SCE8000(configure if)# no subscriber ip-linger-time 10
SCE8000(configure if)# end
```

subscriber import csv-file

To import subscribers from the specified CSV file, use the **subscriber import csv-file** command in the linecard interface configuration mode.

subscriber import csv-file *filename* **[***additivemapping***]**

Syntax Description

filename	Name of the CSV file containing the subscriber information.
additivemapping	Imports the subscriber information from the specified file and appends the new subscriber mapings with the existing ones.

Command Default

None

Command Modes

Linecard interface configuration (configure-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.
3.8.5	The command was modified. Support for IPv6 and the *additivemapping* syntax were added.

Usage Guidelines

Subscriber CSV files are application-specific. Refer to the relevant application documentation for the definition of the file format.

A maximum of 80,000 static subscribers can be imported for each import operation. To import more than this limit, divide the subscribers into several CSV files and import each file separately.

Authorization: admin

Examples

The following example shows how to import subscribers from the **gold_subscribers.csv** file**:**

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(configure)# interface linecard 0
SCE8000(configure if)# subscriber import csv-file gold_subscribers.csv
SCE8000(configure if)#
```

Related Commands

Command	Description
subscriber export csv-file	Exports the subscribers to the specified CSV file.

subscriber load property-file

To load the subaware.pro file, use the **subscriber load property-file** command in the linecard interface configuration mode.

subscriber load property-file

Syntax Description

This command has no argument.

Command Default

By default, the subaware.pro file contains only the IPv4 subscribers and loading this file using the **subscriber load property-file** command without modifying file only imports the IPv4 subscribers.

Command Modes

Linecard interface configuration (configure if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.5	This command was introduced.

Usage Guidelines

From Cisco SCE Release 3.8.5, you can import and export IPv6 subscribers. Before importing or exporting IPv6 subscribers, modify the subaware.pro file located at /apps/data/scos/system/p3hidden/um/ssu/.

Examples

The following example shows how to load the subaware.pro file:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# configure
SCE8000(configure)# interface linecard 0
SCE8000(configure if)# subscriber load property-file

Subaware.pro property file loaded successfully.
```

subscriber max-subscribers

Specifies the maximum number of subscribers.

subscriber max-subscribers [*subscriber-number*]

Syntax Description

subscriber-number	Maximum number of subscribers. Choose either **100K**, **250K**, **500K**, or **1M**.

Command Default

The default number of subscribers is 250,000 (250K).

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

For this maximum number to take effect, you must also:

1. Disable the capacity option (see **subscriber capacity-options).**
2. Load a new application (see **pqi install**).

Caution If you have applied a policy configuration (PQB file) to the Cisco SCE platform, you must retrieve it and save it before loading an application file. Then reapply it after the executing the command and loading the PQI file. (PQB files are managed from the SCA BB console.)

Authorization: admin

Examples

The following example shows how to use this command:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#subscriber max-subscribers 500K
SCE8000(config if)#subscriber capacity-options disable
SCE8000(config if)#pqi install file mov2008.pqi
```

Related Commands

Command	Description
subscriber capacity-options	Overrides the capacity option when loading the SCA BB application.
show interface linecard subscriber max-subscribers	Displays the maximum number of subscribers.

subscriber name property name

Assigns a value to the specified property of the specified subscriber.

subscriber name *subs-name* **property name** *property-name* **value** *property-val*

Syntax Description

subs-name	Name of the subscriber.
property-name	Subscriber property for which the value is to be assigned.
property-val	Value to be assigned.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

This command can be used to enable or disable the generation of the real-time subscriber usage RDRs (see the example).

- To enable RDR generation, set *property-name* to monitor and *property-val* to 1.
- To disable RDR generation, set *property-name* to monitor and *property-val to* 0.
- To enable subscriber monitoring for a group of subscribers, create a text file containing the sequence of CLI commands, including the commands to access the appropriate CLI mode. The file might look like this:

```
configure
interface linecard 0
subscriber name Jerry property name monitor value 1
subscriber name George property name monitor value 1
subscriber name Elaine property name monitor value 1
subscriber name Kramer property name monitor value 1
subscriber name Newman property name monitor value 1
```

Use the **script run** command to run the script.

Authorization: admin

Examples

The following example shows how to disable the generation of the real-time subscriber usage RDRs for subscriber jane_smith:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#subscriber name jane_smith property name monitor value 0
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard subscriber name	Displays information about a specified subscriber.

subscriber sm-connection-failure

Configures the behavior of the system if communication fails between the SM and the Cisco SCE platform.

subscriber sm-connection-failure {warning | action {force-failure | none | remove-mappings | shut}}

subscriber sm-connection-failure timeout *timeout*

default subscriber sm-connection-failure

Syntax Description

timeout	Timeout interval, in seconds, after which a failure condition is detected that the specified action is taken by the system.
warning	Sets the system operational status to "warning" when the link is down.
action	Requests the system to respond in a certain way depending on which of the options is specified (**force-failure**, **none**, **remove-mappings**, or **shut**).
force-failure	Forces failure of the Cisco SCE platform in the event of any loss of connection with the SM. the Cisco SCE platform then acts according to the behavior configured for the failure state.
none	No action needs to be taken in the event of any loss of connection between the Cisco SCE platform and the SM.
remove-mappings	Removes all current subscriber mappings in the event of any loss of connection between the Cisco SCE platform and the SM.
shut	SCE platform shuts down and quits providing service.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.3	This command was introduced.

Usage Guidelines

If SM functionality is not critical to the operation of the system, no action needs to be configured.

If SM functionality is critical to the operation of the system, configure forced failure of the Cisco SCE platform in the event of any loss of connection with the SM.

If no action is required, you may want to configure the system operational status to be set to "warning" when communication is lost. Use the **warning** keyword for this option.

Authorization: admin

Examples

The following example shows how to configure forced failure of the Cisco SCE platform if the SM fails:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE (config if)#subscriber sm-connection-failure action force-failure
SCE (config if)#
```

The following example shows how to set the timeout interval to 2 minutes (120 seconds):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE (config if)#subscriber sm-connection-failure timeout 120
SCE (config if)#
```

Related Commands

Command	Description
show interface linecard subscriber sm-connection-failure	Displays the current state of the SM-SCE platform connection, as well as the configured action to take if that connection fails.

subscriber template export csv-file

Exports a subscriber template to the specified CSV file, according to the party template.

subscriber template export csv-file *filename*

Syntax Description

filename	Name of the CSV file to which the subscriber template is to be exported.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to export the subscriber template to the specified file:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber template export csv-file gold0507.csv
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber template import csv-file	Imports a subscriber template from the specified CSV file, creating a party template.

subscriber template import csv-file

Imports a subscriber template from the specified CSV file. Importing the template creates a party template.

subscriber template import csv-file *filename*

Syntax Description

filename	Name of the *CSV* file containing the subscriber template.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to import the subscriber template from the file *gold0507.csv:*

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)#interface linecard 0
SCE8000(config if)# subscriber template import csv-file gold0507.csv
SCE8000(config if)#
```

Related Commands

Command	Description
subscriber template export csv-file	Exports a subscriber template to the specified CSV file, according to the party template.

subscriber TP-IP-range

To add or update an IP range for a traffic processor, use the **subscriber TP-IP range** command.

Use the **no** forms of the command to remove subscriber mappings in the IPv4 and IPv6 range, or to not allow removing the range if any matching subscriber mapping exist in the range.

subscriber TP-IP-range name *range-name* **IPv6-range** *ipv6-address/mask-length* **target**-TP *TP-num* [**remove-subscriber-mappings**]

no subscriber TP-IP-range name *range-name* [**remove-subscriber-mappings**]

no subscriber mapping included-in TP-IP-range name *range-name*

no subscriber mapping included-in IP-range *ipv6-address/prefix-length*

Syntax Description

range-name	The name of the IP range.
ipv6-address/mask-length	IPv6 address and length of the mask.
target-TP	Specifies the target traffic processor.
TP-num	The number corresponding the traffic processor.
remove-subscriber-mappings	Specifies to remove the subsriber mappings if any matching subscriber mapping exists in the range.

Command Default

None.

Command Modes

Interface Line Configuration (configif #)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

While adding or updating an IP range for a Traffic Processor, if the new IPv6 range clashes with an existing TP IP range, the Cisco SCE rejects the new IP range. Optionally, you can remove the subscriber mappings in the IP range. You can also configure the Cisco SCE to reject the new IPv6 range if there is a matching subscriber mappings exist.

Authorization: admin

Examples

The following example illustrates how to add or update an IP range for a Traffic Processor:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# subscriber TP-IP-range name 'range-name' IPv6-range 'ipv6-address/mask-length'
target-TP 'TP-num' [remove-subscriber-mappings]

Number of Subscribers that had mappings in the TP IP range(s): 1.
```

Related Commands

Command	Description
show interface LineCard *slot* **subscriber {mapping included-in TP-IP-range name** *range-name* **| amount mapping included-in TP-IP-range name** *range-name*}	To view the subscriber mapping details pertaining to a specific IPv4 and IPv6 traffic processor IP range

subscriber TP-IP-range export csv-file

To export all IPv4 and IPv6 ranges configured for a Traffic Processor, use the **subscriber TP-IP-range export csv-file** command.

subscriber TP-IP-range export csv-file *csv-file-name*

Syntax Description

csv-file	Specifies the name of the csv file.
csv-file-name	The name of the csv file.

Command Default

None.

Command Modes

Interface Linecard Configuration (configif#)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

The format in which the details of the range is exported is:

"'range-name','ipv4-address/mask or ipv6-address/prefix-length','target-TP'"

Authorization: admin

subscriber TP-IP-range import csv-file

To import IPv4 and IPv6 ranges for a Traffic Processor or to remove subscriber mappings in IPv4 or IPv6 ranges, use the **subscriber TP-IP-range import csv-file** command.

subscriber TP-IP-range import csv-file *csv-file-name* [**remove-subscriber-mappings**]

Syntax Description

csv-file-name	Name of the csv file.
remove-subscriber-mappings	Specifies to remove the existing subscriber mappings.

Command Default

None.

Command Modes

Interface Linecard Configuration (configif #)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.8.0	This command was introduced.

Usage Guidelines

The range details are imported incrementally in relationg to already existing IPv4 and IPv6 ranges. You can use the command to remove the subscriber mappings in any of IPv4 or IPv6 ranges. You can also use this command to prevent adding or updating of any of the IPv4 or IPv6 ranges that have any matching subscriber mappings.

Authorization: admin

subscriber virtual-gi-mode

Enables the virtual Gi mode.

To disable the virtual Gi mode, use the **no** form of this command.

subscriber virtual-gi-mode

no subscriber virtual-gi-mode

Syntax Description

This command has no arguments or keywords.

Command Default

Virtual Gi mode is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You can enable the mapping of VLAN ID to virtual Gi ID using the **subscriber virtual-gi-mode** command. When this command is enabled, SCE maps the VLAN ID that is in the range of 1-4094 to a virtual Gi ID that is in the range of 1-255.

The PCRF server uses the virtual Gi ID to fetch the policy corresponding to the VLAN ID that is retrieved from the subscriber traffic.

Authorization: admin

Examples

The following example shows how to enable TACACS+ accounting for the admin privilege level (10):

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)# interface Linecard 0
SCE8000(config-if)#subscriber virtual-gi-mode
SCE8000(config-if)#
```

Related Commands

Command	Description
diameter gx virtual-gi vlan-id	Configures the mapping of VLAN ID and virtual Gi ID.
VLAN symmetric classify	Specifies the VLAN tag as subscriber.

tacacs-server host

Defines a new TACACS+ server host that is available to the Cisco SCE platform TACACS+ client. The Service Control solution supports a maximum of three TACACS+ server hosts.

To remove a TACACS+ server host, use the **no** form of this command.

tacacs-server host *hostname* **[port [***port-number***]] [timeout** *[timeout-interval]***] [key [***key-string***]]**

no tacacs-server host *hostname*

Syntax Description

hostname	Name of the server.
port-number	TACACS+ port number.
timeout-interval	Time, in seconds, that the server waits for a reply from the server host before timing out.
key-string	Encryption key that the server and client will use when communicating with each other. Make sure that the specified key is actually configured on the TACACS+ server host.

Command Default

The default port number is 49.

The default timeout interval is either 5 seconds or the user-configured global default timeout interval.

The default encryption key is either no key or the user-configured global default key.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

You can configure a global default timeout interval that applies as the timeout to all TACACS+ server hosts. The timeout interval does not need to be configured explicitly for each server. (See **tacacs-server timeout.**)

Similarly, you can configure a global default key that applies to all TACACS+ server hosts. (See **tacacs-server key.**)

If the global default timeout interval and key string are configured, an explicitly configured value for a specific TACAS+ server overrides the global default for that server.

Authorization: admin

Examples

The following example shows how to configure a TACACS+ server host using the default port and no key:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#tacacs-server host server1 timeout 8
SCE8000(config)#
```

Related Commands

Command	Description
tacacs-server key	Defines the global default encryption key for the TACACS+ server hosts.
tacacs-server timeout	Defines the global default timeout interval for the TACACS+ server hosts.
show tacacs	Displays statistics for the TACACS+ servers.

tacacs-server key

Defines the global default encryption key for the TACACS+ server hosts.

To clear the TACACS+ key, use the **no** form of this command.

tacacs-server key *key-string*

no tacacs-server key

Syntax Description

key-string	Default encryption key that all TACACS servers and clients will use when communicating with each other. The specified key must be configured on the TACACS+ server hosts.

Command Default

The default is no encryption.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

This default key can be overridden for a specific TACACS+ server host by explicitly configuring a different key for that TACACS+ server host.

If no global default key is defined, each TACACS+ server host may still have a specific key defined. However, any server host that does *not* have a specific key defined (uses the global default key) is now configured to not use a key.

Authorization: admin

Examples

The following example shows how to configure the key string:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#tacacs-server key ABCDE
SCE8000(config)#
```

Related Commands

Command	Description
tacacs-server host	Defines a new TACACS+ server host that is available to the Cisco SCE platform TACACS+ client.
tacacs-server timeout	Defines the global default timeout interval for the TACACS+ server hosts.
show tacacs	Displays statistics for the TACACS+ servers.

tacacs-server timeout

Defines the global default timeout interval for the TACACS+ server hosts.

To clear the global default timeout interval, use the **no** form of this command.

tacacs-server timeout *[interval]*

no tacacs-server timeout

Syntax Description

interval	Default time, in seconds, that the server waits for a reply from the server host before timing out.

Command Default

The default interval is 5 seconds.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

This default timeout interval can be overridden for a specific TACACS+ server host by explicitly configuring a different timeout interval for that TACACS+ server host.

If no global default timeout interval is defined, each TACACS+ server host may still have a specific timeout interval defined. However, any server host that does not have a timeout interval explicitly defined (uses the global default timeout interval) is now configured to a 5-second timeout interval.

Authorization: admin

Examples

The following example shows how to configure a default timeout interval of 10 seconds:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000>(config)#tacacs-server timeout 10
SCE8000(config)#
```

Related Commands

Command	Description
tacacs-server host	Defines a new TACACS+ server host that is available to the Cisco SCE platform TACACS+ client.
tacacs-server key	Defines the global default encryption key for the TACACS+ server hosts.
show tacacs	Displays statistics for the TACACS+ servers.

telnet

Starts a Telnet session.

telnet *address [port-number]*

Syntax Description

address	Telnet access address.
port-number	Optional port number.

Command Default

The default port number is 23.

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to start a Telnet session:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#telnet 10.1.5.120
connecting to 10.1.5.120:23...
```

Related Commands

Command	Description
show telnet sessions	Displays any active Telnet sessions.
service telnetd	Enables the Telnet daemon.

timeout

Configures the timeout for the Telnet session when the Telnet session is idle. After this time, the Telnet session is disconnected.

To configure the Telnet server to work without a timeout, use the **no** form of this command. The system will not automatically disconnect the Telnet session, regardless of how long the session has been inactive.

timeout [*time]*

no timeout

Syntax Description

time	Timeout length, in minutes.

Command Default

The default timeout is 30 minutes.

Command Modes

Line Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to set the timeout to 45 minutes:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#line vty 0
SCE8000(config-line)#timeout 45
SCE8000(config-line)#
```

Related Commands

Command	Description
telnet	Starts a Telnet session.

tracert

Determines the route that packets take to reach a specified host.

tracert {*hostname* | *ip-address*}

Syntax Description

hostname	Destination hostname.
ip-address	Destination IP address.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The destination of the traceroute function can be specified as either a known hostname or an IP address.

Authorization: admin

Examples

```
The following example shows output from this command:

SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#tracert 64.103.125.118
traceroute to 10.56.217.103, 30 hops max, 40 byte packets
1  10.56.217.1 ( 10.56.217.1) 0 ms 1 ms 0 ms
2  10.56.223.9 ( 10.56.223.9) 1 ms 0 ms 1 ms
3 64.103.115.209 ( 64.103.115.209) 0 ms 1 ms 0 ms
4 64.103.125.118 ( 64.103.125.118) 0 ms 0 ms 0 ms
Trace complete.
SCE8000(config if)#
```

Related Commands

Command	Description
show ip route	Displays the entire routing table and the destination of last resort (default gateway).

traffic-counter

Defines a new traffic counter.

To delete an existing traffic counter, use the **no** form of this command.

traffic-counter name *name* **{count-bytes | count-packets}**

no traffic-counter {name *name* **| all}**

Syntax Description

name	Name to be assigned to this traffic counter.
count-bytes	Enables counting the bytes in each packet. The counter increments by the number of bytes in each packet.
count-packets	Enables counting whole packets. The counter increments by one for each packet.
all	Used with the **no** form of the command, deletes all existing traffic counters.

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to create a traffic counter that counts bytes:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#traffic-counter name counter1 count-bytes
SCE8000(config if)#
```

The following example shows how to delete all traffic counters:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no traffic-counter all
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard traffic-counter	Displays the specified traffic counter.
clear interface linecard traffic-counter	Clears the specified traffic counter.

traffic-rule ip addresses

Defines a new traffic rule.

To delete an existing traffic rule, use the **no** form of this command. To delete all existing traffic rules, use the **all** keyword with the **no** form of the command.

traffic-rule name *name* **IP-addresses** *ip-addresses* **protocol** *protocol* **[port** *port-id*] **[tunnel-id** *tunnel-id*] **direction** *direction* **traffic-counter name** *traffic-counter* **action** *action*

traffic-rule tunnel-id-mode

no traffic-rule {name *name* **| all | tunnel-id-mode}**

no traffic-rule capture

Syntax Description

name	Name to be assigned to this traffic rule.
ip-addresses	Subscriber-side and network-side IP specification. (See Usage Guidelines.)
protocol	One of the following protocols: **TCP, UDP, ICMP, IGRP, EIGRP, IS-IS, OSPF, or all.**
port-id	(TCP or UDP only) Defines a port or range of ports for each side (subscriber and network). (See Usage Guidelines.)
tunnel-id	ID of the tunnel. (See Usage Guidelines.)
direction	Choose **upstream**, **downstream**, or **both**.
traffic-counter	Name of the traffic counter or **none**.
action	Action to be performed on flows that meet the rule criteria. (See Usage Guidelines.)

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The following usage guidelines apply to the **traffic-rule** command.

IP specification

all | ([**all-but**] (*ip-address* | *ip-range*))

- *ip-address* is a single IP address in dotted-decimal notation (such as 10.1.2.3).

- *ip-range* is an IP subnet range, in dotted-decimal notation followed by the number of significant bits (such as 10.1.2.0/24).

Port specification

all | ([**all-but**] [*port-number*] [*port-range*])

- Specify the port or port range for both the subscriber side and the network side.
- Specify a range of ports using the format *minport*:*maxport*.
- Specify ports only if the protocol is either TCP or UDP.

Tunnel ID specification

all | ([**all-but**] *tunnel-id*) '

- *tunnel-id* is a hexadecimal tunnel-ID range, in the format '(HEX)*tunnel-id*' or '(HEX)*min-tunnel-id*:(HEX)*max-tunnel-id*

To enable or disable defining the traffic rule according to the tunnel ID, use the **tunnel-id-mode** keyword.

Traffic counter name

Specify either:

- **Name of an existing traffic counter**—Packets meeting the criteria of the rule are to be counted in the specified counter.

  If a counter name is defined, the "count" action is also defined implicitly.
- **none**—An action must be explicitly defined with the **action** keyword.

Action

Specify one of the following options:

- **block**—Blocks the specified traffic.
- **ignore**—Bypasses the specified traffic. The traffic receives no service.
- **quick-forwarding**—Quick forwards (duplicates) delay-sensitive packets with service.
- **quick-forwarding-ignore**—Quick forwards (duplicates) delay-sensitive packets with no service.
- **Flow-capture**—Captures the flow matching the configured rule. This flow receives no service.

  Use the **no traffic-rule capture** command to delete all current flow-capture rules.

Authorization: admin

Examples

The following examples show how to use this command.

Example 1

The following example shows how to create a traffic rule called rule2:

- Name = rule2
- IP addresses: subscriber side = all IP addresses, network side = all IP addresses *except* the subnet address 10.10.10.0/24
- Protocol = TCP
- subscriber-side port = 100

- network-side ports = all-but 200
- Direction = downstream
- Traffic counter = counter2
- Action = block

The actions performed will be counting and blocking.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# traffic-rule name rule2 ip-addresses subscriber-side all network-side
all-but 10.10.10.0/24 protocol tcp ports subscriber-side 100 network-side all-but 200
direction downstream traffic-counter name counter2 action block
SCE8000(config if)
```

Example 2

The following example shows how to create a traffic rule called rule3:

- Name = rule3
- IP addresses: all
- Protocol = IS-IS
- Direction = upstream
- Traffic counter = none
- Action = ignore (required because traffic-counter = none)

The only action performed will be **ignore.**

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# traffic-rule name rule3 ip-addresses all protocol is-is direction
upstream traffic-counter name none action ignore
SCE8000(config if)
```

Example 3

The following example shows how to delete all traffic rules:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# no traffic-rule all
SCE8000(config if)
```

Example 4

The following example shows how to configure a traffic rule that will be used as a recording rule using the **flow-capture** option. All flows that match this rule will be recorded when the flow-capture process is in operation.

- Name = FlowCaptureRule
- IP addresses: subscriber side = all IP addresses, network side = all IP addresses
- Direction = both
- Protocol = 250

- Traffic counter name = counter2
- Action = flow-capture

The actions performed will be counting and flow capture.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#traffic-rule name FlowCaptureRule ip-addresses subscriber-side all
network-side all protocol 250 direction both traffic-counter name counter2 action
flow-capture
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard traffic-rule	Displays the specified traffic rule configuration.

traffic-rule ipv6

To define a new traffic rule with IPv6 IP address, use the **traffic-rule ipv6** command in interface linecard configuration mode.

To delete an existing traffic rule, use the **no** form of this command. To delete all the existing traffic rules, use the **all** keyword with the **no** form of this command.

traffic-rule name *name* **ipv6 IP-addresses** *ip-addresses* **protocol** *protocol* **[port** *port-id***]** **[tunnel-id** *tunnel-id***]** **direction** *direction* **traffic-counter name** *traffic-counter* **action** *action*

traffic-rule tunnel-id-mode

no traffic-rule {name *name* **| all | tunnel-id-mode}**

no traffic-rule capture

Syntax Description

name	Name to be assigned to a traffic rule.
ip-addresses	Subscriber-side and network-side IP specifications. (For more information about this, see the Usage Guidelines.)
port-id	TCP or UDP. Defines a port for each side. (For more information about this, see the Usage Guidelines.)
tunnel-id	ID of a tunnel.
direction	**upstream**, **downstream**, or **both**.
traffic-counter	Name of a traffic counter or **none**.
action	Action to be performed on the flows that meet the rule criteria. (For more information about this, see the Usage Guidelines.)

Command Default

None

Command Modes

Interface linecard configuration (config-if)

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.5	This command was introduced.

Usage Guidelines

The following usage guidelines apply to the **traffic-rule** command:

IP Specification

all | (*ip-address* | *ip-prefix*)

- *ip-address* is a single IP address in the Classless Inter-Domain Routing (CIDR) notation in the format A:B:C:D:E:F:G:H/I

- *ip-range* is an IP subnet range in the CIDR notation followed by the number of significant bits (such as 2001:DB8:0:1:FFFF:1234::5).

Protocol

Any one of the following:

- TCP
- UDP
- all

Port Specification

port

- Specify a port only if the protocol is either TCP or UDP.
- Specify a port for both the subscriber side and the network side.
- Create multiple rules if you plan to use multiple ports.

Direction

Any of the following:

- Upstream
- Downstream
- both

Traffic Counter Name

Specify either:

- **name of an existing traffic counter**—Packets that meet the criteria of the rule are to be counted in the specified counter.

  If a counter name is defined, the *count* action is also defined implicitly.
- **none**—An action must be explicitly defined with the **action** keyword.

Action

Specify one of the following options:

- **block**—Blocks the specified traffic.
- **classical-open-flow-mode**—Use the classical open flow mode for the specified flow.
- **ignore**—Bypasses the specified traffic. The traffic receives no service.

Authorization: admin

Examples

The following examples show how to use this command.

Example 1

The following example shows how to create a traffic rule called rule2:

- Name — rule2
- IP addresses — subscriber side — all, network side — all
- Protocol — TCP

- subscriber-side port — 100
- network-side port — 200
- Direction — downstream
- Traffic counter — counter2
- Action — block

The actions that will be performed by this command are counting and blocking.

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)# interface linecard 0
SCE8000(config if)# traffic-rule name rule2 ipv6 subscriber-side all network-side all
protocol tcp ports subscriber-side 100 network-side 200 direction downstream
traffic-counter name counter2 action block
SCE8000(config if)
```

Example 2

The following example shows how to delete all the traffic rules:

```
SCE8000> enable 10
Password: <cisco>
SCE8000# config
SCE8000(config)# interface linecard 0
SCE8000(config if)# no traffic-rule all
SCE8000(config if)
```

Related Commands

Command	Description
show interface linecard traffic-rule	Displays the specified traffic rule configuration.

traffic-side (SCE 8000 10G platform only)

Changes the traffic direction on Link 1 of the Cisco SCE 8000 10G platform.

Note This command is supported only on10 Gigabit Ethernet line interfaces 3/2/0 and 3/3/0. It is not supported on interfaces 3/0/0 and 3/1/0.

Use the **default** form of the command to reset the interface to the default traffic direction.

traffic-side (subscriber | network)

default traffic-side

Syntax Description

subscriber	Configure the interface to process subscriber traffic.
network	Configure the interface to process network traffic.

Command Default

- 3/2/0: subscriber
- 3/3/0: network

Command Modes

TenGigabitEthernet Interface Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.6.x	This command was introduced.

Usage Guidelines

The hardware design of the Cisco SCE 8000 10G platform is such that the traffic coming in and out of SPAs 0 and 2 is limited to a total of 16Gbps in each direction, as is the traffic coming in and out of SPAs 1 and 3. Since by default, in 10GBE installations, SPAs 0 and 2 are subscriber-side ports, and SPAs 1 and 3 are network-side ports, this effectively limits total traffic in each direction (upstream and downstream) to 16Gbps. Therefore, a site that has a total of more than 16Gbps of traffic in one direction (upstream or downstream), will exceed this limit and suffer packet loss.

You can use this command to swap the roles of the ports on link 1, which will switch part of the high-volume traffic to the opposite pair of SPAs and prevent either pair of SPAs from exceeding the 16Gbps limit.

Limitations

- This command is supported only Link 1 (3/2/0 and 3/3/0). It is not supported on Link 0.

  Only one interface on the link is explicitly configured. The corresponding interface is automatically set to the opposite traffic side.
- The connection mode must be either inline or receive-only. This command is not supported for cascade modes.

- This command can only be executed when no application is loaded, or in shutdown mode.

Authorization: admin

Examples

Example 1

The following example illustrates how to reverse the traffic direction on link 1 on the Cisco SCE 8000 10G platform.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface TenGigabitEthernet 3/2/0
SCE8000(config if)#traffic-side network
SCE8000(config if)#
```

Example 2

The following example illustrates how to reset the traffic direction to the default.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface TenGigabitEthernet 3/2/0
SCE8000(config if)#default traffic-side
SCE8000(config if)#
```

Related Commands

Command	Description
show interface TenGigabitEthernet	Displays the current configuration for the specified interface.

tunable value

To enable and disable a tunable and set a value for a tunable in the Cisco SCE platform, use the **tunable value** command in the global configuration mode.

tunable *tunable-name* **value** *value*

Syntax Description

tunable -name	Defines the name of the tunable.
value	The tunable value can either be a boolean or an integer. The value range is from 0 to 65535 in case of integers.

Command Default

The default value differs based upon the tunables.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

A tunable is disabled only if the value is set to false. If not, the tunable will continue to be enabled.

The authorization used is root.

Examples

The following example shows how to enable a tunable from the interface linecard configuration mode:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>configure ter
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>tunable tunable-name value true
SCE8000(config if)#>
```

The following example shows how to enter a value for a tunable from th e interface linecard configuration mode:

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>configure ter
SCE8000(config)#>interface linecard 0
SCE8000(config if)#>tunable tunable-name value 255
```

Related Commands

Command	Description
show applications slot *slot-number* **{tunable** *tunable-name* **| all-tunables}**	Displays the status of a tunable in the Cisco SCE platform.

unzip

Extracts a zip file to the current directory.

unzip *filename*

Syntax Description

filename	Zip file to be extracted.

Command Default

None

Command Modes

Privileged EXEC

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to extract the file zipfile.zip:

```
SCE8000>enable 10
Password:cisco>
SCE8000#unzip zipfile.zip
Unzipping '/system/zipfile.zip'...
Zip file has 3 entries:
1.sli, 13429 bytes extracted
preflut.sli, 12558 bytes extracted
temp/SLI/x/IpraeLut.sli, 12929 bytes extracted
Finished, Extracted 3 files.
```

username

Adds a new user to the local database.

To remove a user from the database, use the **no** form of this command.

username *name* {**password** *password* | **nopassword** | **secret** {**0** *password* | **5** *password* }}

no username *name*

Syntax Description

name	Name of the user to be added.
password	Clear-text password.
nopassword	No password is associated with this user.
secret	Saves the password in MD5 encrypted form. The keywords **0** and **5** indicate the format of the password as entered in the command. See Usage Guidelines.

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Up to 100 users may be defined.

The password is defined with the username. You can use the following password options:

- No password—Use the **nopassword** keyword.
- Password—Password is saved in clear-text format in the local list. Use the **password** keyword.
- Encrypted password—Password is saved in encrypted (MD5) form in the local list. Use the **secret** keyword and either of the following options:
  - Specify a clear-text password (**0**), which is saved in MD5 encrypted form.
  - Specify an MD5 encryption string (**5**), which is saved as the user MD5-encrypted secret password.

The following keywords are available:

- **nopassword—**No password is associated with this user.
- **secret—**The password is saved in MD5 encrypted form. Use with either of the following keywords to indicate the format of the password as entered in the command:
  - **0** specifies a clear-text password that will be saved in MD5 encrypted form.

– **5** specifies an MD5 encryption string that will be saved as the user MD5-encrypted secret password.

Authorization: admin

Examples

The following example shows how to add a new user to the local database with a clear-text password:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#username johndoe password mypassword
SCE8000(config)#
```

The following example shows how to add a new user to the local database with no password:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#username johndoe nopassword
SCE8000(config)#
```

The following example shows how to add a new user to the local database with an MD5 encrypted password entered in clear text:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#username johndoe secret 0 mypassword
SCE8000(config)#
```

Related Commands

Command	Description
show users	Displays the users in the local database.
username privilege	Sets the privilege level for the specified user.

username privilege

Sets the privilege level for the specified user.

username *name* **privilege [***level]*

Syntax Description

name	Name of the user whose privilege level is set.
level	Privilege level permitted to the specified user. These levels correspond to the CLI authorization levels, which are entered with the **enable** command. Choose one of the following levels: **0** (user), **5** (viewer), **10** (admin), or **15** (root).

Command Default

The default level is 15.

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

When you request an authorization for a specified privilege level with the **enable** command, the Cisco SCE platform sends an authentication request to the TACACS+ server. The Cisco SCE platform grants the requested privilege level only after the TACACS+ server authenticates the **enable** command password and verifies that you have sufficient privileges to enter the requested privilege level.

Authorization: admin

Examples

The following example shows how to set the privilege level for the user to viewer:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#username johndoe privilege 5
SCE8000(config)#
```

Related Commands

Command	Description
show users	Displays the users in the local database.
username	Adds a new user to the local database.

vas-traffic-forwarding

Enables VAS traffic forwarding. Use the **no** form of the command to disable VAS traffic forwarding. Refer to the example below for complete instructions on how to disable VAS traffic.

vas-traffic-forwarding

no vas-traffic-forwarding

Syntax Description

This command has no arguments or keywords.

Command Default

By default, VAS traffic forwarding is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

There are certain other SCE platform features that are incompatible with VAS traffic forwarding. Before enabling VAS traffic forwarding, it is the responsibility of the user to make sure that no incompatible features or modes are configured.

The features and modes listed below cannot coexist with VAS mode:

- Line-card connection modes: receive-only, receive-only-cascade, inline-cascade
- Link mode other than forwarding
- All link encapsulation protocols, including VLAN, MPLS, L2TP

Authorization: admin

Examples

This example shows how to disable VAS traffic forwarding. You must first shutdown the linecard before disabling VAS forwarding, since there may still be some open flows that have already been forwarded to the VAS servers. If the VAS feature is stopped while there are still such flows open, their packets coming back from the VAS servers may be routed to their original destination with the VLAN tag of the VAS server on it.

Note that, although this command is an admin level command, you must enter the ROOT authorization level (15) to shutdown the linecard.

```
SCE8000>enable 15
Password:<cisco>
SCE8000#>config
SCE8000(config if)#>interface linecard 0
SCE8000(config if)#>shutdown
```

```
SCE8000(config if)#>no vas-traffic-forwarding
SCE8000(config if)#>no shutdown
SCE8000(config if)#>
```

Related Commands

Command	Description
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
vas-traffic-forwarding vas server-id health-check	Enables or disables the VAS health check, and defines the ports it should use.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding traffic-link

Configures the link on which to transmit VAS traffic (the link to which the VAS servers are connected). Use the **no** form of the command to remove the VAS link configuration and revert to the VAS link defaults.

vas-traffic-forwarding traffic-link {*link-0|link-1}*

no vas-traffic-forwarding traffic-link

Syntax Description

	Enter the link number on which to transmit VAS traffic • **Link-0** • **Link-1**

Command Default

Default traffic link = Link-1

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Note The VAS traffic link should be in Forwarding mode.

Authorization: admin

Examples

This example shows how to configure link 0 for VAS traffic.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vas-traffic-forwarding traffic-link link-0
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding vas server-id health-check

Enables or disables the VAS health check, and defines the ports it should use. Use the **UDP ports** keyword to define source and destination UDP ports to be used by the health check packets. Use the **no** form of this command to disable the health check. Use either the **no** or default form of this command with the **UDP ports** keyword to remove the UDP port configuration.

vas-traffic-forwarding vas server-id *number* health-check

vas-traffic-forwarding vas server-id *number* health-check udp ports source *port-number* destination *port-number*

no vas-traffic-forwarding vas server-id *number* health-check

no vas-traffic-forwarding vas server-id *number* health-check udp ports

default vas-traffic-forwarding vas server-id *number* health-check udp ports

Syntax Description

number	ID number of the VAS server for which to enable or disable the health check
port-number	source or destination port number (use with the **source** and **destination** options)

Command Default

By default, the health check is enabled.

Default port numbers = two port numbers for each server, starting with ports 63140 and 63141.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Use the **UDP ports** keyword to define source and destination UDP ports to be used by the health check packets.

Note that the health check is activated only if all the following conditions are true. If the health check is enabled but one or more of the following conditions are not met, the server state will be **Down** :

- VAS Traffic Forwarding mode is enabled
- Pseudo IPs are configured for the Cisco SCE platform GBE ports on the VAS traffic link
- VAS server is enabled
- Server has a VLAN tag
- Health check for the server is enabled

If the health check of the server is disabled, its operational status depends on the following (requirements for **Up** state are in parentheses):

- admin status (enable)
- VLAN tag configuration (VLAN tag defined)
- group mapping (assigned to group)

Authorization: admin

Examples

The following examples illustrate how to disable the health check, and how to define the UDP ports.

Example 1

This example shows how to disable the health check for VAS server 5.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no vas-traffic-forwarding vas server-id 5 health-check
SCE8000(config if)#
```

Example 2

This example shows how to define the source and destination ports for VAS server 5 and enable the health check.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vas-traffic-forwarding vas server-id 5 health-check udp ports source
63150
destination 63151
SCE8000(config if)#vas-traffic-forwarding vas server-id 5 health-check
SCE8000(config if)#
```

Example 3

This example shows how to remove the UDP port configuration using the **no** keyword.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no vas-traffic-forwarding vas server-id 5 health-check udp ports
SCE8000(config if)#
```

Example 4

This example shows how to remove the UDP port configuration using the **default** keyword.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#default vas-traffic-forwarding vas server-id 5 health-check udp ports
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding vas server-id vlan

Assigns the VLAN ID to a specified VAS server. Use the **no** form or the **default** form of this command to delete the VLAN tag assignment from a specified VAS server.

vas-traffic-forwarding vas server-id *number* vlan *vlan-number*

no vas-traffic-forwarding vas server-id *number* vlan

default vas-traffic-forwarding vas server-id *number* vlan

Syntax Description

number	The ID number of the VAS server
vlan-number	The VLAN tag to use for the specified VAS server

Command Default

Default vlan-number = No VLAN

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Note the following important points:

- The VAS server is not operational until the VLAN tag is defined.
- Disabling the server does not remove the VLAN tag number configured to the server.
- The **no** form of the command (same as the **default** form of the command), removes the previously configured VLAN tag (no VLAN is the default configuration).

Authorization: admin

Examples

The following example assigns the vlan id = 10 to server ID number = 4.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vas-traffic-forwarding vas server-id 4 vlan 10
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding vas server-group

Adds servers to and removes them from a specified VAS server group. Use the **no** form of this command to remove a specified server from the VAS server group.

vas-traffic-forwarding vas server-group *group-number* **server-id** *server-number*

no vas-traffic-forwarding vas server-group *group-number* **server-id** *server-number*

Syntax Description

group-number	The ID number of the VAS server group. (0-7)
server-number	The ID number of the VAS server. • SCE 8000: 0-63

Command Default

This command has no default settings.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The user may define up to eight VAS server groups. Each VAS server group has the following parameters:

- Server Group ID
- A list of VAS servers attached to this group.
- Failure detection — minimum number of active servers required for this group so it will be considered to be Active. If the number of active servers goes below this minimum, the group will be in Failure state.
- Failure action — action performed on all new data flows that should be mapped to this Server Group while it is in Failure state.

If no VAS server ID is specified in the **no** form of the command, all servers are removed from the server group and all group parameters (failure detection and action) are set to the default values (see **VAS-traffic-forwarding VAS server-group failure**).

Authorization: admin

Examples

The following examples illustrate how to add servers to and remove servers from a specified VAS server group.

Example 1

This example shows how to add VAS server 5 to VAS server group 1.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vas-traffic-forwarding vas server-group 1 vas server-id 5
SCE8000(config if)#
```

Example 2

This example shows how to remove VAS server 5 from VAS server group 1.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no vas-traffic-forwarding vas server-group 1 vas server-id 5
SCE8000(config if)#
```

Example 3

This example shows how to remove all VAS servers from VAS server group 1 and set all group parameters (failure detection and action) to the default values.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#no vas-traffic-forwarding vas server-group 1
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
vas-traffic-forwarding vas server-id health-check	Enables or disables the VAS health check, and defines the ports it should use.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding vas server-group failure

Configures the failure parameters for the specified VAS server group. Use either the **no** form or the **default** form of the command to set the specified failure parameter to the default value.

vas-traffic-forwarding vas server-group *group-number* failure minimum-active-servers *min-number*

vas-traffic-forwarding vas server-group *group-number* failure action {block | pass}

default vas-traffic-forwarding vas server-group *group-number* failure minimum-active-servers

no vas-traffic-forwarding vas server-group *group-number* failure minimum-active-servers

default vas-traffic-forwarding vas server-group *group-number* failure action

no vas-traffic-forwarding vas server-group *group-number* failure action

Syntax Description

group-number	The ID number of the VAS server group (0-7)
min-number	The minimum number of active servers required for the specified server group.
failure action	The action to be applied to all new flows mapped to this server group while it is in Failure state • **block** — all new flows assigned to the failed VAS server group will be blocked by the Cisco SCE platform • **pass** — all new flows assigned to the failed VAS server group will be considered as regular non-VAS flows, and will be processed without VAS service.

Command Default

Default failure minimum-active-servers min-number = 1

Default failure action = pass

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

To set both group parameters (failure detection and action) to the default values, use the **no** form of the command without specifying any parameter (see **VAS-traffic-forwarding VAS server-group.**)

Authorization: admin

Examples

The following examples illustrate how to set the failure parameters to specified values or to the default value.

Example 1

The following example shows how to configure the minimum number of active servers for VAS server group 5.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vas-traffic-forwarding vas server-group 5 failure
minimum-active-servers 3
SCE8000(config if)#
```

Example 2

The following example shows how to reset the minimum number of active servers for VAS server group 5 to the default value.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#default vas-traffic-forwarding vas server-group 5 failure
minimum-active-servers
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding vas server-id	Enables or disables a VAS server.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
vas-traffic-forwarding vas server-id health-check	Enables or disables the VAS health check, and defines the ports it should use.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

vas-traffic-forwarding vas server-id

Enables or disables a VAS server. Use the enable keyword to enable a new or existing VAS server. Use the disable keyword to disable an existing VAS server (server properties are not deleted). Use the **no** form or the default form of this command to delete all server properties from a specified VAS server.

vas-traffic-forwarding vas server-id *number* enable

vas-traffic-forwarding vas server-id *number* disable

no vas-traffic-forwarding vas server-id *number*

default vas-traffic-forwarding vas server-id *number*

Syntax Description

number	The ID number of the VAS server • SCE 8000: 0-63 • SCE 2000:0-7

Command Default

By default, a defined VAS server is enabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

The VAS server is not operational until the VLAN tag is defined (vas-traffic-forwarding server-id vlan).

Authorization: admin

Examples

The following examples illustrate how to create, enable, and disable a VAS server.

Example 1

The following example defines a VAS server, server ID number = 4, that is not yet operational.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# vas-traffic-forwarding vas server-id 4 enable
SCE8000(config if)#
```

Example 2

The following example disables the VAS server, but does not delete the server definition or the associated VLAN tag.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)# vas-traffic-forwarding vas server-id 4 disable
SCE8000(config if)#
```

Related Commands

Command	Description
vas-traffic-forwarding	Enables VAS traffic forwarding.
vas-traffic-forwarding server-id vlan	Defines the VLAN tag for the VAS servwe.
vas-traffic-forwarding vas traffic-link	Configures the link to which the VAS servers are connected.
vas-traffic-forwarding vas server-id health-check	Enables or disables the VAS health check, and defines the ports it should use.
vas-traffic-forwarding vas server-group	Adds servers to and removes them from a specified VAS server group.
vas-traffic-forwarding vas server-group failure	Configures the failure parameters for the specified VAS server group.
show interface linecard vas-traffic-forwarding	Displays information regarding VAS configuration and operational status summary.

virtual-links index direction

Adds a new virtual link. The command also optionally changes the PIR values for a specified Global Controller configured in the SCA BB application.

To remove a specified virtual link, use the **no** form of this command.

virtual-links index *vl-index* **direction** [**upstream | downstream**]

virtual-links index *vl-index* **direction** [**upstream | downstream**] **gc** *relative-gc-index* **set-pir value** *[']pir-value[, pir-value2, pir-value3, pir-value4]'*

virtual-links index *vl-index* **direction** [**upstream | downstream**] **gc** *relative-gc-index* **reset-pir**

no virtual-links index *vl-index* **direction** [**upstream | downstream**]

Syntax Description

vl-index	Index number assigned to the virtual link.
relative-gc-index	Index number of the Global Controller (GC) whose PIR values you want to change. This index must be the number of the desired GC template for the specified direction (upstream or downstream).
pir-value	PIR value to be assigned to the specified GC. You can specify either one PIR value, which will be used for all timeframes, or four PIR values, one for each timeframe. If you specify four values, separate the values with commas and enclose the entire string in single quotation marks. For example: 'w,x,y,z'
direction	Specifies the direction for this virtual link (**upstream** or **downstream**).

Command Default

None

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.5.0	This command was introduced.

Usage Guidelines

You can configure virtual links when the physical link that the Cisco SCE platform monitors is actually composed of multiple smaller links that you want to monitor and control separately. With virtual links, instead of creating hundreds or even thousands of separate packages with the specific bandwidth configuration for each small link, you can create a policy with a limited number of basic packages, each with a standard bandwidth configuration. Any specific bandwidth configuration can be adjusted for each virtual link by reconfiguring the relevant Global Controller.

Configuring virtual links consists of three steps in three different components of the Cisco Service Control application:

- Create and apply a virtual links policy with the Global Controllers template.

  The policy is managed and applied through the GUI or API.

- Create the virtual links and optionally set any specific bandwidth configuration in the Global Controllers.

  Virtual links are created and managed in the Cisco SCE through a set of CLI commands.

- Set the virtual link names in the CM.

  The virtual link names are set using a command line utility (CLU) in the CM. These names are used in the Virtual Links Reports.

Direction

Virtual links are directional. In the CLI commands, a virtual link is always identified by both the index number assigned to the virtual link and the direction (upstream or downstream).

Always use the **direction** keyword and specify **upstream** or **downstream**.

Global Controller (GC) Templates

The virtual links policy created in the SCA BB console specifies Global Controllers that will be used as bandwidth templates for the virtual links. When a new virtual link is created, it receives a set of the directional template VL Global Controllers with their PIR values as configured in the SCA BB console.

In some cases, you may want to modify the PIR values of a particular GC template for use with a particular virtual link:

- Use the **set-pir** keyword with the desired PIR value to change the PIR value of a specified GC associated with a specified virtual link.
- Use the **reset-pir** keyword with no PIR values to reset the PIR values of a specified GC to the original values, as configured through the console.

Global Controllers–Relative Index

To specify the GC, use the **gc** keyword and then indicate the relative GC index. This number is the relevant GC as found in the GC configuration for the specified direction.

GC numbering starts at 0 for the default BWC in each direction, so the third user-configured GC, for example, is number 3. In the GC configuration illustrated in Figure 2-3, the relative index for the P2P GC is 2 for upstream and 3 for downstream.

Note Each GC also has an absolute index. In Figure 2-3, six GCs are configured and each one is identified internally by a unique index. This absolute index is not needed to identify a particular GC in these commands.

Figure 2-3 Sample Configuration

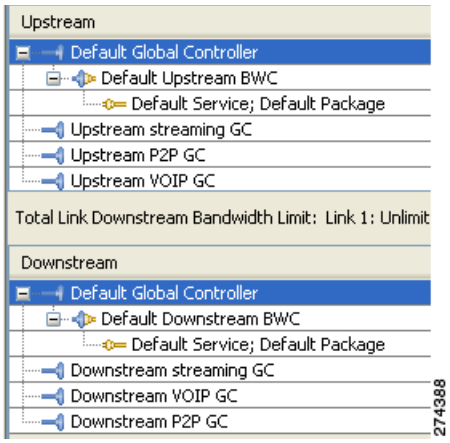

PIR Values

Either one or four PIR values are configured for each template GC. By default, the SCA BB calendar function contains four timeframes. You can configure a different PIR for each timeframe or only one PIR that will be applied to all timeframes.

Examples

The following example shows how to create a new virtual link for the downstream direction:

```
SCE8000>enable
password<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#virtual-links index 10 direction downstream
```

The following example shows how to change the PIR values for the template GC (the third one, which is number 2) for the specified virtual link. Be sure to use the proper index number from the correct direction for the GC.

Note that the four PIR values are separated by commas and enclosed in single quotation marks.

```
SCE8000>enable
password<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#virtual-links index 10 direction downstream gc 2 set-pir value
'10000,50000,50000,10000'
```

The following example shows how to remove a virtual link. Be sure to specify the direction.

```
SCE8000>enable
password<cisco>
SCE8000#configure
SCE8000(config)#interface linecard 0
SCE8000(config if)#no virtual-links index 10 direction downstream
```

Related CommandsE

Command	Description
show interface linecard virtual-links	Displays the currently configured virtual links.

vlan

Configures the VLAN environment. One VLAN tag is supported for each packet (no QinQ support).

To set the VLAN configuration to the default value, use the **default** form of this command.

vlan symmetric skip

vlan a-symmetric skip

vlan symmetric classify

default vlan

Syntax Description

See Usage Guidelines.

Command Default

The default mode is symmetric skip.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
2.5.7	This command was introduced.

Usage Guidelines

The VLAN modes act as follows:

- **vlan symmetric skip—I**gnores tunnel.
- **vlan a-symmetric skip—I**gnores tunnel, asymmetric.
- **vlan symmetric classify—**VLAN tag as subscriber.
- When the tunneling information is ignored, the subscriber identification is the subscriber IP of the IP packet carried inside the tunnel.

Use the **symmetric skip** form of the command to skip the VLAN header when flow classification does not use the VLAN tag. VLAN tags are symmetric.

Use the **a-symmetric skip** form of the command to skip the VLAN header when flow classification does not use the VLAN tag. VLAN tags are asymmetric. Note that this form of the command impacts performance.

Use the **symmetric classify** form of the command when flow classification uses the VLAN tag. VLAN tags are symmetric. Using VLAN classification is mutually exclusive with any other tunnel-based classification.

Note The Cisco SCE 8000 supports a maximum of 4096 VLAN tags.

Symmetric and Asymmetric Environments

In a symmetric environment, the same VLAN tags are used for carrying a transaction in the upstream and downstream directions.

In an asymmetric environment, the upstream and downstream VLAN tags of the same flow might not be the same.

The Cisco SCE platform is configured by default to work in symmetric environments. The **a-symmetric skip** command is needed to allow correct operation of the Cisco SCE platform in an asymmetric environment. The command instructs the platform to take into consideration that the upstream and downstream of each flow has potentially different VLAN tags.

Examples

The following example shows how to enable VLAN-based classification:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#vlan symmetric classify
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard vlan	Displays the VLAN tunnel configuration.

vty mng-vlan

Assigns the specified VLAN to Telnet services.

Use the **no** form of the command to the VLAN configuration for Telnet services.

vty mng-vlan *vlan-id*

no vty mng-vlan

Syntax Description

vlan-id	VLAN tag to be assigned to Telnet services (1-4094).

Command Default

None

Command Modes

Global configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.7.x	This command was introduced.

Usage Guidelines

You can create separate VLAN interfaces on the management interface in order to differentiate between various management services. There are two steps in this process:

1. Create the VLAN and assign the IP address (**mng-vlan** command).
2. Assign the VLAN to a management service.

Authorization: admin

Examples

The following example shows how to configure a VLAN for Telnet services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#mng-vlan 100 address 10.10.10.20 mask 255.255.255.0
SCE8000(config)#vty mng-vlan 100
SCE8000(config)#
```

The following example shows how to remove the VLAN for Telnet services.

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#no vty mng-vlan
SCE8000(config)#
```

Related Commands

Command	Description
show vty mng-vlan	Displays the VLAN configured for Telnet services, if configured.

wap

Enables or disables operating in a WAP-based environment.

To disable operating in a WAP-based environment, use the **no** form of this command.

wap

no wap

Syntax Description

vlan-id	VLAN tag to be assigned to Telnet services (1-4094).

This command has no arguments or keywords.

Command Default

Operating in a WAP environment is disabled.

Command Modes

Interface Linecard Configuration

Command History

This table includes the following release-specific history entries:

Release	Modification
3.0.0	This command was introduced.

Usage Guidelines

Authorization: admin

Examples

The following example shows how to enable operating in a WAP-based environment:

```
SCE8000>enable 10
Password:<cisco>
SCE8000#config
SCE8000(config)#interface linecard 0
SCE8000(config if)#wap
SCE8000(config if)#
```

Related Commands

Command	Description
show interface linecard wap	Displays the current WAP handling state.